### LINK: <u>CONTENT</u> & <u>A-Z</u>



The Ultimate Driving Machine®

M. SO 1926

# OWNER'S MANUAL. THE BMW M2 COMPETITION.

Online Edition for Part no. 01402722869 - VI/18



## WELCOME TO BMW.

### **Owner's Manual.**

## BMW M2 COMPETITION.

Thank you for choosing a BMW M2.

The more familiar you are with your vehicle, the better control you will have on the road. We therefore strongly suggest:

Read this Owner's Manual before starting off in your new BMW M2. Also use the Integrated Owner's Manual in your vehicle. It contains important information on vehicle operation that will help you make full use of the technical features available in your BMW M2. The manual also contains information designed to enhance operating reliability and road safety, and to contribute to maintaining the value of your BMW M2.

Any updates made after the editorial deadline can be found in the appendix of the printed Owner's Manual for the vehicle.

You can find supplementary information in the additional brochures in the onboard literature.

We wish you a safe and enjoyable ride.

## **TABLE OF CONTENTS**

## I NOTES

### **A QUICK REFERENCE**

Your BMW at a glance
----------------------

## **ATAGLANCE**

Cockpit	34
iDrive	38
Voice activation system	47
General settings	50
Owner's Manual media	62

## 

Opening and closing
Seats, mirrors, and steering wheel
Transporting children safely
Driving 100
Displays 117
Lights 131
Safety 136
Driving stability control systems 155
Driving comfort 161
Climate control 170
Interior equipment 179
Storage compartments 188

### (i) DRIVING TIPS

BMW M2 Technology	196
Things to remember when driving	197
Loading	201
Saving fuel	204

Navigation, Entertainment and Communication can be called up via the Integrated Owner's Manual in the vehicle.

### 🚘 MOBILITY

Refueling 2	208
Fuel 2	210
Wheels and tires 2	212
Engine compartment 2	227
Engine oil 2	230
Coolant 2	234
Maintenance 2	236
Replacing components 2	238
Breakdown assistance 2	244
Care 2	251

### **Q** REFERENCE

Technical data	258
Appendix	260
Everything from A to Z	262

© 2018 Bayerische Motoren Werke Aktiengesellschaft Munich, Germany Reprinting, including excerpts, only with the written consent of BMW AG, Munich. US English ID5 VI/18, 07 18 490 Printed on environmentally friendly paper, bleached without chlorine, suitable for recycling.



# ! NOTES

nformation .....

Online Edition for Parture, 01402722869 - VI/18

## Information

### **Using this Owner's Manual**

#### Orientation

The fastest way to find information on a particular topic is by using the index.

An initial overview of the vehicle is provided in the first chapter.

## Updates made after the editorial deadline

Due to updates after the editorial deadline, differences may exist between the printed Owner's Manual and the Integrated Owner's Manual in the vehicle.

Notes on updates can be found in the appendix of the printed Owner's Manual for the vehicle.

#### **Owner's Manual for Navigation, Entertainment, Communication**

The Owner's Manual for Navigation, Entertainment, and Communication can be obtained as printed book from the service center.

The topics are also discussed in the Integrated Owner's Manual in the vehicle.

# Additional sources of information

#### **Dealer's service center**

A dealer's service center will be glad to answer questions at any time.

#### Internet

The Owner's Manual and general information on BMW, for example on technology, are available on the Internet: www.bmwusa.com.

## Integrated Owner's Manual in the vehicle

The Integrated Owner's Manual specifically describes features and functions found in the vehicle. The Integrated Owner's Manual can be displayed on the Control Display. Additional information, refer to page 62.

#### **BMW Driver's Guide App**

The BMW Driver's Guide app specifically describes features and functions found in the vehicle. The app can be displayed on smartphones and tablets.

#### **BMW Driver's Guide Web**

Driver's Guide Web shows the most suitable information for the selected vehicle. If possible, only equipment and functions that are actually installed in the vehicle will be explained. Driver's Guide Web can be displayed in any current browser.

## Symbols and displays

#### Symbols in the Owner's Manual

Symbol	Meaning
	Precautions that must be followed in order to avoid the possibility of injury to yourself and to others as well as serious damage to the vehicle.
æ	Measures that can be taken to help protect the environment.
""	Texts in vehicle used to select individual functions.

Symbol	Meaning
><	Verbal instructions to use with the voice activation system.
»«	Responses generated by the voice activation system.

#### **Action steps**

Action steps to be carried out are presented as numbered list. The steps must be carried out in the defined order.

- 1. First action step.
- 2. Second action step.

#### Enumerations

Enumerations without mandatory order or alternative possibilities are presented as list with bullet points.

- ▷ First possibility.
- Second possibility.

#### Symbols on vehicle components

[]] This symbol on a vehicle component indicates that further information on the component is available in the Owner's Manual.

# Vehicle features and options

This Owner's Manual describes all models and all standard, country-specific and optional equipment that is offered in the model series. Therefore, this Owner's Manual also describes and illustrates features and functions that are not available in a vehicle, for example because of the selected optional features or the country-specific version.

This also applies to safety-related functions and systems.

When using these functions and systems, the applicable laws and regulations must be observed.

For any options and equipment not described in this Owner's Manual, refer to the Supplementary Owner's Manuals.

Your dealer's service center is happy to answer any questions that you may have about the features and options applicable to your vehicle.

# Status of the Owner's Manual

### **Basic information**

The manufacturer of your vehicle pursues a policy of constant development that is conceived to ensure that our vehicles continue to embody the highest quality and safety standards. In rare cases, therefore, the features described in this Owner's Manual may differ from those in your vehicle.

## Updates made after the editorial deadline

Due to updates after the editorial deadline, differences may exist between the printed Owner's Manual and the Integrated Owner's Manual in the vehicle.

Notes on updates can be found in the appendix of the printed Owner's Manual for the vehicle.

## For Your Own Safety

#### **Intended use**

Follow the following when using the vehicle:

- Owner's Manual.
- Information on the vehicle. Do not remove stickers.
- Technical vehicle data.

- The traffic, speed, and safety laws where the vehicle is driven.
- Vehicle documents and statutory documents.

#### Warranty

Your vehicle is technically configured for the operating conditions and registration requirements applying in the country of first delivery, also known as homologation. If your vehicle is to be operated in a different country it might be necessary to adapt your vehicle to potentially differing operating conditions and registration requirements. If your vehicle does not comply with the homologation requirements in a certain country you may not be able to lodge warranty claims for your vehicle there. Further information on warranty is available from a dealer's service center.

#### **Maintenance and repairs**

#### 🛆 WARNING

Improperly performed work on the vehicle paint can lead to a failure or malfunction of the radar sensors and thereby result in a safety risk. There is a risk of accidents or risk of damage to property. Have paintwork or paintwork repairs on bumpers of vehicles with radar sensors performed by a dealer's service center or another qualified service center or repair shop only.

Advanced technology, e. g. the use of modern materials and high-performance electronics, requires suitable maintenance and repair work.

The manufacturer of the vehicle recommends that you entrust corresponding procedures to a BMW dealer's service center. If you choose to use another service facility, BMW recommends use of a facility that performs work, for instance maintenance and repair, according to BMW specifications with properly trained personnel, referred to in this Owner's Manual as "another qualified service center or repair shop". If work is performed improperly, for instance maintenance and repair, there is a risk of subsequent damage and related safety risks.

#### Parts and accessories

BMW recommends the use of parts and accessory products approved by BMW.

Approved parts and accessories, and advice on their use and installation are available from a BMW dealer's service center.

BMW parts and accessories have been tested by BMW for their safety and suitability in BMW vehicles.

BMW warrants genuine BMW parts and accessories.

BMW does not evaluate whether each individual product from another manufacturer can be used with BMW vehicles without presenting a safety hazard, even if a country-specific official approval was issued. BMW does not evaluate whether these products are suitable for BMW vehicles under all usage conditions.

#### California Proposition 65 Warning

California law requires vehicle manufacturers provide the following warning:

#### 🛆 WARNING

Engine exhaust and a wide variety of Automobile components and parts, including components found in the interior furnishings in a vehicle, contain or emit chemicals known to the State of California to cause cancer and birth defects and reproductive harm. In addition, certain fluids contained in vehicles and certain products of component wear contain or emit chemicals known to the State of California to cause cancer and birth defects or other reproductive harm. Battery posts, terminals and related accessories contain lead and lead compounds. Batteries also contain other chemicals known to the State of California to cause cancer. Wash your hands after handling. Used engine oil contains chemicals that have caused cancer in laboratory animals. Always protect your skin by washing thoroughly with soap and water. For more information go to www.P65Warnings.ca.gov/passenger-vehicle.

#### 🛆 WARNING

Operating, servicing and maintaining a passenger vehicle or off-highway motor vehicle can expose you to chemicals including engine exhaust, carbon monoxide, phthalates, and lead, which are known to the State of California to cause cancer and birth defects or other reproductive harm. To minimize exposure, avoid breathing exhaust, do not idle the engine except as necessary, service your vehicle in a well-ventilated area and wear gloves or wash your hands frequently when servicing your vehicle. For more information go to www.P65Warnings.ca.gov/passenger-vehicle.

#### Service and warranty

We recommend that you read this publication thoroughly. Your vehicle is covered by the following warranties:

- ▷ New Vehicle Limited Warranty.
- Rust Perforation Limited Warranty.
- Federal Emissions System Defect Warranty.
- ▷ Federal Emissions Performance Warranty.
- California Emission Control System Limited Warranty.

Detailed information about these warranties is listed in the Service and Warranty Information Booklet for US models or in the Warranty and Service Guide Booklet for Canadian models.

Your vehicle has been specifically adapted and designed to meet the particular operating conditions and homologation requirements in your country and continental region in order to deliver the full driving pleasure while the vehicle is operated under those conditions. If you wish to operate your vehicle in another country or region, you may be required to adapt your vehicle to meet different prevailing operating conditions and homologation requirements. You should also be aware of any applicable warranty limitations or exclusions for such country or region. In such case, please contact Customer Relations for further information.

#### Maintenance

Maintain the vehicle regularly to sustain the road safety, operational reliability and the New Vehicle Limited Warranty.

Specifications for required maintenance measures:

- ▶ BMW Maintenance system.
- Service and Warranty Information Booklet for US models.
- Warranty and Service Guide Booklet for Canadian models.

If the vehicle is not maintained according to these specifications, this could result in serious damage to the vehicle. Such damage is not covered by the BMW New Vehicle Limited Warranty.

### **Data memory**

#### **General information**

Electronic control devices are installed in the vehicle. Electronic control units process data they receive from vehicle sensors, self-generate or exchange with each other. Some control units are necessary for the vehicle to function safely or provide assistance during driving, for instance driver assistance systems. Furthermore, control devices facilitate comfort or infotainment functions.

Information about stored or exchanged data can be requested from the manufacturer of the vehicle, in a separate booklet, for example.

#### **Personal reference**

Each vehicle is marked with a unique vehicle identification number. Depending on the country, the vehicle owner can be identified with the vehicle identification number, license plate and corresponding authorities. In addition, there are other options to track data collected in the vehicle to the driver or vehicle owner, e.g. via the ConnectedDrive account that is used.

#### **Operating data in the vehicle**

Control units process data to operate the vehicle. For example, this includes:

- Status messages for the vehicle and its individual components, e.g., wheel rotational speed, wheel speed, deceleration, transverse acceleration, engaged safety belt indicator.
- Ambient conditions, e.g., temperature, rain sensor signals.

The processed data is only processed in the vehicle itself and generally volatile. The data is not stored beyond the operating period.

Electronic components, e.g. control units and ignition keys, contain components for storing technical information. Information about the vehicle condition, component usage, maintenance requirements or faults can be stored temporarily or permanently.

This information generally records the state of a component, a module, a system, or the environment, for instance:

- Operating states of system components, e.g., fill levels, tire inflation pressure, battery status.
- Malfunctions and faults in important system components, for instance lights and brakes.
- Responses by the vehicle to special situations such as airbag deployment or engagement of the driving stability control systems.
- Information on vehicle-damaging events.

The data is required to perform the control device functions. Furthermore, it also serves to recognize and correct malfunctions, and helps the vehicle manufacturer to optimize vehicle functions.

The majority of this data is transient and is only processed within the vehicle itself. Only a small share of the data is stored event-related in event or fault memories.

When servicing, for instance during repairs, service processes, warranty cases, and quality assurance measures, this technical information can be read out from the vehicle together with the vehicle identification number.

A dealer's service center or another qualified service center or repair shop can read out the information. The socket for OBD Onboard Diagnosis required by law in the vehicle is used to read out the data.

The data is collected, processed, and used by the relevant organizations in the service network. The data documents technical conditions of the vehicle, helps with the identification of the fault, compliance with warranty obligations and quality improvement.

Furthermore, the manufacturer has product monitoring duties to meet in line with product liability law. To fulfill these duties, the vehicle manufacturer needs technical data from the vehicle. The data from the vehicle can also be used to check customer claims for warranty and guaranty.

Fault and event memories in the vehicle can be reset when a dealer's service center or another qualified service center or repair shop performs repair or servicing work.

## Data entry and data transfer into the vehicle

#### **General information**

Depending on the vehicle equipment, comfort and individual settings can be stored in the vehicle and modified or reset at any time.

For example, this includes:

- Settings for the seat and steering wheel positions.
- Suspension and climate control settings.

If necessary, data can be transferred to the entertainment and communication system of the vehicle, e.g. via smartphone.

This includes the following depending on the respective equipment:

- Multimedia data such as music, films or photos for playback in an integrated multimedia system.
- Address book data for use in conjunction with an integrated hands-free system or an integrated navigation system.
- Entered navigation destinations.
- Data on the use of Internet services.

This data can be stored locally in the vehicle or is found on a device that has been connected to the vehicle, e.g., a smartphone, USB stick or MP3 player. If this data is stored in the vehicle, it can be deleted at any time.

This data is only transmitted to third parties upon personal request as part of the use of online services. This depends on the selected settings for the use of the services.

#### Incorporation of mobile end devices

Depending on the vehicle equipment, mobile devices connected to the vehicle, for instance smartphones, can be controlled via the vehicle control elements.

The sound and picture from the mobile device can be played back and displayed through the multimedia system. Certain information is transferred to the mobile device at the same time. Depending on the type of incorporation, this includes, for instance position data and other general vehicle information. This optimizes the way in which selected apps, for instance navigation or music playback, work.

There is no further interaction between the mobile device and the vehicle, for instance active access to vehicle data. How the data will be processed further is determined by the provider of the particular app being used. The extent of the possible settings depends on the respective app and the operating system of the mobile device.

#### Services

#### **General information**

If the vehicle has a wireless network connection, this enables data to be exchanged between the vehicle and other systems. The wireless network connection is realized via an in-vehicle transmitter and receiver unit or via personal mobile devices brought into the vehicle, for instance smartphones. This wireless network connection enables 'online functions' to be used. These include online services and apps supplied by the vehicle manufacturer or by other providers.

#### Services from the vehicle manufacturer

Where online services from the vehicle manufacturer are concerned, the corresponding functions are described in the appropriate place, for instance the Owner's Manual or manufacturer's website. The relevant legal information pertaining to data protection is provided there too. Personal data may be used to perform online services. Data is exchanged over a secure connection, for instance with the IT systems of the vehicle manufacturer intended for this purpose.

Any collection, processing, and use of personal data above and beyond that needed to provide the services must always be based on a legal permission, contractual arrangement or consent. It is also possible to activate or deactivate the data connection as a whole. That is, with the exception of functions and services required by law such as Assist systems.

#### **Services from other providers**

When using online services from other providers, these services are the responsibility of the relevant provider and subject to their data privacy conditions and terms of use. The vehicle manufacturer has no influence on the content exchanged during this process. Information on the way in which personal data is collected and used in relation to services from third parties, the scope of such data, and its purpose, can be obtained from the relevant service provider.

### **Event Data Recorder EDR**

This vehicle is equipped with an event data recorder EDR. The main purpose of an EDR is to record, in certain crash or near crash-like situations, such as an air bag deployment or hitting a road obstacle, data that will assist in understanding how a vehicle's systems performed. The EDR is designed to record data related to vehicle dynamics and safety systems for a short period of time, typically 30 seconds or less.

The EDR in this vehicle is designed to record such data as:

- How various systems in your vehicle were operating.
- Whether or not the driver and passenger safety belts were fastened.
- ▷ How far, if at all, the driver was depressing the accelerator and/or brake pedal.
- How fast the vehicle was traveling.

This data can help provide a better understanding of the circumstances in which crashes and injuries occur.

EDR data is recorded by your vehicle only if a nontrivial crash situation occurs; no data is recorded by the EDR under normal driving conditions and no personal data, for instance name, gender, age, and crash location, are recorded.

However, other parties, such as law enforcement, could combine the EDR data with the type of personally identifying data routinely acquired during a crash investigation.

To read data recorded by an EDR, special equipment is required, and access to the vehicle or the EDR is needed. In addition to the vehicle manufacturer, other parties, such as law enforcement, that have the special equipment, can read the information if they have access to the vehicle or the EDR.


# Vehicle identification number

#### **Engine compartment**



The vehicle identification number can be found in the engine compartment, on the right-hand side of the vehicle.

#### Type label

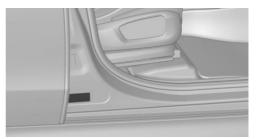

The vehicle identification number can be found on the type label, on the right-hand side of the vehicle.

#### Windshield



The vehicle identification number can also be found behind the windshield.

## **Reporting safety defects**

#### For US customers

The following only applies to vehicles owned and operated in the US.

If you believe that your vehicle has a defect which could cause a crash or could cause injury or death, you should immediately inform the National Highway Traffic Safety Administration NHTSA, in addition to notifying BMW of North America, LLC, P.O. Box 1227, Westwood, New Jersey 07675-1227, Telephone 1-800-831-1117.

If NHTSA receives similar complaints, it may open an investigation, and if it finds that a safety defect exists in a group of vehicles, it may order a recall and remedy campaign.

However, NHTSA cannot become involved in individual problems between you, your dealer, or BMW of North America, LLC.

To contact NHTSA, you may call the Vehicle Safety Hotline toll-free at 1-888-327-4236 (TTY: 1-800-424-9153); go to http://www.safercar.gov; or write to: Administrator, NHTSA, 400 Seventh Street, SW., Washington, DC 20590. You can also obtain other information about motor vehicle safety from http://www.safercar.gov.

#### For Canadian customers

Canadian customers who wish to report a safetyrelated defect to Transport Canada, Defect Investigations and Recalls, may call the toll-free hotline 1-800-333-0510. You can also obtain other information about motor vehicle safety from http://www.tc.gc.ca/roadsafety.




## **\* QUICK REFERENCE**

Your BMW at a glance ...... 18

## Your BMW at a glance

## **Opening and closing**

#### **Buttons on the remote control**

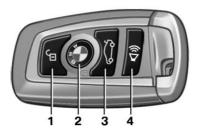

- 1 Unlocking
- 2 Locking
- 3 Unlocking the tailgate
- 4 Panic mode

### Unlocking the vehicle



Press button on the remote control.

Depending on the settings, either only the driver's door or all vehicle access points are unlocked.

If only the driver's door is unlocked, press the button of the remote control again to unlock the other vehicle access points.



Press and hold this button on the remote control after unlocking.

The windows and the glass sunroof are opened, as long as the button on the remote control is pressed.

### Locking the vehicle



Press button on the remote control.

All vehicle access points are locked.

#### **Button for central locking system**

#### **Overview**

6		- - - - - - - - - - - - - - - - - - -	

Button for the central locking system.

#### **Unlocking and locking**

Pressing the central locking system button locks or unlocks the vehicle with the doors closed.

- ▷ The fuel filler flap remains unlocked.
- The vehicle is not secured against theft when locking.

#### Panic mode

You can trigger the alarm system if you find yourself in a dangerous situation.



Press button on the remote control for at least 3 seconds.

To switch off the alarm: press any button.

#### **Comfort Access**


#### Concept

The vehicle can be accessed without activating the remote control.

All you need to do is to have the remote control with you, such as in your pants pocket.


The vehicle automatically detects the remote control when it is in close proximity or in the car's interior.

#### **Unlocking the vehicle**

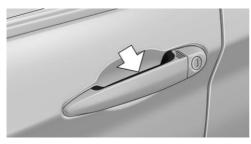


Grasp the door handle on the driver's or front passenger door completely.

#### Locking the vehicle

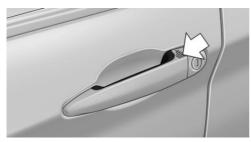

Touch the surface on the door handle of the driver's or front passenger door with your finger for approx. 1 second without grasping the door handle.

#### **Unlocking the tailgate**

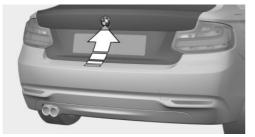

- Unlock the vehicle and press the button on the tailgate.
- If carrying the remote control, press the button on the tailgate.

Press button on the remote control for approx. 1 second.

Depending on the setting, the doors may also be unlocked.


# Seats, mirrors, and steering wheel

#### Manually adjustable seats



- 1 Forward/backward
- 2 Thigh support
- 3 Seat tilt
- 4 Backrest width
- 5 Lumbar support
- 6 Height
- 7 Backrest tilt

#### **Electrically adjustable seats**

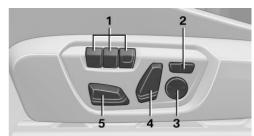


- 1 Memory function
- 2 Backrest width
- 3 Lumbar support

- 4 Backrest tilt
- 5 Forward/backward, height, seat tilt

### Adjusting the head restraint

#### Height

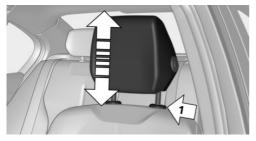

- ▶ To raise: push the head restraint up.
- To lower: press button, arrow 1, and push head restraint down.


#### Adjusting the exterior mirrors



- 1 Settings
- 2 Selecting a mirror, Automatic Curb Monitor
- 3 Folding in and out

#### Adjusting the steering wheel

#### Manual steering wheel adjustment

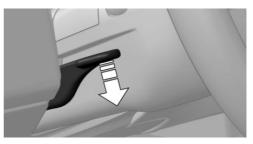

- 1. Fold the lever down.
- 2. Adjust the height and reach of the steering wheel.
- 3. Fold the lever back up.

#### **Memory function**

#### Concept

The following settings can be stored and, if necessary, retrieved using the memory function:

- ▷ Seat position.
- ▶ Exterior mirror position.

#### Storing

- 1. Switch on the ignition.
- 2. Set the desired position.
- 3. SET Press button. The LED in the button lights up.
- 4. Press selected button 1 or 2 while the LED is lit. The LED goes out.

#### **Calling up settings**

The stored position is called up automatically.

Press selected button 1 or 2.

The procedure stops when a switch for setting the seat or one of the memory buttons is pressed.

While driving, the seat position adjustment on the driver's side is interrupted after a short time.

#### **Entering the rear**

#### Manual forward/back adjustment

1. Pull lever up to the stop.



- 2. Fold backrest forward.
- 3. Push the seat forward.

## Manual forward/back adjustment: original position

- 1. Push the seat back into the original position.
- 2. Fold back the backrest to lock the seat.

#### **Electric forward/back adjustment**

1. Pull lever up to the stop.



- 2. Fold backrest forward.
- 3. To change the entry area:
  - Press and hold this button until the seat has moved to the desired position. Releasing the button stops window/ roof movement.
  - Press the button briefly. The seat automatically moves to the end position. Pressing again stops the motion.

## Electric forward/back adjustment: original position

- 1. Moving the seat to its original position:
  - Press and hold this button until the seat has returned to its original position. Releasing the button stops window/ roof movement.
  - Press the button briefly. The seat moves to its original position. Pressing again stops the motion.
- 2. Fold the backrest back.

# Displays and control elements

## In the vicinity of the steering wheel



- 1 Light switch element
- 2 High beams, headlight flasher, turn signal
- 3 Instrument cluster
- 4 Start/Stop button
- 5 Washer/wiper system

#### Indicator/warning lights

#### Instrument cluster

The indicator/warning lights can light up in a variety of combinations and colors.


Several of the lights are checked for proper functioning and light up temporarily when the engine is started or the ignition is switched on.

#### **Driver's door**



- 1 Power windows
- 2 Exterior mirrors

#### Switch console

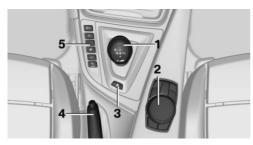

- 1 Selector lever
- 2 Controller
- 3 Drivelogic
- 4 Parking brake
- 5 ▷ Driving dynamics systems
  - Parking assistance systems

#### iDrive

#### Concept

The iDrive combines the functions of many switches. These functions can be operated via the Controller and, depending on the equipment version, the touchscreen.

#### Controller

#### **General information**

The buttons can be used to open the menus directly. The Controller can be used to select menu items and enter the settings.

#### **Buttons on the Controller**

Button	Function
MENU	Press once: call up main menu.
	Press twice: display all menu items of the main menu.
СОМ	Open the Communication menu.
MEDIA	Open the Media/Radio menu.
NAV	Open destination input menu for navigation.
мар	Open navigation map.
BACK	Press once: open the previous display.
	Press and hold: open the menus used last.
OPTION	Open the Options menu.

#### Voice activation

#### Using the voice activation system

#### Activating the voice activation system

- 1. Press the button on the steering wheel.
- 2. Wait for the signal.
- 3. Say the command.



The symbol on the Control Display indicates that voice activation system is active.

If no other commands are possible, operate the function via iDrive.

#### Terminating the voice activation system



Press the button on the steering wheel or >Cancelk.

#### Help on the voice activation system

- To have information on the operating principle of the voice activation system read out loud: >General information on voice controk.
- ▷ To have help for the current menu read out loud: Help.

#### **Information on Emergency Requests**

Do not use the voice activation system to initiate an Emergency Request. In stressful situations, the voice and vocal pitch can change. This can unnecessarily delay the establishment of a phone connection.

Instead, use the SOS button close to the interior mirror.

### Driving

#### Starting and stopping the engine

#### **Ignition on/off**



 On: press the Start/Stop button.

Most of the indicator/warning lights light up for a varied length of time.

- Off: press the Start/Stop button again.
  All indicator lights go out.
- Radio-ready state: when the ignition is switched off, press the ON/OFF button on

the radio or when the engine is running, press the Start/Stop button.

Some electronic systems/power consumers remain ready for operation.

#### Starting/stopping the engine

#### M double-clutch transmission: starting

- 1. Depress the brake pedal.
- 2. Press the Start/Stop button.

#### Manual transmission: starting

- 1. Depress the brake pedal.
- 2. Press on the clutch pedal and shift to neutral.
- 3. Press the Start/Stop button.

#### M double-clutch transmission: switching off

- 1. Depress the brake pedal.
- 2. Press the Start/Stop button.
- 3. Set the parking brake, if needed.

#### Manual transmission: switching off

- 1. With the vehicle at a standstill, press the Start/Stop button.
- 2. Shift into first gear or reverse.
- 3. Set the parking brake.

#### Auto Start/Stop function

Manual transmission: switches the engine off automatically while stationary to save fuel. As soon as the clutch pedal is depressed, the engine starts automatically.

M double-clutch transmission: switches the engine off automatically while stationary to save fuel. The engine starts automatically when the brake pedal is released.

#### **Parking brake**

#### Applying

The lever automatically engages after being pulled up.

#### Releasing



Raise lever slightly, press the button and guide the lever down.

#### **Manual transmission**

#### Shifting

When shifting to a lower gear, excessive speeds can damage the engine. There is a risk of damage to property. When shifting into 5th or 6th gear, press the gearshift lever to the right.

#### **Reverse gear**

Select only when the vehicle is stationary.

To overcome the resistance push the gearshift lever dynamically to the left and engage reverse gear with a forward shifting movement.

#### M double-clutch transmission

#### **Engaging selector lever positions**

Press on the brake pedal and pull or push the selector lever in the corresponding direction.



- R: reverse gear.
- ▷ N: neutral.
- ▷ ♦ Center position, forward position.
- ► +: manual upshifting.
- -: manual downshifting.
- D/S: switch between drive mode and sequential mode.

#### **D** is Drive mode

In Drive mode, all forward gears are automatically changed.

#### S is Sequential mode

Use the shift paddles or the selector lever to upshift or downshift without letting off the gas.

#### **Reverse R**

Select only when the vehicle is stationary.

#### N is Neutral

Use in automatic vehicle washes, for instance. The vehicle can then roll.

#### P Park

The drive wheels are blocked.

P is engaged automatically:

- After the engine is switched off, if the vehicle is in radio-ready state or if the ignition is switched off and if position R or D is set.
- ▶ With the ignition is off, if position N is set.

#### High beams, headlight flasher, turn signal, roadside parking light

#### High beams, headlight flasher




Push the lever forward or pull it backward.

▶ High beams on, arrow 1.

The high beams light up when the low beams are switched on.


▶ High beams off/headlight flasher, arrow 2.

#### **Turn signal**

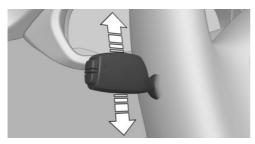

- On: press the lever past the resistance point.
- Off: press the lever past the resistance point in the opposite direction.
- ▷ Triple turn signal activation: lightly tap the lever up or down.
- Brief signaling: press the lever to the resistance point and hold it there for as long as you want the turn signal to flash.

#### Canada: roadside parking light

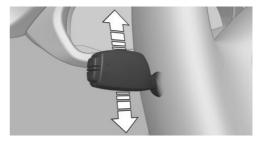

Illuminate the vehicle on one side.

- On: with the ignition switched off, press the lever either up or down past the resistance point.
- Off: press the lever back into the standard position.

### Lights and lighting

#### **Light functions**

Symbol	Function
≣CA	Automatic headlight control. Adaptive light functions.
0	Lights off. Daytime running lights.
EDDE	Parking lights.
≣D	Low beams.
E j	Instrument lighting.

#### Washer/wiper system

## Switching the wipers on/off and brief wipe

#### Switching on



Press the lever up until the desired position is reached.

- Resting position of the wipers: position 0.
- Rain sensor: position 1.
- ▷ Normal wiper speed: position 2.
- ▶ Fast wiper speed: position 3.

#### Brief wipe and switching off



Press the lever down.

- Switching off: press the lever down until it reaches its standard position.
- Brief wipe: press the lever down from the standard position.

#### **Rain sensor**


#### Activating/deactivating



To activate: press the lever up once from its standard position, arrow 1.

To deactivate: press the lever back into the standard position.

#### Set interval or sensitivity of the rain sensor

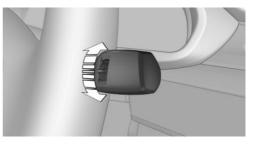

Turn the thumbwheel on the wiper lever.

## Cleaning the windshield and headlights




Pull the lever.

## **Climate control**

### Automatic climate control

Button	Function
64 64 64 64 64 64 64 64 64 64 64 64 64 6	Temperature.
A/C	Air conditioning.
AUTO	AUTO program.
<u></u>	Recirculated-air mode
SFF SF	Air flow, manual.
	Air distribution, manual.
[]	Rear window defroster.
##J	Seat heating.

## Automatic climate control with enhanced features

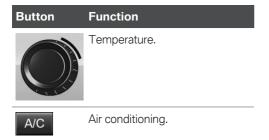


Button	Function
MAX A/C	Maximum cooling.
AUTO	AUTO program.
A CO	Recirculated-air mode/AUC.
SFF SS	Air flow, manual.
<b>ق</b> ري	Air distribution, manual.
¥#/	Defrost and defog window.
(III)	Rear window defroster.
##J	Seat heating.

## Infotainment

#### Radio

#### **Control elements**



- **1** Changing the entertainment source
- 2 Sound output on/off, volume
- 3 Programmable memory buttons
- 4 Change station/track
- 5 Eject CD/DVD

- 6 CD/DVD drive
- 7 Change waveband

#### **Navigation destination entry**

#### **Entering a destination via address**

#### State/province

- 1. "Navigation"
- 2. 🚠 "Enter address"
- 3. "State/Province?"
- 4. Move the Controller to the right to select the state from the list.

#### **Entering the address**

The address can be entered in any order. Example: entering the address via the town/city

- 1. "City/Postal code?"
- Enter the town/city.
  The list is narrowed down further with each entry.
- 3. OK Select the symbol.
- 4. Select a town/city from the list.
- 5. If necessary, enter the street.
- 6. Select the street as you would the town/city.
- 7. If necessary, enter a house number.
- 8. OK Select the symbol.
- 9. Select a house number or range of house numbers from the list.

#### **Starting destination guidance**

"Start guidance"

If only the town/city was entered: destination guidance is started to the town/city center.

#### **Connecting a mobile phone**

After the mobile phone is connected once to the vehicle, the mobile phone can be operated using

iDrive, the steering wheel buttons and spoken instructions.

- 1. "My Vehicle"
- 2. "iDrive settings"
- 3. "Mobile devices"
- 4. "Connect new device"
- 5. Select the functions for which the mobile phone is to be used.

The Bluetooth name of the vehicle is displayed on the Control Display.

6. To perform additional steps on the mobile phone, refer to the mobile phone owner's manual: e.g., search for or connect the Bluetooth device or a new device.

The Bluetooth name of the vehicle appears on the mobile phone display. Select the Bluetooth name of the vehicle.

- Depending on the mobile device, a control number is displayed or the control number must be entered.
  - Compare the control number displayed on the Control Display with the control number on the display of the device.

Confirm the control number on the device and on the Control Display.

Enter and confirm the same control number on the device and via iDrive.

The device is connected and displayed in the device list.

The mobile phone is connected and will appear at the top of the list of mobile phones.

#### Using the phone

#### Accepting a call

Incoming call can be accepted via iDrive or the button on the steering wheel.

#### Via iDrive

🔊 "Accept"

#### Via the button on the steering wheel



Press button.

#### Via the instrument cluster

Use the thumbwheel on the steering wheel to select: "Accept"

#### **Dialing a number**

- 1. "Communication"
- 2. "Dial number"
- 3. Enter the numbers.
- Select the symbol. The connection is established via the mobile phone to which this function has been assigned.

If connection is to be set up via the additional phone:

1. Press button.

2. "Call via"

### Apple CarPlay preparation

#### Concept

CarPlay allows certain functions of a compatible Apple iPhone to be used via Siri voice operation and iDrive.

#### **Functional requirements**

Compatible iPhone.

iPhone 5 or later with iOS 7.1 or later.

- Corresponding mobile wireless contract.
- Bluetooth, WiFi, and Siri voice operation are switched on on the iPhone.

#### Switching on Bluetooth and CarPlay

Via iDrive:

- 1. "My Vehicle"
- 2. "iDrive settings"
- 3. "Mobile devices"

- 4. "Settings"
- 5. Select the following settings:
  - ▷ "Bluetooth®"
  - "Apple CarPlay"

#### Pairing iPhone with CarPlay

Pair iPhone via Bluetooth with the vehicle.

Select CarPlay as the function:

● "Apple CarPlay"

The iPhone is connected to the vehicle and displayed in the device list.

## Refueling

### Refueling

#### Fuel cap

1. Press the rear edge of the fuel filler flap to open it.



- 2. Turn the fuel cap counterclockwise.
- 3. Place the fuel cap in the bracket attached to the fuel filler flap.

#### Gasoline

For the best fuel efficiency, the gasoline should be sulfur-free or very low in sulfur content.

Refuel only with unleaded gasoline without metallic additives.

Information on the recommended fuel grade can be found in the Owner's Manual.

#### Wheels and tires

#### **Tire inflation pressure specifications**



The tire inflation pressure values can be found on the sign on the door pillar.

## After correcting the tire inflation pressure

Reinitialize the Flat Tire Monitor.

Reset the Tire Pressure Monitor.

#### Checking the tire inflation pressure

Regularly check the tire inflation pressure and correct it as needed:

- ▷ At least twice a month.
- ▷ Before embarking on an extended trip.

#### **Electronic oil measurement**

#### Requirements

Depending on the previous displays, the status display appears when the engine is running or after the vehicle has been driven for at least 30 minutes.

#### Displaying the engine oil level

On the Control Display:

- 1. "My Vehicle"
- 2. "Vehicle status"
- 3. Y "Engine oil level"

Different messages appear on the display depending on the engine oil level. Pay attention to these messages.

#### Adding engine oil

#### **General information**

Switch off the ignition and safely park the vehicle before engine oil is added.

#### Adding



Only add engine oil when the message is displayed in the instrument cluster.

Observe the quantity to be added in the message.

Take care not to add too much engine oil. Observe recommended engine oil types.

## **Providing assistance**

#### Hazard warning flashers



The button is located in the center console.

#### **Breakdown assistance**

#### **BMW Roadside Assistance**

Via iDrive:

- 1. "ConnectedDrive"
- 2. "BMW Assist"
- 3. "BMW Roadside Assistance"

A voice connection is established to BMW Roadside Assistance.

#### ConnectedDrive

#### **Concierge service**

The BMW Assist Concierge service offers information on events, gas stations or hotels, and provides phone numbers and addresses. Many hotels can be booked directly by the BMW Concierge service. The Concierge service is part of the optional BMW Assist Response Center.

- 1. "ConnectedDrive"
- 2. "Concierge"

#### **Teleservices**

Teleservices are services that help to maintain vehicle mobility.

Depending on the equipment version, Teleservices comprise the following services:

- Roadside Assistance.
- Service Request.
- Automatic Service Request.
- Teleservice Report.
- ▷ Teleservice Battery Guard.
- > Your dealer's service center.



## **III AT A GLANCE**


Cockpit	34
iDrive	38
Voice activation system	47
General settings	50
Owner's Manual media	62

## Cockpit

# Vehicle features and options

This chapter describes all standard, country-specific and optional features offered with the series. It also describes features that are not necessarily available in your vehicle, e. g., due to the selected options or country versions. This also applies to safety-related functions and systems. When using these functions and systems, the applicable laws and regulations must be observed.

## In the vicinity of the steering wheel

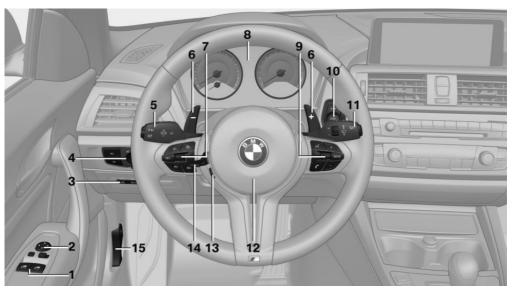

- 1 Power windows 80
- 2 Exterior mirror operation 92
- **3** Glove compartment on the driver's side 189 Driver assistance systems



Intelligent Safety 144



Lane departure warning 151

4 Lights



Light switch 131

ר ו



Lights off Daytime running lights 133



Parking lights 131



Low beams 131



Automatic headlight control 132 Adaptive light functions 133 High-beam Assistant 133 Instrument lighting 134



5 Steering column stalk, left



Turn signal 105



High beams, headlight flasher 105



High-beam Assistant 133



Roadside parking lights 131



Onboard Computer 127

- 6 M double-clutch transmission: shift paddles 111
- 7 Steering wheel buttons, left



M Drive 1 activation 155



M Drive 2 activation 155



Cruise control on/off, interrupt 161



Cruise control: store speed



Cruise control: resume speed

Cruise control rocker switch

- 8 Instrument cluster 117
- 9 Steering wheel buttons, right



Entertainment source, see Owner's Manual for Navigation, Entertainment and Communication 8



Volume, see Owner's Manual for Navigation, Entertainment and Communication 8



Voice activation 47



Telephone, see Owner's Manual for Navigation, Entertainment and Communication 8

Thumbwheel for selection lists 126

10 START STOP ENGINE

Start/stop the engine and switch the ignition on/off 101



Auto Start/Stop function 102

11 Steering column stalk, right



Wipers 106



Rain sensor 107



Clean the windshield and head-lights 108



Horn, entire surface




Heated steering wheel 94

14 Adjust the steering wheel 94

15 Unlock hood 228

## In the vicinity of the center console

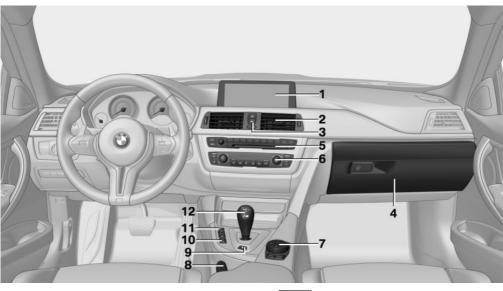

- 1 Control Display 38
- 2 Glove compartment 188
- 3 Ventilation 176



4

Hazard warning system 244



Central locking system 70

- 5 Radio/CD/multimedia, see Owner's Manual for Navigation, Entertainment and Communication 8
- 6 Climate control 170
- 7 Controller with buttons 38
- 8 Parking brake 105



Drivelogic 114



PDC Park Distance Control 163 Rearview camera 166

11

DSC Dynamic Stability Control 157



Engine Dynamics 116




Servotronic 159

12 M double-clutch transmission, selector lever 111

Manual transmission, selector lever 110

Cockpit

### All about the roofliner

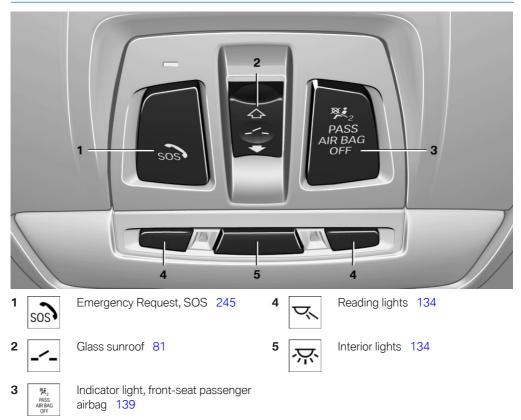

## **iDrive**

# Vehicle features and options

This chapter describes all standard, country-specific and optional features offered with the series. It also describes features that are not necessarily available in your vehicle, e. g., due to the selected options or country versions. This also applies to safety-related functions and systems. When using these functions and systems, the applicable laws and regulations must be observed.

## Concept

The iDrive combines the functions of many switches. These functions can be operated via the Controller and, depending on the equipment version, the touchscreen.

## **Safety information**

#### \land WARNING

Operating the integrated information systems and communication devices while driving can distract from traffic. It is possible to lose control of the vehicle. There is a risk of an accident. Only use the systems or devices when the traffic situation allows. As warranted, stop and use the systems and devices while the vehicle is stationary.

### Input and display

#### Letters and numbers

Depending on the menu, you can switch between entering upper and lower case, letters and numbers.

Symbol	Function
abc or ABC	Change between capital and lower-case letters.
Ц	Insert blank space.
Ų	Use voice activation.
ОК	Confirm entry.

#### **Entry comparison**

When entering names and addresses, the choice is narrowed down with every letter entered and letters may be added automatically.

Entries are continuously compared with data stored in the vehicle.

- Only those letters are offered during entry for which data is available.
- Destination search: place names can be entered in all languages that are available in iDrive.

## Activating/deactivating the functions

Several menu items are preceded by a checkbox. The checkbox indicates whether the function is activated or deactivated. Selecting the menu item activates or deactivates the function.

Function is activated.

Function is deactivated.

#### **Status information**

#### **General information**

The status field can be found in the upper area of the Control Display. Status information is displayed in the form of symbols.

#### **Radio symbols**

Symbol	Meaning
Ю	HD Radio station is being received.
sxm	Satellite radio is switched on.

#### **Telephone symbols**

Symbol	Meaning
D	Incoming or outgoing call.
S.	Missed call.
atl	Signal strength of cellular network.
	Network search.
atl	Cellular network is not available.
 In:	The critical charge state of the mo- bile phone has been reached.
<b>f</b> ul	Roaming is active.
Q	SMS text message received.
$\geq$	Message received.
Ū	Reminder.
13	Sending not possible.
9	Contacts are loaded.

#### **Entertainment symbols**

Symbol	Meaning
0	CD/DVD player.
e	Music hard disk.

Symbol	Meaning
€n	Bluetooth audio.
Ŷ	USB audio interface.
(f)	Online Entertainment.
Ű,	WiFi.

#### **Other symbols**

Symbol	Meaning
$\underline{\wedge}$	Check Control message.
<b>以</b>	The sound output has been switched off.
13	Encrypted connection not active.
0	Request for the current vehicle position.
0	Checking the current vehicle position.

#### Split screen, split screen display

#### **General information**

Additional information can be displayed in several menus on the right side of the split screen display, the so-called split screen, for instance information from the Onboard Computer.

The additional information remains visible even when switching to another menu on the split screen.

#### Switching on/off



- Press the button.
- 2. "Split screen"

#### Selecting the display

The display can be selected in menus, where the split screen is supported.

- 1. Move the Controller to the right until the split screen is selected.
- 2. Press the Controller.
- 3. Select the desired setting.

#### Specifying the number of displays

It is possible to specify the number of displays.

- 1. Move the Controller to the right until the split screen is selected.
- 2. Press the Controller.
- 3. "Personalize menu"
- 4. Select the desired setting.
- 5. Move the Controller to the left.

## **Control elements**

#### **Overview**



- 1 Control Display, with touchscreen depending on the equipment version
- 2 Controller with buttons and, depending on the equipment version, with touchpad

### **Control Display**

#### **General information**

To clean the Control Display, follow the care instructions, refer to page 254. In the case of very high temperatures on the Control Display, for instance due to intense solar radiation, the brightness may be reduced down to complete deactivation. Once the temperature is reduced, for instance through shade or air conditioning, the normal functions are restored.

#### **Safety information**

### 

Objects in the area in the front of the Control Display can shift and damage the Control Display. There is a risk of damage to property. Do not place objects in the area in front of the Control Display.

#### Switching on/off automatically

The Control Display is switched on automatically after unlocking.

In certain situations, the Control Display is switched off automatically, for instance if no operation is performed on the vehicle for several minutes.

#### Switching on/off manually

The Control Display can also be switched off manually.



Press button.

2. "Turn off control display"

Press the Controller or any button on the Controller to switch it back on again.

## Controller with navigation system

#### **General information**

The buttons can be used to open the menus directly. The Controller can be used to select menu items and enter the settings.


Some iDrive functions can be operated using the touchpad on the Controller, refer to page 45.

#### Operation

⊳ Turn.



Press.

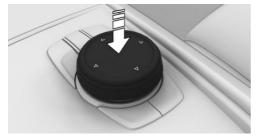

▹ Move in four directions.



#### **Buttons on the Controller**

Button	Function
MENU	Press once: call up main menu.
	Press twice: display all menu items of the main menu.
СОМ	Open the Communication menu.
MEDIA	Open the Media/Radio menu.

Button	Function
NAV	Open destination input menu for navigation.
МАР	Open navigation map.
BACK	Press once: open the previous display.
	Press and hold: open the menus used last.
OPTION	Open the Options menu.


## Controller without navigation system

#### **General information**

The buttons can be used to open the menus directly. The Controller can be used to select menu items and enter the settings.

#### Operation


▶ Turn.

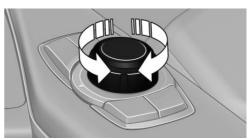

Press.



Move in two directions.

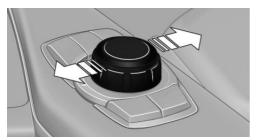

#### **Buttons on the Controller**

Button	Function
MENU	Press once: call up main menu.
	Press twice: display all menu items of the main menu.
сом	Open the Communication menu.
MEDIA	Open the Media/Radio menu.
BACK	Press once: open the previous display.
	Press and hold: open the menus used last.
OPTION	Open the Options menu.

### Operating with the Controller

#### **Opening the main menu**

Press button.



The main menu is displayed.

All iDrive functions can be called up via the main menu.


#### Adapting the main menu

- Press the button twice.
  All menu items of the main menu are displayed.
- 2. Select a menu item.
- 3. To move the menu item to the desired position, tilt the Controller to the right or left.

#### **Selecting menu items**

Highlighted menu items can be selected.

1. Turn the Controller until the desired menu item is highlighted.

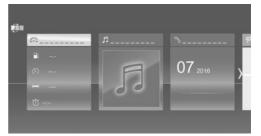

2. Press the Controller.

#### **Changing between displays**

After a menu item is selected, for instance "iDrive settings", a new display appears.

▷ Move the Controller to the left.

Closes the current display and shows the previous display.



Press the button.

The previous display opens.

Move the Controller to the right. New display is opened.

An arrow indicates that additional displays can be opened.

#### **Opening recently used menus**

The recently used menus can be displayed.



Press and hold this button.

The recently used menus are displayed.

#### **Opening the Options menu**



Press button.

The "Options" menu is displayed.

The Options menu consists of various areas:

- ▷ Screen settings, for instance "Split screen".
- Control options for the selected main menu, for instance for "Media/Radio".
- If applicable, further operating options for the selected menu, for instance "Save station".

#### **Changing settings**

Settings, such as brightness, can be entered. Via iDrive:

- 1. "My Vehicle"
- 2. "iDrive settings"
- 3. "Displays"
- 4. "Control display"
- 5. "Brightness"
- 6. Turn the Controller until the desired setting is displayed.
- 7. Press the Controller.

#### **Entering letters and numbers**

#### Input

- 1. Turn the Controller: select letters or numbers.
- 2. OK : confirm entry.

#### Deleting

Symbol	Function
--------	----------

I←	Press the Controller: delete letters or number.
I←	Hold the Controller down: delete all letters or numbers.

#### **Using alphabetical lists**

For alphabetical lists with more than 30 entries, the letters for which there is an entry are displayed at the left edge.

- Turn the Controller to the left or right quickly. All letters for which there are entries are displayed on the left edge.
- Select the first letter of the desired entry. The first entry of the selected letter is displayed.

## **Operating via touchscreen**

#### **General information**

The Control Display is equipped with a touchscreen.

Touch screen with your fingers. Do not use any objects.

#### **Opening the main menu**

☆ Tap on symbol.



The main menu is displayed.

All iDrive functions can be called up via the main menu.

#### Adapting the main menu

1. 🗰 Tap on symbol.

All menu items of the main menu are displayed.

2. Drag the menu item to the desired position on the right or left.

#### **Selecting menu items**

Tap desired menu item.



### **Changing between displays**

After a menu item is selected, a new display opens.

An arrow indicates that additional displays can be opened.

- Swipe to the left.
- ▷ Tap arrow.

New display is opened.

#### **Changing settings**

Settings such as brightness can be changed via the touchscreen.

Via iDrive:

- 1. "My Vehicle"
- 2. "iDrive settings"
- 3. "Displays"
- 4. "Control display"
- 5. "Brightness"
- 6. To create the desired setting:
  - Slide in the selected field to the right or left, until the desired setting is displayed.
  - ▶ , + Tap on symbol.

#### **Entering letters and numbers**

#### Input

- Touch the symbol on the touchscreen. A keyboard is displayed in the Control Display.
- 2. Enter letters and numbers.

#### Deleting

Symbol	Function
I←	Tapping the symbol: delete the letter or number.
I←	Tapping and holding the symbol for an extended period: delete all letters or numbers.

#### **Operating navigation map**

The navigation map can be moved with the touchscreen.

Function	Operation
Enlarge/shrink	Drag in or out with the fin-
map.	gers.

### Touchpad

#### **General information**

Some iDrive functions can be operated using the touchpad on the Controller.

#### **Selecting functions**

- 1. "My Vehicle"
- 2. "iDrive settings"
- 3. "Touchpad"
- 4. Select desired setting:
  - ▷ "Speller": Enter letters and numbers.
  - "Map": using the map.
  - "Search fields": Write letters without selecting the list field.
  - "Audio feedback": pronounces entered letters and numbers.

#### **Entering letters and numbers**

Entering letters requires some practice at the beginning. When entering, pay attention to the following:

- The system distinguishes between upper and lower-case letters and numbers. To make entries, it may be necessary to change between upper and lower-case letters, numbers and characters, refer to page 43.
- Enter characters as they are displayed on the Control Display.
- Always enter associated characters, such as accents or periods so that the letter can be clearly recognized. The set language determines what input is possible. Where necessary, enter special characters via the Controller.

#### **Entering special characters**

Input	Operation
Delete a charac- ter.	Swipe to the left on the touchpad.
Enter a blank space.	Swipe to the right in the center of the touchpad.
Enter a hyphen.	Swipe to the right in the upper area of the touchpad.
Enter an under- score.	Swipe to the right in the lower area of the touchpad.

#### Using the map

The map in the navigation system can be moved via the touchpad.

Function	Operation
Move map.	Swipe in the appropriate di- rection.
Enlarge/shrink map.	Drag in or out on the touch- pad with fingers.
Display menu.	Tap once.

# Programmable memory buttons

#### **General information**

The iDrive functions can be stored on the programmable memory buttons and called up directly, for instance radio stations, navigation destinations, phone numbers and menu entries.

Settings are stored for the driver profile currently used.

#### **Storing a function**

- 1. Select function via iDrive.
- 2. **1**...**8** Press and hold the desired button until a signal sounds.

#### **Running a function**



Press button.

The function will work immediately. This means, for instance that the number is dialed when a phone number is selected.

### Displaying the key assignment

Touch buttons with finger. Do not wear gloves or use objects.

The button assignment is displayed at the top edge of screen.

#### **Deleting the button assignments**

- 1. Press buttons 1 and 8 simultaneously for approx. 5 seconds.
- 2. "OK"

## Voice activation system

# Vehicle features and options

This chapter describes all standard, country-specific and optional features offered with the series. It also describes features that are not necessarily available in your vehicle, e. g., due to the selected options or country versions. This also applies to safety-related functions and systems. When using these functions and systems, the applicable laws and regulations must be observed.

### Concept

Most functions displayed on the Control Display can be operated by voice commands via the voice activation system. The system supports you with announcements during input.

### **General information**

- Functions that can only be used when the vehicle is stationary can only be operated via the voice activation system to a limited extent.
- ▷ The system uses a special microphone on the driver's side.
- >.... in the Owner's Manual denotes verbal instructions to use with the voice activation system.
- Say the commands, numbers, and letters smoothly and with normal volume, emphasis, and speed.
- Always say commands in the language of the voice activation system.

### Requirements

Via the Control Display, set a language that is also supported by the voice activation system so that the spoken commands can be identified.

To set the language, refer to page 50.

# Using the voice activation system

## Activating the voice activation system

- 1. **In Example 2** Press the button on the steering wheel.
- 2. Wait for the signal.
- 3. Say the command.



The symbol on the Control Display indicates that voice activation system is active.

No other commands may be available. In this case, operate the function via iDrive.

## Terminating the voice activation system



Press the button on the steering wheel or >Cancel<.

## Using a smartphone via voice activation

A smartphone connected to the vehicle can be used via voice activation.

Activate voice command response on the smartphone for this purpose.

1. Press and hold the total button on the steering wheel for approx. 3 seconds.

Voice command response is activated on the smartphone.

2. Release the



If activation is successful, a confirmation appears on the Control Display.

If it was not possible to activate voice command response, the list of Bluetooth devices appears on the Control Display.

### **Possible commands**

#### **General information**

Most menu items on the Control Display can be voiced as commands.

Commands from other menus can also be spoken.

You may select list entries such as phone list entries via voice activation. Read these list entries out loud exactly as they are shown in the respective list.

#### **Displaying possible commands**

The following is displayed in the top area of the Control Display:

- Some possible commands for the current menu.
- Some possible commands from other menus.
- Status of the voice recognition.
- A Encrypted connection is not available.

## Help on the voice activation system

- To have information on the operating principle of the voice activation system read out loud: >General information on voice control«.
- ▷ To have help for the current menu read out loud: >Help<.</p>

# Example: opening the tone settings

The commands of the menu items are spoken just as they are selected via the Controller.

- 1. Switch on the Entertainment sound output, if needed.
- 2. Press button on the steering wheel.
- 3. Media and radio
- 4. Tone«

## Settings

#### Setting the voice dialog

You can set the system to use standard dialog or a short version.

The short version of the voice dialog plays back short messages in abbreviated form.

Via iDrive:

- 1. "My Vehicle"
- 2. "iDrive settings"
- 3. "Language"
- 4. "Speech mode:"
- 5. Select the desired setting.

## Activating voice recognition via the server

The voice recognition feature via the server provides a dictation function and a natural method of entering destinations while improving the quality of voice recognition. To use the functions, data is transmitted to a service provider and locally stored there.

Via iDrive:

- 1. "My Vehicle"
- 2. "iDrive settings"
- 3. "Language"
- 4. "Server speech recognition"

#### Speaking during voice output

It is possible to answer during inquiries of the voice activation system. The function can be deactivated if inquiries are often undesirably interrupted, for instance due to background noise or talking.

Via iDrive:

- 1. "My Vehicle"
- 2. "iDrive settings"
- 3. "Language"
- 4. "Speaking during voice output"

### Setting the language

The language to be used for voice activation and system announcements can be set.

Via iDrive:

- 1. "My Vehicle"
- 2. "iDrive settings"
- 3. "Language"
- 4. "Language:"
- 5. Select the desired language.

## Adjusting the volume

Turn the volume button during the spoken instructions until the desired volume is set.

- The volume remains constant even if the volume of other audio sources is changed.
- The volume is stored for the driver profile currently used.

### Information for Emergency Requests

Do not use the voice activation system to initiate an Emergency Request. In stressful situations, the voice and vocal pitch can change. This can unnecessarily delay the establishment of a phone connection.

Instead, use the SOS button, refer to page 245, close to the interior mirror.

### **Environmental conditions**

- Keep the doors, windows, and glass sunroof closed to prevent noise interference.
- Avoid making other noise in the vehicle while speaking.

## **General settings**

# Vehicle features and options

This chapter describes all standard, country-specific and optional features offered with the series. It also describes features that are not necessarily available in your vehicle, e. g., due to the selected options or country versions. This also applies to safety-related functions and systems. When using these functions and systems, the applicable laws and regulations must be observed.

### Language

#### Setting the language

Via iDrive:

- 1. "My Vehicle"
- 2. "iDrive settings"
- 3. "Language"
- 4. "Language:"
- 5. Select the desired setting.

The setting is stored for the driver profile currently used.

#### Setting the voice dialog

Voice dialog for the voice activation system, refer to page 48.

### Time

#### Setting the time zone

Via iDrive:

- 1. "My Vehicle"
- 2. "iDrive settings"
- 3. "Date and time"

- 4. "Time zone:"
- 5. Select the desired setting.

The setting is stored for the driver profile currently used.

#### Setting the time

Via iDrive:

- 1. "My Vehicle"
- 2. "iDrive settings"
- 3. "Date and time"
- 4. "Time:"
- 5. Turn the Controller until the desired hours are displayed.
- 6. Press the Controller.
- 7. Turn the Controller until the desired minutes are displayed.
- 8. Press the Controller.

#### Setting the time format

Via iDrive:

- 1. "My Vehicle"
- 2. "iDrive settings"
- 3. "Date and time"
- 4. "Time format:"
- 5. Select the desired setting.

The setting is stored for the driver profile currently used.

#### Automatic time setting

Depending on your vehicle's optional features, the time, date and, if needed, the time zone are updated automatically.

Via iDrive:

- 1. "My Vehicle"
- 2. "iDrive settings"

- 3. "Date and time"
- 4. "Automatic time setting"

The setting is stored for the driver profile currently used.

### Date

#### Setting the date

Via iDrive:

- 1. "My Vehicle"
- 2. "iDrive settings"
- 3. "Date and time"
- 4. "Date:"
- 5. Turn the Controller until the desired day is displayed.
- 6. Press the Controller.
- 7. Make the settings for the month and year.

#### Setting the date format

Via iDrive:

- 1. "My Vehicle"
- 2. "iDrive settings"
- 3. "Date and time"
- 4. "Date format:"
- 5. Select the desired setting.

The setting is stored for the driver profile currently used.

# Setting the units of measurement

You can set the units of measurement for some values, for example, fuel consumption, distances and temperature.

Via iDrive:

- 1. "My Vehicle"
- 2. "iDrive settings"

- 3. "Units"
- 4. Select the desired menu item.
- 5. Select the desired setting.

The setting is stored for the driver profile currently used.

# Activating/deactivating the display of the current vehicle position

#### Concept

If vehicle location has been activated, the current vehicle position can be displayed in the BMW Connected app or in the ConnectedDrive customer portal.

#### Activating/deactivating

Via iDrive:

- 1. "My Vehicle"
- 2. "Vehicle settings"
- 3. "Vehicle tracking"
- 4. "Vehicle tracking"

# Activating/deactivating popup windows

For some functions, popup windows are displayed automatically on the Control Display. Some of these popup windows can be activated or deactivated.

Via iDrive:

- 1. "My Vehicle"
- 2. "iDrive settings"
- 3. "Pop-ups"
- 4. Select the desired setting.

The setting is stored for the driver profile currently used.

## **Control Display**

#### **Brightness**

Via iDrive:

- 1. "My Vehicle"
- 2. "iDrive settings"
- 3. "Displays"
- 4. "Control display"
- 5. "Brightness"
- Turn the Controller until the desired brightness is set.
- 7. Press the Controller.

The setting is stored for the driver profile currently used.

Depending on the light conditions, the brightness settings may not be clearly visible.

#### Screensaver

If no settings are made via iDrive, a screensaver will be displayed after an adjustable time.

Via iDrive:

- 1. "My Vehicle"
- 2. "iDrive settings"
- 3. "Displays"
- 4. "Control display"
- 5. "Screensaver"
- 6. Select the desired setting.

The setting is stored for the driver profile currently used.

## Selecting the contents of the main menu

For some menu items of the main menu, the displayed contents can be selected.

1. Press button.

2. "Contents of main menu"

3. Select the desired menu and the desired content.

The setting is stored for the driver profile currently used.

### Messages

#### Concept

The menu centrally displays all messages arriving in the vehicle in list form.

#### **General information**

The following messages can be displayed:

- ▶ Traffic messages.
- Check Control messages.
- Communication messages, for example emails, SMS text messages or reminders.
- Service requirements messages.

Messages are additionally displayed in the status field.

#### **Retrieving messages**

Via iDrive:

- 1. "Notifications"
- 2. Select the desired message.

The respective menu is opened, where the message is displayed.

#### **Deleting messages**

All messages, except Check Control messages, can be deleted from the list. Check Control messages are displayed as long as they are relevant. Via iDrive:

- 1. "Notifications"
- 2. Select the desired message.



- Press button.
- 4. "Delete this notification" or "Delete all notifications"

#### **Settings**

The following settings can be adjusted:

- Select the applications, from which messages will be permitted.
- Sort the messages according to date or priority.

Via iDrive:

- 1. "My Vehicle"
- 2. "iDrive settings"
- 3. "Notifications"
- 4. Select the desired setting.

### **Data protection**

#### Data transfer

#### Concept

The vehicle offers different functions, whose use requires a data transfer to BMW or a service provider. The data transfer can be deactivated for some functions.

#### **General information**

With data transfer deactivated, the respective function cannot be used.

Only make these settings while stationary.

## Activating/deactivating the data transfer

Follow the instructions on the Control Display. Via iDrive:

- 1. Switch on the ignition.
- 2. "My Vehicle"
- 3. "iDrive settings"
- 4. "Data privacy"
- 5. Select the desired setting.

## Deleting personal data in the vehicle

#### Concept

Depending on the usage, the vehicle stores personal data, such as stored radio stations. This personal data can be permanently deleted using iDrive.

#### **General information**

Depending on the equipment package, the following data can be deleted:

- Driver profile settings.
- Stored radio stations.
- Stored programmable memory buttons.
- ▶ Travel and Onboard Computer information.
- Music collection.
- ▷ Navigation, for instance stored destinations.
- Phone book.
- ▷ Online data, for instance Favorites, cookies.
- Office data, for instance voice notes.
- ▷ Login accounts.

Altogether, the deletion of the data can take up to 15 minutes.

#### **Functional requirement**

Data can only be deleted while stationary.

#### **Deleting data**

Heed and follow the instructions on the Control Display.

Via iDrive:

- 1. Switch on the ignition.
- 2. "My Vehicle"
- 3. "iDrive settings"
- 4. "Data privacy"
- 5. "Delete personal data"
- 6. "Delete personal data"

7. "OK"

8. Exit and lock the vehicle.

After 15 minutes, the deletion process is completed.

If not all of the data was deleted, repeat the deletion.

#### **Canceling deletion**

Start the engine to cancel deletion of the data.

## Connections

#### Concept

Various connection types are available for using mobile devices in the vehicle. The connection type to select depends on the mobile device and the desired function.

#### **General information**

The following overview shows possible functions and the suitable connection types for them. The scope of functions depends on the mobile device.

Function	Connec- tion type
Making calls via the hands-free system.	Bluetooth.
Using phone functions via iDrive.	

Using the smartphone Office functions.

Playing music from the smart-	Bluetooth or
phone or the audio player.	USB.
Using compatible apps via iDrive.	Bluetooth or USB.

Function	Connec- tion type
USB storage device:	USB.
Exporting and importing driver profiles.	
Performing software updates.	
Exporting and importing stored trips.	
Playing music.	
Playing videos from the smart- phone or the USB storage de- vice.	USB.
Using the vehicle Internet access.	Internet hot- spot.
Use Apple Carplay apps via iDrive and voice operation.	Bluetooth and WiFi.

The following connection types require one-time pairing with the vehicle:

- Bluetooth.
- Internet hotspot.
- ▶ Apple CarPlay.

Paired devices are automatically recognized later on and connected to the vehicle.

#### **Safety information**

#### 🛆 WARNING

Operating the integrated information systems and communication devices while driving can distract from traffic. It is possible to lose control of the vehicle. There is a risk of an accident. Only use the systems or devices when the traffic situation allows. As warranted, stop and use the systems and devices while the vehicle is stationary.

#### **Compatible devices**

#### **General information**

Information on mobile devices compatible with the vehicle can be found at www.bmwusa.com/ bluetooth.

Malfunctions may occur with devices not listed or deviating software versions.

## Displaying the vehicle identification number and software part number

When looking for compatible devices, you may have to state the vehicle identification number and the software part number. These numbers can be displayed in the vehicle.

Via iDrive:

- 1. "My Vehicle"
- 2. "iDrive settings"
- 3. "Mobile devices"
- 4. "Settings"
- 5. "Bluetooth® info"
- 6. "System information"

A software update, refer to page 60, can be performed, if needed.

#### **Bluetooth connection**

#### **Functional requirements**

- Compatible device, refer to page 55, with Bluetooth interface.
- > The remote control is in the vehicle.
- ▷ The device is ready for operation.
- Bluetooth is activated on the device and in the vehicle, refer to page 55.
- Bluetooth pre-settings, such as visibility, may be required on the device; refer to the owner's manual of the device.

#### **Switching on Bluetooth**

Via iDrive:

- 1. "My Vehicle"
- 2. "iDrive settings"
- 3. "Mobile devices"
- 4. "Settings"
- 5. "Bluetooth®"

## Activating/deactivating telephone functions

To use all supported functions of a mobile phone, the following functions must be activated prior to pairing.

Via iDrive:

- 1. "My Vehicle"
- 2. "iDrive settings"
- 3. "Mobile devices"
- 4. "Settings"
- 5. Select desired setting:
  - ▷ "Office"

Activate function to transmit short messages, e-mails, calendars, tasks, notes, and reminders to the vehicle. Costs can be incurred by transmitting all data to the vehicle.

"Contact images"

Activate function to show the contact pictures.

6. Move the Controller to the left.

## Pairing the mobile device with the vehicle

Via iDrive:

- 1. "My Vehicle"
- 2. "iDrive settings"
- 3. "Mobile devices"
- 4. "Connect new device"
- 5. Select the functions for which the device will be used:

- "Telephone"
- II "Bluetooth® audio"
- ▶ 🗌 "Apps"
- ▷ (● "Apple CarPlay")

The Bluetooth name of the vehicle is displayed on the Control Display.

6. Search for Bluetooth devices in the vicinity of the mobile device.

The Bluetooth name of the vehicle appears on the mobile device display.

Select the Bluetooth name of the vehicle.

- Depending on the mobile device, a control number is displayed or the control number must be entered.
  - Compare the control number displayed on the Control Display with the control number on the display of the device.

Confirm the control number on the device and on the Control Display.

▷ Enter and confirm the same control number on the device and via iDrive.

The device is connected and displayed in the device list, refer to page 59.

If connection was not successful: Frequently Asked Questions, refer to page <u>56</u>.

#### **Frequently asked questions**

All requirements are met and all required steps were completed in the specified order. Despite that, the mobile device does not function as expected.

In this case, the following explanations can help:

Why could the mobile phone not be paired or connected?

▷ There are too many Bluetooth devices connected to the mobile phone or vehicle.

In the vehicle, delete Bluetooth connections with other devices.

Delete all known Bluetooth connections from the device list on the mobile phone and start a new device search.  The mobile phone is in power-save mode or has only a limited remaining battery life.
 Charge mobile phone.

Why does the mobile phone no longer react?

The applications on the mobile phone do not function anymore.

Switch the mobile phone off and on again.

Too high or too low ambient temperatures for mobile phone operation.

Do not subject the mobile phone to extreme ambient temperatures.

Why can phone functions not be used via iDrive?

The mobile phone may not be properly configured, for instance as Bluetooth audio device.

Connect the mobile phone with the telephone or additional phone function.

Why are no or not all phone book entries displayed or why are they incomplete?

- Transmission of the phone book entries is not yet complete.
- It is possible that only the phone book entries of the mobile phone or the SIM card are transmitted.
- It may not be possible to display phone book entries with special characters.
- It may not be possible to transmit contacts from social networks.
- The number of phone book entries to be stored is too high.
- Data volume of the contact too large, for instance due to stored information such as notes.

Reduce the data volume of the contact.

A mobile phone can only be connected as audio source or as telephone.

Configure the mobile phone and connect it with the telephone or additional phone function.

How can the phone connection quality be improved?

- The strength of the Bluetooth signal on the mobile phone can be adjusted, depending on the mobile phone.
- Insert the mobile phone into the snap-in adapter or place it in the area of the center console.
- Insert mobile phone into the wireless charging tray.
- Adjust the volume of the microphone and loudspeakers separately.

If all points in this list have been checked and the required function is still not available, contact the hotline, a dealer's service center or another qualified service center or repair shop.

#### **USB** connection

#### **General information**

Mobile devices with a USB port are connected to the USB interface.

Mobile phones.

The snap-in adapter features a separate USB port that is automatically connected when a compatible mobile phone is inserted.

- Audio devices with USB port, for instance MP3 player.
- USB storage devices.

Common file systems are supported. FAT32 and exFAT are the recommended formats.

The following applications are possible:

- Exporting and importing driver profiles, refer to page 74.
- Playing music files via USB audio.
- Playing videos via USB video.
- Loading of software updates, refer to page 60.

Follow the following when connecting:

- Do not use force when plugging the connector into the USB interface.
- ▷ Use a flexible adapter cable.

- Protect the USB storage device against mechanical damage.
- Due to the large number of USB media available on the market, it cannot be guaranteed that every device is operable on the vehicle.
- Do not expose USB media to extreme environmental conditions, such as very high temperatures; refer to the owner's manual of the device.
- Due to the many different compression techniques, proper playback of the media stored on the USB storage device cannot be guaranteed in all cases.
- A connected USB storage device will be supplied with charging current via the USB interface if the device supports this.
- To ensure proper transmission of the stored data, do not charge a USB storage device via the onboard socket, when it is connected to the USB interface.
- Depending on how the USB storage device is being used, settings may be required on the USB storage device, refer to the owner's manual of the device.

Not compatible USB media:

- USB hard drives.
- ▶ USB hubs.
- USB memory card readers with multiple inserts.
- HFS-formatted USB media.
- Devices such as fans or lamps.

#### **Functional requirement**

Compatible device, refer to page 55, with USB interface.

#### **Connecting the device**

Connect the USB storage device using a suitable adapter cable to a USB interface, refer to page 185.

The USB storage device is displayed in the device list, refer to page 59.

#### **Internet connection**

#### **General information**

Up to 8 devices can be connected with the Internet hotspot.

#### **Functional requirements**

- Compatible device, refer to page 55, with WiFi interface.
- ConnectedDrive contract.
- > Data contract with a service provider.
- ▷ WiFi activated on the device.
- Internet hotspot activated in the vehicle.
- ▷ The ignition is switched on.

#### Activating the Internet hotspot

Via iDrive:

- 1. "My Vehicle"
- 2. "iDrive settings"
- 3. "Mobile devices"
- 4. "Settings"
- 5. "Internet hotspot"

## Connecting device with Internet hotspot

Via iDrive:

- 1. "My Vehicle"
- 2. "iDrive settings"
- 3. "Mobile devices"
- 4. "Connect new device"
- 5. 🔶 "Internet hotspot"

Hotspot name and hotspot code are displayed on the Control Display.

- 6. Search for WiFi networks on the device. Select network name on the device.
- 7. Enter hotspot code on the device and connect.

With the first Internet usage via the Internet hotspot, data volume must be purchased from a service provider.

All devices connected via the Internet hotspot use this data volume.

If necessary, data volume can be purchased from the ConnectedDrive Store.

#### **Settings**

The network name and hotspot code can be changed. In addition, the network name can be hidden so that it cannot be found by other devices.

Via iDrive:

- 1. "My Vehicle"
- 2. "iDrive settings"
- 3. "Mobile devices"
- 4. Press button.
- ▷ "Change hotspot key" Enter the desired hotspot code.
  - "Change hotspot name"
    Enter the desired network name.
  - "Hide hotspot"

Activate or deactivate the function.

Confirm the entry of the hotspot code or network name:

OK Select the symbol.

#### Apple CarPlay preparation

#### Concept

CarPlay allows certain functions of a compatible Apple iPhone to be used via Siri voice operation and iDrive.

#### **Functional requirements**

- Compatible iPhone, refer to page 55.
  iPhone 5 or later with iOS 7.1 or later.
- ▷ Corresponding mobile wireless contract.

 Bluetooth, WiFi, and Siri voice operation are switched on on the iPhone.

#### Switching on Bluetooth and CarPlay

Via iDrive:

- 1. "My Vehicle"
- 2. "iDrive settings"
- 3. "Mobile devices"
- 4. "Settings"
- 5. Select the following settings:
  - ▶ "Bluetooth®"
  - "Apple CarPlay"

#### Pairing iPhone with CarPlay

Pair iPhone via Bluetooth with the vehicle, refer to page 55.

Select CarPlay as the function:

● "Apple CarPlay"

The iPhone is connected to the vehicle and displayed in the device list, refer to page 59.

#### Operation

For more information, refer to the Integrated Owner's Manual in the vehicle or the printed Owner's Manual for navigation, entertainment, communication.

#### **Frequently asked questions**

All requirements are met and all required steps were completed in the specified order. Despite that, the mobile device does not function as expected.

In this case, the following explanations can help:

The iPhone has already been paired with Apple CarPlay. When a new connection is established, CarPlay can no longer be selected.

- Delete the iPhone concerned from the device list.
- On the iPhone, delete the vehicle concerned from the list of stored vehicles under Bluetooth and under WiFi.

▶ Pair the iPhone as a new device.

If the steps listed have been carried out and the required function is still not available: contact the hotline, a dealer's service center or another qualified service center or repair shop.

#### Managing mobile devices

#### **General information**

- After one-time pairing, the devices are automatically recognized and reconnected when the ignition is switched on.
- The data stored on the SIM card or in the mobile phone are transferred to the vehicle after recognition.
- For some devices, certain settings may be necessary, for instance authorization, see owner's manual of the device.

#### **Displaying the device list**

All devices paired or connected with the vehicle are displayed in the device list.

Via iDrive:

- 1. "My Vehicle"
- 2. "iDrive settings"
- 3. "Mobile devices"

A symbol indicates, for which function a device is used.

Symbol	Function
D	"Telephone"
2°	"Additional telephone"
F	"Bluetooth® audio"
	"Apps"
((:-	"Internet hotspot"
E	"Apple CarPlay"

#### **Configuring the device**

Functions can be activated or deactivated for paired and connected devices. Via iDrive:

- 1. "My Vehicle"
- 2. "iDrive settings"
- 3. "Mobile devices"
- 4. Select the desired device.
- 5. Select the desired setting.

If a function is assigned to a device, the function will be deactivated where appropriate for a device that is already connected and the device will be disconnected.

#### **Disconnecting the device**

The connection of the device to the vehicle is disconnected.

The device remains paired and can be connected again, refer to page 60.

Via iDrive:

- 1. "My Vehicle"
- 2. "iDrive settings"
- 3. "Mobile devices"
- 4. Select device.
- 5. "Disconnect device"

#### **Connecting the device**

A disconnected device can be reconnected. Via iDrive:

- 1. "My Vehicle"
- 2. "iDrive settings"
- 3. "Mobile devices"
- 4. Select device.
- 5. "Connect device"

The functions that were assigned to the device before disconnecting are assigned to the device when it is reconnected. If the device is already connected, these functions are deactivated.

#### **Deleting the device**

Via iDrive:

- 1. "My Vehicle"
- 2. "iDrive settings"
- 3. "Mobile devices"
- 4. Select device.
- 5. "Delete device"

The device is disconnected and removed from the device list.

## Swapping the telephone and additional phone

If two mobile phones are connected to the vehicle, the functions of the phone and additional phone can be switched.

Via iDrive:

- 1. "My Vehicle"
- 2. "iDrive settings"
- 3. "Mobile devices"
- 4. "Settings"
- 5. "Swap telephone/additional tel."

#### Software update

#### **General information**

The vehicle supports a large number of mobile devices, for instance mobile phones and MP3 players. Software updates are available for many of the supported devices. The vehicle is maintained up-to-date via regular vehicle software updates.

Updates and related current information is available at www.bmw.com/update.

## Displaying the installed software version

The software version installed in the vehicle is displayed.

Via iDrive:

- 1. "My Vehicle"
- 2. "iDrive settings"
- 3. "Software update"
- 4. "Show current version"

If an update has been carried out before, select the desired version to display additional information.

#### Updating software via USB

The software may only be updated when the vehicle is stationary.

Via iDrive:

- 1. Store the file for the software update in the main directory of a USB flash drive.
- 2. Connect the USB storage device to a USB interface, refer to page 185.
- 3. "My Vehicle"
- 4. "iDrive settings"
- 5. "Software update"
- 6. "Update software"
- 7. "USB"
- 8. "Install software"
- 9. "OK"
- 10. Wait for the update to complete.
- 11.Confirm system restart.

#### **Restoring the software version**

The software version before the last software update and the version before the first software update can be restored.

The software may only be restored when the vehicle is stationary.

Via iDrive:

- 1. "My Vehicle"
- 2. "iDrive settings"
- 3. "Software update"
- 4. "Restore software"

5. ▷ "Previous version"

The previous software version is restored.

- "Default software settings"
  The first software version is restored.
- 6. "Remove software"
- 7. "OK"
- 8. Wait for restore.
- 9. Confirm system restart.

## **Owner's Manual media**

# Vehicle features and options

This chapter describes all standard, country-specific and optional features offered with the series. It also describes features that are not necessarily available in your vehicle, e. g., due to the selected options or country versions. This also applies to safety-related functions and systems. When using these functions and systems, the applicable laws and regulations must be observed.

## **General information**

You can use the following media formats to call up the content in the Owner's Manual:

- ▶ Printed Owner's Manual, refer to page 62.
- Integrated Owner's Manual in the vehicle, refer to page 62.

## **Printed Owner's Manual**

#### Concept

The printed Owner's Manual describes all standard, country-specific, and optional features offered with the series.

#### **General information**

The Owner's Manual for Navigation, Entertainment, and Communication can be obtained as printed book from the service center.

#### **Supplementary Owner's Manuals**

Also follow the instructions of the Supplementary Owner's Manuals, which are included in addition to the onboard literature.

# Integrated Owner's Manual in the vehicle

#### Concept

The Integrated Owner's Manual specifically describes features and functions found in the vehicle. The Integrated Owner's Manual can be displayed on the Control Display.

#### Selecting the Owner's Manual

- 1. Press button.
- 2. "My Vehicle"
- 3. "Owner's Manual"
- 4. Select the required method of accessing the contents.

## Scrolling through the owner's manual

Turn the Controller, until the next or previous contents are displayed.

#### **Context help**

#### **General information**

The section of the Owner's Manual relating to the function that is currently selected can be displayed directly.

#### **Opening via iDrive**

Change directly to the Options menu from the function on the Control Display:



Press button.

2. "Owner's Manual"

#### **Opening when a Check Control** message is displayed

Directly from the Check Control message on the Control Display:

[] "Owner's Manual"

#### Changing between a function and the Owner's Manual

To switch from a function, for instance radio, to the Owner's Manual on the Control Display and to alternate between the two displays:



- Press the button
- 2. "Owner's Manual"
- 3. Select the desired page in the Owner's Manual.
- Press the button again to return to last 4. displayed function.
- 5. Press the button to return to the page of the Owner's Manual displayed last.

To alternate continuously between the last displayed function and the last displayed page of the Owner's Manual, repeat steps 4 & 5. Opens a new display every time.

#### **Programmable memory buttons**

#### General information

The jumps into the Owner's Manual can be stored on the programmable memory buttons, refer to page 45, and called up directly.

#### Storing

- 1. Select the desired entry point via iDrive:
  - "Quick reference"
  - "Search by pictures"
  - "Keyword search"
  - "Animations"

2. 1 Press desired programmable memory button and hold for more than 2 seconds.

#### Executing



Press the corresponding button.

The owner's manual is directly displayed at the selected entry point.



## **CONTROLS**

Opening and closing	. 66
Seats, mirrors, and steering wheel	. 83
Transporting children safely	
Driving	100
Displays	117
Lights	131
Safety	
Driving stability control systems	
Driving comfort	
Climate control	170
Interior equipment	179
Storage compartments	188

## **Opening and closing**

# Vehicle features and options

This chapter describes all standard, country-specific and optional features offered with the series. It also describes features that are not necessarily available in your vehicle, e. g., due to the selected options or country versions. This also applies to safety-related functions and systems. When using these functions and systems, the applicable laws and regulations must be observed.

## **Remote control**

#### **General information**

The vehicle is supplied with two remote controls with integrated key.

Each remote control contains a replaceable battery. Replacing the battery, refer to page 68.

You may set the button functions, depending on the vehicle equipment and country version. Settings, refer to page 77.

The vehicle stores personal settings for every remote control. Driver profile, refer to page 74.

The remote controls hold information about required maintenance. Service data in the remote control, refer to page 236.

To prevent possible locking in of the remote control, take the remote control with you when exiting the vehicle.

### Safety information

#### \Lambda WARNING

People or animals in the vehicle can lock the doors from the inside and lock themselves in. In this case, the vehicle cannot be opened from the outside. There is a risk of injury. Take the remote control with you so that the vehicle can be opened from the outside.

#### 🛆 WARNING

Unlocking from the inside is only possible with special knowledge.

Persons who spend a lengthy time in the vehicle while being exposed to extreme temperatures are at risk of injury or death. Do not lock the vehicle from the outside when there are people in it.


### 🛆 WARNING

Unattended children or animals can cause the vehicle to move and endanger themselves and traffic, for instance due to the following actions:

- ▷ Pressing the Start/Stop button.
- ▷ Releasing the parking brake.
- Opening and closing the doors or windows.
- ▷ Engaging selector lever position N.
- ▷ Using vehicle equipment.

There is a risk of accidents or injuries. Do not leave children or animals unattended in the vehicle. Take the remote control with you when exiting and lock the vehicle.

#### **Overview**

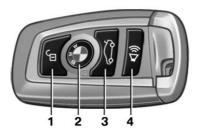

- 1 Unlocking
- 2 Locking
- 3 Unlocking the tailgate
- 4 Panic mode

#### Unlocking

đ

Press button on the remote control.

Depending on the settings, refer to page 77, the following access points are unlocked:

Driver's door and fuel filler flap.

Press the button of the remote control again to unlock the other vehicle access points.

▶ All doors, tailgate, and fuel filler flap.

In addition, the following functions are executed:

- Unlocking is confirmed by the turn signals and the horn. This function must be activated in the settings, refer to page 77.
- The settings stored in the driver profile, refer to page 74, are applied.
- The driver's seat is set to the last position saved in the driver's profile. This function must be activated in the settings, refer to page 77.
- The interior lights, refer to page 135, are switched on, unless they were manually switched off.
- Depending on the settings, the welcome light and headlight courtesy delay feature, refer to page 132, are switched on.

The alarm system, refer to page 78, is switched off.

The light functions may depend on the ambient brightness.

#### **Convenient opening**



Press and hold this button on the remote control after unlocking.

Pressing and holding the button on the remote control opens the windows and the glass sunroof.

#### Locking

- 1. Close the driver's door.
- 2. W Press button on the remote control.

The following functions are executed:

- All doors, the tailgate, and the fuel filler flap are being locked.
- Locking is confirmed by the turn signals and the horn. This function must be activated in the settings, refer to page 77.
- The alarm system, refer to page 78, is switched on.

If the engine or ignition is still switched on when you lock the vehicle, the vehicle horn honks twice. In this case, the engine or ignition must be switched off by means of the Start/Stop button.

## Switching on interior lights and courtesy light



Press button on the remote control with the vehicle locked.

This function is not available, if the interior lights were switched off manually.

The light functions may depend on the ambient brightness.

After locking, wait 10 seconds before pressing the button again.

#### **Tailgate**

#### **General information**

To avoid locking it in the vehicle, do not place the remote control in the cargo area.

Depending on the vehicle equipment and country version, it is possible to specify whether the doors are also unlocked when unlocking with the remote control. Adjusting the settings, refer to page 77.

The tailgate can only be opened if it is not locked. Separately lock the tailgate, refer to page 74.

#### **Safety information**

#### \Lambda WARNING

Body parts can be jammed when operating the trunk lid. There is a risk of injury. Make sure that the area of movement of the trunk lid is clear during opening and closing.

#### 

During opening, the trunk lid pivots back and up. There is a risk of damage to property. Make sure that the area of movement of the trunk lid is clear during opening and closing.

#### Opening



Press button on the remote control for approx. 1 second.

#### Panic mode

You can trigger the alarm system if you find yourself in a dangerous situation.



Press button on the remote control and hold for at least 3 seconds.

Briefly press the button on the remote control three times in succession.

To switch off the alarm: press any button.

#### **Replacing the battery**

- 1. Remove the integrated key from the remote control, refer to page 70.
- 2. Place the integrated key underneath the battery compartment cover, arrow 1, and lift the cover with a lever movement of the integrated key, arrow 2.



Push battery in the direction of the arrow using a pointed object and lift it out.



- 4. Insert a type CR 2450 battery with the positive side facing up.
- 5. Press the cover closed.
- 6. Push the integrated key into the remote control until it engages.



Have old batteries disposed of by a dealer's service center or another qualified service center or repair shop or take them to a collection point.

#### **Additional remote controls**

Additional remote controls are available from a dealer's service center or another qualified service center or repair shop.

#### Loss of the remote controls

A lost remote control can be blocked and replaced by a dealer's service center or another qualified service center or repair shop.

#### Malfunction

#### **General information**

A Check Control message is displayed.

Remote control detection by the vehicle may malfunction under the following circumstances:

- The battery of the remote control is discharged. Replacing the battery, refer to page 68.
- Interference of the radio connection from transmission towers or other equipment with high transmitting power.
- Shielding of the remote control due to metal objects.

Do not transport the remote control together with metal objects.

Interference of the radio connection from mobile phones or other electronic devices in direct proximity to the remote control.


Do not transport the remote control together with electronic devices.

- Interference of radio transmission by a charging process of mobile devices, for instance charging of a mobile phone.
- The remote control is in direct proximity of the wireless charging tray.

Place the remote control down at a different location.

In the case of interference, the vehicle can be unlocked and locked from the outside with the integrated key, refer to page 70.

## Starting the engine via emergency detection of the remote control

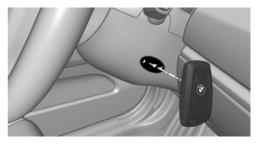

It is not possible to start the engine if the remote control has not been detected.

Proceed as follows in this case:

- 1. Hold the remote control with its tip against the marked area on the steering column. Pay attention to the display in the instrument cluster.
- 2. If the remote control is detected:

Start the engine within 10 seconds.

If the remote control is not detected, slightly change the position of the remote control and repeat the procedure.

#### **Frequently asked questions**

What precautions can be taken to be able to open a vehicle with an accidentally locked in remote control?

The options provided by the Remote Services of the BMW Connected app include the ability to lock and unlock a vehicle.

This requires an active BMW Connected-Drive contract and the BMW Connected app must be installed on a smartphone.

Unlocking the vehicle can be requested via the BMW ConnectedDrive Call Center.

An active BMW ConnectedDrive contract is required.

### **Integrated key**

#### **General information**

The driver's door can be locked and unlocked without remote control using the integrated key.

The integrated key can also be used for the glove compartment on the front passenger side.

#### **Safety information**

#### \rm MARNING


Unlocking from the inside is only possible with special knowledge.

Persons who spend a lengthy time in the vehicle while being exposed to extreme temperatures are at risk of injury or death. Do not lock the vehicle from the outside when there are people in it.

### 

The door lock is permanently joined with the door. The door handle can be moved. When pulling the door handle with the integrated key inserted, paint or the integrated key can be damaged. There is a risk of damage to property. Remove the integrated key before pulling the outside door handle.

#### Removing

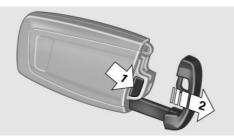

Press the button, arrow 1, and pull out the integrated key, arrow 2.

## Locking/unlocking via the door lock



Unlock or lock the driver's door via the door lock using the integrated key.

The other doors must be unlocked or locked from the inside.

#### Alarm system

The alarm system is not switched on if the vehicle is locked with the integrated key.

The alarm system is triggered when the door is opened, if the vehicle has been unlocked via the door lock.

In order to stop the alarm, unlock the vehicle with the remote control or switch on the ignition, if needed, through emergency detection of the remote control, refer to page 69.

# Button for central locking system

#### **General information**

In the event of a severe accident, the vehicle is automatically unlocked. The hazard warning system and interior lights come on.

#### **Overview**



Button for the central locking system.

#### **Unlocking and locking**

Press button. For locking, the doors must be closed.

- ▷ The fuel filler flap remains unlocked.
- The vehicle is not secured against theft when locking.

#### Opening

- Press button to unlock the doors together, and then pull the door handle above the armrest.
- On the door to be opened, pull the door handle twice: the first time unlocks the door, the second time opens it. The other doors remain locked.

### **Comfort Access**

#### Concept

The vehicle can be accessed without activating the remote control.

All you need to do is to have the remote control with you, such as in your pants pocket.

The vehicle automatically detects the remote control when it is in close proximity or in the car's interior.

#### **General information**

Comfort Access supports the following functions:

- Unlocking and locking the vehicle.
- Convenient closing.
- Opening trunk lid.

#### **Functional requirements**

- To lock the vehicle, the remote control must be located outside of the vehicle near the doors.
- The next unlocking and locking cycle is not possible until after approx. 2 seconds.


#### Unlocking



Grasp the door handle on the driver's or front passenger door completely.

This corresponds with pressing the button  $\mathbf{ff}$  on the remote control.

#### Locking

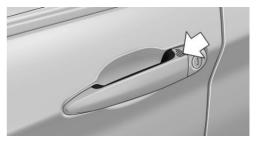

Touch the surface on the door handle of the driver's or front passenger door with your finger for approx. 1 second without grasping the door handle.

This corresponds with pressing the button O on the remote control.


#### **Convenient closing**

#### **Safety information**

#### 🛆 WARNING

With convenient closing, body parts can be jammed. There is a risk of injury. Make sure that the area of movement of the doors is clear during convenient closing.

#### Closing

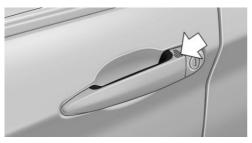

Touch the surface on the door handle of the driver's or front passenger door, arrow, with your finger and hold it there without grasping the door handle.

This corresponds with pressing and holding the button ③ on the remote control.

In addition to locking, the windows and the glass sunroof close. The exterior mirrors fold in, depending on the model.

### **Open tailgate**

#### **General information**

If you open the tailgate via Comfort Access, locked doors will not be unlocked.

To avoid locking it in the vehicle, do not place the remote control in the cargo area.

#### Safety information

#### 🛆 WARNING

Body parts can be jammed when operating the trunk lid. There is a risk of injury. Make sure that the area of movement of the trunk lid is clear during opening and closing.

#### 🛆 NOTICE

During opening, the trunk lid pivots back and up. There is a risk of damage to property. Make sure that the area of movement of the trunk lid is clear during opening and closing.

#### Opening



Press button on the tailgate.

This corresponds with pressing the button on the remote control.

The tailgate is unlocked and can be swung upward.

#### Malfunction

Remote control detection by the vehicle may malfunction under the following circumstances:

The battery of the remote control is discharged. Replace the battery, refer to page 68.

- Interference of the radio connection from transmission towers or other equipment with high transmitting power.
- Shielding of the remote control due to metal objects.

Do not transport the remote control together with metal objects.

Interference of the radio connection from mobile phones or other electronic devices in direct proximity to the remote control.

Do not transport the remote control together with electronic devices.

Wet or snowy conditions may disrupt the locking request recognition function on the door handles.

In the case of a malfunction, unlock and lock the vehicle using the buttons of the remote control or using the integrated key, refer to page 70.

## Tailgate

### **General information**

To avoid locking it in the vehicle, do not place the remote control in the cargo area.

Depending on the vehicle equipment and country version, it is possible to specify whether the doors are also unlocked when unlocking with the remote control. Adjusting the settings, refer to page 77.

The tailgate can only be opened if it is not locked. Separately lock the tailgate, refer to page 74.

### **Safety information**

### 

Body parts can be jammed when operating the trunk lid. There is a risk of injury. Make sure that the area of movement of the trunk lid is clear during opening and closing.

### 

During opening, the trunk lid pivots back and up. There is a risk of damage to property. Make sure that the area of movement of the trunk lid is clear during opening and closing.

## **Opening and closing**

### **Opening from the outside**



 Without Comfort Access: unlock vehicle.
 With Comfort Access: unlock the vehicle or have the remote control with you.

Press button on the tailgate.

Press button on the remote control for approx. 1 second.

Depending on the setting, the doors may also be unlocked. Unlocking with the remote control, refer to page 68.

The tailgate opens slightly and can be swung upward.

### **Opening from the inside**



⊳

With the vehicle stationary, press the button in the driver's floor area.

### Closing



Grasp the recess grip and pull tailgate down.

## Locking separately

### **General information**

The switch in the glove compartment decouples the tailgate from the central locking system, so it can no longer be opened.

If the glove compartment is locked with the integrated key, the remote control can be handed over without the integrated key, for instance to a valet parking service. It is then no longer possible for objects to be removed from the cargo area even with the remote control.

### Securing

- ▷ Tailgate secured, arrow 1.
  - ▷ Tailgate not secured, arrow 2.

Slide the switch into the desired position.

### Trunk emergency unlocking



Pull the handle inside the cargo area. The tailgate unlocks.

## **Driver profile**

### Concept

In the driver profiles, individual settings for several drivers can be stored and called up again when required.

### **General information**

There are three driver profiles with which personal vehicle settings can be stored. Every remote control has one of these driver profiles assigned.

If the vehicle is unlocked using a remote control, the assigned personal driver profile will be activated. All settings stored in the driver profile are automatically applied.

If several drivers use their own remote control, the vehicle will adjust the personal settings during unlocking. These settings are also restored, if the vehicle has been used in the meantime by a person with a different remote control.

Changes to the settings are automatically stored in the driver profile currently activated.

If another driver profile is selected via iDrive, the settings stored in it will be applied automatically. The new driver profile is assigned to the remote control currently used. There is an additional guest profile available that is not assigned to any remote control. It can be used to apply settings in the vehicle without changing the personal driver profiles.

### **Functional requirements**

For the system to be able to identify the driver profile associated to a particular driver, the detected remote control must be clearly allocated to the driver.

This is the case when:

- The driver is only carrying his or her own remote control.
- > The driver unlocks the vehicle.
- The driver gets into the vehicle through the driver's door.

### Settings

The settings for the following systems and functions are stored in the active profile. The scope of storable settings depends on country and equipment.

- ▶ Unlocking and locking.
- ▶ Lights.
- Climate control.
- Radio.
- Instrument cluster.
- Programmable memory buttons.
- ▷ Volumes, tone.
- Control Display.
- ▶ Navigation.
- ► TV.
- PDC Park Distance Control.
- Rearview camera.
- Seat position, exterior mirror position, steering wheel position where applicable.

Both the positions saved via the seat memory and the last position set are saved.

Intelligent Safety.

### **Profile management**

### Selecting a driver profile

Regardless of the remote control in use, a different driver profile may be activated. This allows you to call up personal vehicle settings, even if you did not unlock the vehicle with your own remote control.

Via iDrive:

- 1. "My Vehicle"
- 2. "Driver profiles"
- 3. Select driver profile.
- 4. "OK"
- All settings stored in the called-up driver profile are automatically applied.
- ▷ The called-up driver profile is assigned to the remote control being used at the time.
- If the driver profile is already assigned to a different remote control, this driver profile will apply to both remote controls.

#### Using a guest profile

The guest profile is for individual settings that are stored in none of the three personal driver profiles.

Via iDrive:

- 1. "My Vehicle"
- 2. "Driver profiles"
- 3. "Drive off (guest)"
- 4. "OK"

The guest profile cannot be renamed. It is not assigned to the current remote control.

#### **Renaming a driver profile**

A personal name can be assigned to the active driver profile to avoid confusion between the driver profiles.

Via iDrive:

- 1. "My Vehicle"
- 2. "Driver profiles"
- 3. Select driver profile.

Description of the symbol o

- 4. "Change driver profile name"
- 5. Enter profile name.
- 6. OK Select the symbol.

### **Resetting a driver profile**

The settings of the driver profile currently in use are reset to their factory settings.

Via iDrive:

- 1. "My Vehicle"
- 2. "Driver profiles"
- 3. Select driver profile.

(2) The driver profile marked with this symbol can be reset.

- 4. "Reset driver profile"
- 5. "OK"

### **Exporting driver profiles**

Most settings of the active driver profile can be exported.

Exporting is helpful when storing and retrieving personal settings, for instance before delivering the vehicle to a workshop. The stored driver profiles can be taken into another vehicle.

Via iDrive:

- 1. "My Vehicle"
- 2. "Driver profiles"
- 3. Select driver profile.

Departure of the transformation of transformatio

- 4. "Export driver profile"
- 5. Select a storage device for exporting the driver profile.
  - ▷ "USB device"

Select USB storage device, as needed, refer to page 57.

Online.

### Importing driver profiles

The existing settings of the active driver profile are overwritten with the settings of the imported driver profile.

Via iDrive:

- 1. "My Vehicle"
- 2. "Driver profiles"
- 3. Select the driver profile to be overwritten.

O The driver profile marked with this symbol can be overwritten.

- 4. "Import driver profile"
- 5. Select a storage device for importing the driver profile.
  - USB storage device: "USB device"
    Select USB storage device as needed.
  - Online.
- 6. Select the driver profile to be imported.

## Displaying driver profiles during start

The driver profiles can be displayed during each start to select the desired profile.

Via iDrive:

- 1. "My Vehicle"
- 2. "Driver profiles"
- 3. "Show driver profiles at startup"

## **System limits**

A clear assignment between the remote control and driver may not be possible in the following cases, for example.

The passenger unlocks the vehicle with his or her own remote control, but another person is driving.

- The driver unlocks the vehicle via Comfort Access and has multiple remote controls with him or her.
- The driver changes, but the vehicle is not locked and unlocked.
- Multiple remote controls are located outside of the vehicle.

## **Settings**

### **General information**

Depending on the package and country version, various settings are available for the remote control functions.

These settings are stored for the driver profile, refer to page 74, currently used.

### Unlocking

#### **Doors**

Via iDrive:

- 1. "My Vehicle"
- 2. "Vehicle settings"
- 3. "Doors/Key"
- 4. f "Driver's door" or f "All doors"
- 5. Select desired setting:
  - "Driver's door only"

Only the driver's door and the fuel filler flap are unlocked. Pressing again unlocks the entire vehicle.

"All doors"

The entire vehicle is unlocked.

### Tailgate

Depending on the vehicle equipment and country version, this setting may not be offered. Via iDrive:

- 1. "My Vehicle"
- 2. "Vehicle settings"

- 3. "Doors/Key"
- 4. 주

The text next to the symbol indicates the current setting.

- 5. Select desired setting:
  - "Tailgate"
    - The tailgate unlocks.
  - "Tailgate and door(s)"
    The tailgate and the doors are unlocked.

## Adjusting the last seat and mirror position

Via iDrive:

- 1. "My Vehicle"
- 2. "Driver profiles"
- 3. Select driver profile.

Difference in the setting can be made for the driver profile marked with this symbol.

4. "Last seat position automatic"

When the vehicle is unlocked, the driver's seat and exterior mirrors resume their last set positions.

The most recent position is independent of the positions saved via the seat memory.

## Confirmation signals from the vehicle

Via iDrive:

- 1. "My Vehicle"
- 2. "Vehicle settings"
- 3. "Doors/Key"
- 4. Deactivate or activate the desired confirmation signals.
  - ▷ "Flash for lock/unlock"

Unlocking is signaled by two flashes, locking by one.

With alarm system:

"Acoustic signal for lock/unlock"

Unlocking is signaled by one honk of the horn.

## **Automatic locking**

Via iDrive:

- 1. "My Vehicle"
- 2. "Vehicle settings"
- 3. "Doors/Key"
- 4. Select desired setting:
  - "Lock automatically"

The vehicle locks automatically after a short period of time if no door is opened after unlocking.

"Lock after starting to drive"

The vehicle locks automatically after you drive off.

## Alarm system

## **General information**

When the vehicle is locked, the vehicle alarm system reacts to the following changes:

- Unauthorized opening of a door, the hood or the trunk lid.
- ▷ Movements in the car's interior.
- Changes in the vehicle tilt, e. g., during attempts at stealing a wheel or when towing the vehicle.
- Disconnected battery voltage.
- Improper use of the socket for Onboard Diagnosis.
- Locking the vehicle while a device is connected to the socket for the OBD Onboard-Diagnosis. Socket for the OBD Onboard Diagnosis, refer to page 237.

The alarm system signals these changes visually and acoustically:

▷ Acoustic alarm:

Depending on local regulations, the acoustic alarm may be suppressed.

Visual alarm:
 By flashing the exterior lighting.

## Switching on/off

When you lock and unlock the vehicle with the remote control or Comfort Access, the alarm system will also switch on or off at the same time.

## Opening the doors with the alarm system switched on

The alarm system is triggered when a door is opened if the door was unlocked using the integrated key in the door lock.

Switching off the alarm, refer to page 79.

## Opening the tailgate with the alarm system switched on

The tailgate can be opened even when the alarm system is switched on.

After the tailgate is closed, it is locked and monitored again provided the doors are locked. The hazard warning system flashes once.

### Panic mode

You can trigger the alarm system if you find yourself in a dangerous situation.




Press button on the remote control and hold for at least 3 seconds.

 Briefly press the button on the remote control three times in succession.

To switch off the alarm: press any button.

## Indicator light on the interior mirror

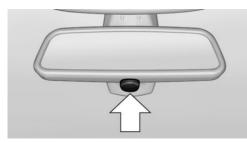

The indicator light flashes briefly every 2 seconds:

The alarm system is switched on.

Indicator light flashes for approx. 10 seconds, then it flashes briefly every 2 seconds:

Interior motion sensor and tilt alarm sensor are not active, as doors, hood, or tailgate are not correctly closed. Correctly closed access points are secured.

When the still open access points are closed, interior motion sensor and tilt alarm sensor will be switched on.

The indicator light goes out after unlocking: The vehicle has not been tampered with.

The indicator light flashes after unlocking until the engine ignition is switched on, but no longer than approx. 5 minutes:

An alarm has been triggered.

### **Tilt alarm sensor**

The tilt of the vehicle is monitored.

The alarm system responds in situations such as attempts to steal a wheel or when the vehicle is towed.

### Interior motion sensor

The windows and the glass sunroof must be closed for the system to function properly.

### **Avoiding unintentional alarms**

### **General information**

The tilt alarm sensor and interior motion sensor can trigger an alarm, although no unauthorized action occurred.

Possible situations for an unwanted alarm:

- In automatic vehicle washes.
- In duplex garages.
- During transport on trains carrying vehicles, at sea or on a trailer.
- ▷ With animals in the vehicle.
- When the vehicle is locked after start of fueling.

The tilt alarm sensor and the interior motion sensor can be switched off in such situations.

## Switching off the tilt alarm sensor and interior motion sensor

Press the remote control button again within 10 seconds as soon as the vehicle is locked.

The indicator light lights up for approx. 2 seconds and then continues to flash.

The tilt alarm sensor and interior motion sensor are switched off until the vehicle is locked again.

### Switching off the alarm

- Unlock the vehicle with the remote control or switch on the ignition, if needed through emergency detection of remote control, refer to page 69.
- ▷ With Comfort Access:

If you are carrying the remote control on your person, grasp the door handle on the driver's or front passenger door completely.

## **Power windows**

## Safety information

### \land WARNING

When operating the windows, body parts and objects can be jammed. There is a risk of injury or risk of damage to property. Make sure that the area of movement of the windows is clear during opening and closing.

### **Overview**





Power windows

## Opening

Press the switch to the resistance point.

The window opens while the switch is being held.

Press the switch beyond the resistance point.

The window opens automatically. Pressing the switch again stops the motion.

Convenient opening via the remote control, refer to page 67.

### Closing



Pull the switch to the resistance point.

The window closes while the switch is being held.

Pull the switch beyond the resistance point.

The window closes automatically if the door is closed. Pulling again stops the motion.

Closing via Comfort Access, refer to page 72.

## Jam protection system

### **General information**

If closing force exceeds a specific threshold as a window closes, closing is interrupted.

The window opens slightly.

### Safety information

## 🛆 WARNING

Accessories on the windows such as antennas can impact jam protection. There is a risk of injury. Do not install accessories in the area of movement of the windows.

## Closing without the jam protection system

In case of danger from the outside or if ice might prevent normal closing, proceed as follows:

1. Pull the switch past the resistance point and hold it there.

The window closes with limited jam protection. If the closing force exceeds a specific threshold, closing is interrupted.

2.

Pull the switch past the resistance point again within approx. 4 seconds and hold it there.

The window closes without jam protection.

## **Glass sunroof, electric**

### **General information**

The glass sunroof is ready for operation when the ignition is switched on.

## **Safety information**

### ▲ WARNING

Body parts can be jammed when operating the glass sunroof. There is a risk of injury. Make sure that the area of movement of the glass sunroof is clear during opening and closing.

### **Overview**



### **Tilting the glass sunroof**



Push switch briefly upward.

- The closed glass sunroof tilts.
- The opened glass sunroof closes until it is in the tilted position. The sun protection does not move.

## Opening/closing the glass sunroof and sun protection



Press the switch in the desired direction to the resistance point and hold it there. Holding down the switch opens the glass sunroof and sun protection together.

The glass sunroof closes while the switch is being held. The sun protection can be manually closed.

Press the switch in the desired direction past the resistance point.

The glass sunroof and sun protection open automatically.

The glass sunroof closes automatically. The sun protection can be manually closed.

Pressing the switch upward stops the motion.

Convenient opening via the remote control, refer to page 67.

Closing via Comfort Access, refer to page 71.

### **Comfort position**

In some models, the wind noises in the car's interior are lowest when the glass sunroof is not fully open. In these models, the automatic function initially only opens the glass sunroof up to this comfort position.

Pressing the switch again opens the glass sunroof fully.

### Jam protection system

### **General information**

If the closing force exceeds a certain value when closing the glass sunroof, the closing operation is interrupted once the roof reaches the half-open position, or it is stopped when closing from the tilted position. The glass sunroof opens slightly.

## Closing from the open position without jam protection

If there is an external danger, proceed as follows:

1. Push the switch forward past the resistance point and hold.

The glass sunroof closes with limited jam protection. If the closing force exceeds a specific threshold, closing is interrupted.



2. Push the switch forward again past the resistance point and hold until the glass sunroof closes without jam protection. Make sure that the closing area is clear.

## Closing from the raised position without jam protection



If there is an external danger, push the switch forward past the resistance point and hold it.

The glass sunroof closes without jam protection.

## Initializing after a power interruption

### **General information**

After a power failure during the opening or closing process, the glass sunroof can only be operated to a limited extent.

The system can be initialized under the following conditions.

- > The vehicle is parked in a horizontal position.
- ▷ The engine is running.
- The external temperature is above 41 °F/5 °C.

During initialization, the glass sunroof closes without jam protection.

Make sure that the closing area is clear.

### Initializing the system



Press the switch up and hold it until initialization is complete.

Initialization begins within 15 seconds.

- If the glass sunroof is closed, it opens then closes again.
- If the glass sunroof is open, it first closes, then opens and closes again.

Initialization is complete once the glass sunroof has opened then closed again.

## Seats, mirrors, and steering wheel

# Vehicle features and options

This chapter describes all standard, country-specific and optional features offered with the series. It also describes features that are not necessarily available in your vehicle, e. g., due to the selected options or country versions. This also applies to safety-related functions and systems. When using these functions and systems, the applicable laws and regulations must be observed.

## Sitting safely

An ideal seating position that meets the needs of the occupants can make a vital contribution to relaxed, fatigue-free driving.

In the event of an accident, the correct seating position plays an important role. Additionally, follow the following chapters for safe driving:

- ▷ Seats, refer to page 83.
- ▷ Safety belts, refer to page 87.
- ▶ Head restraints, refer to page 89.
- ▷ Airbags, refer to page 136.

## Seats

## **Safety information**

### 🛆 WARNING

Seat adjustments while driving can lead to unexpected movements of the seat. Vehicle control could be lost. There is a risk of an accident. Only adjust the seat on the driver's side when the vehicle is stationary.

### \land WARNING


With a backrest inclined too far to the rear, the efficacy of the safety belt can no longer be ensured. There is a risk of sliding under the safety belt in an accident. There is a risk of injuries or danger to life. Adjust the seat prior to starting the trip. Adjust the backrest so that it is in the most upright position as possible and do not adjust again while driving.

### 🛆 WARNING

There is a risk of jamming when moving the seats. There is a risk of injury or risk of damage to property. Make sure that the area of movement of the seat is clear prior to any adjustment.

## Manually adjustable seats

#### **Overview**

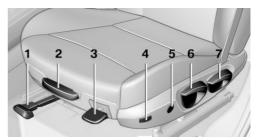

- 1 Forward/backward
- 2 Thigh support
- 3 Seat tilt
- 4 Backrest width
- 5 Lumbar support
- 6 Height
- 7 Backrest tilt


#### Forward/backward



Pull the lever and slide the seat in the desired direction.

After releasing the lever, move the seat forward or back slightly making sure it engages properly.

### Height

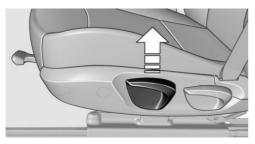

Pull the lever and apply your weight to the seat or lift it off, as necessary.

### **Backrest tilt**



Pull the lever and apply your weight to the backrest or lift it off, as necessary.

#### Seat tilt



Pull the lever and move the seat to the desired tilt. After releasing the lever, apply your weight to the seat or lift it off to make sure the seat engages properly.


## **Electrically adjustable seats**

### **General information**

The seat setting for the driver's seat is stored for the profile currently used. When the vehicle is unlocked via the remote control, the position is automatically retrieved if the function, refer to page 77, is activated for this purpose.


The current seat position can be stored using the memory function, refer to page 91.

### **Overview**

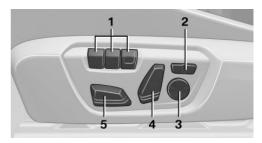


- 1 Memory function
- 2 Backrest width
- 3 Lumbar support
- 4 Backrest tilt
- 5 Forward/backward, height, seat tilt

### Forward/backward

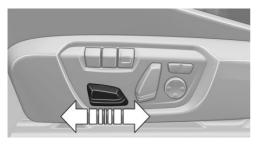

Push switch forward or backward.

### Height

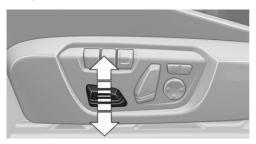

Push switch up or down.

### Seat tilt



Move switch up or down.

### **Backrest tilt**



Move switch forward or backward.

## **Thigh support**



Pull the lever at the front of the seat and adjust the thigh support.

### Lumbar support

The curvature of the seat backrest can be adjusted in a way that it supports the lumbar region of the spine. The lower back and the spine are supported for upright posture.



Press the front/rear section of the button:

The curvature is increased/ decreased.

Press the upper/lower section of the button:

The curvature is shifted up/ down.

### **Backrest width**

### Concept

Adjusting the backrest width may improve lateral support when taking corners.

### **General information**

You can change the backrest width by adjusting the side wings of the backrest.

### Settings



Press the front section of the button:

> The backrest width decreases.

Press the rear section of the button:

The backrest width increases.

## **Front seat heating**

### **Overview**



₩

Seat heating

#### **Switching on**



Press button once for each temperature level.

The maximum temperature is reached when three LEDs are lit.

If the trip is continued within approx. 15 minutes after a stop, seat heating is activated automatically with the temperature selected last.

#### Switching off



Press and hold the button, until the LEDs go out.

### **Entering the rear**

### **Safety information**

### \rm MARNING

There is a risk of jamming when moving the seats. There is a risk of injury or risk of damage to property. Make sure that the area of movement of the seat is clear prior to any adjustment.

### 🛆 WARNING

Unexpected movements of the rear seat backrest while driving may occur due to an unlocked rear seat backrest. Vehicle control could be lost. There is a risk of injury. Fold back and lock the rear seat backrests before driving.

### Manual length adjustment

#### **Comfort entry**

The comfort entry contains a memory function for forward/backward and backrest adjustment.

1. Pull lever up to the stop.



- 2. Fold the rear seat backrest forward.
- 3. Push the seat forward.

#### **Original position**

- 1. Push the seat back into the original position.
- 2. Fold back the backrest to lock the seat.

## Electric forward/backward adjustment

#### **Comfort entry**

The comfort entry contains a memory function for forward/backward and backrest adjustment.

1. Pull lever up to the stop.



- 2. Fold the rear seat backrest forward.
- 3. To change the entry area:

- Press and hold this button until the seat has moved to the desired position. Releasing the button stops window/ roof movement.
- Press the button briefly. The seat automatically moves to the end position. Pressing again stops the motion.

#### **Original position**

- 1. Moving the seat to its original position:
  - Press and hold this button until the seat has returned to its original position. Releasing the button stops window/ roof movement.
  - Press the button briefly. The seat moves to its original position. Pressing again stops the motion.
- 2. Fold the rear seat backrest back.

## **Safety belts**

## Number of safety belts and safety belt buckles

The vehicle is fitted with four safety belts to ensure occupant safety. However, they can only offer protection when adjusted correctly.

### **General information**

Always make sure that safety belts are being worn by all occupants before driving off. Although airbags enhance safety by providing added protection, they are not a substitute for safety belts.

The upper shoulder strap's anchorage point will be correct for adult seat occupants of every build if the seat is correctly adjusted.

### **Safety information**

### \land WARNING

Use of a safety belt to buckle more than one person will potentially defeat the ability of the safety belt to serve its protective function. There is a risk of injuries or danger to life. Do not allow more than one person to wear a single safety belt. Infants and children are not allowed on an occupant's lap, but must be transported and secured in designated child restraint systems.

### \rm MARNING

The efficacy of safety gear, including safety belts, can be limited or lost when safety belts are fastened incorrectly. An incorrectly fastened safety belt can cause additional injuries, for instance in the event of an accident or during braking and evasive maneuvers. There is a risk of injuries or danger to life. Make sure that all occupants are wearing safety belts correctly.

### 🛆 WARNING

The efficacy of safety gear, including safety belts, may not be fully functional or fail in the following situations:

- The safety belts or safety belt buckles are damaged, soiled, or changed in any other way.
- Belt tensioners or belt retractors were modified.


Safety belts can be imperceptibly damaged in the event of an accident. There is a risk of injuries or danger to life. Do not modify safety belts, safety belt buckles, belt tensioners, belt retractors or belt anchors and keep them clean. Have the safety belts checked after an accident at the dealer's service center or another qualified service center or repair shop.

### **Correct use of safety belts**

- Wear the safety belt twist-free and tight to your body over your lap and shoulders.
- Wear the safety belt deep on your hips over your lap. The safety belt may not press on your stomach.
- Do not rub the safety belt against sharp edges, or guide it or jam it in across hard or fragile objects.
- Avoid thick clothing.
- Re-tighten the safety belt frequently upward around your upper body.

### Buckling the safety belt

- 1. Slowly guide the safety belt out of the holder when fastening it.
- Insert the tongue plate into the safety belt buckle. The safety belt buckle must engage audibly.

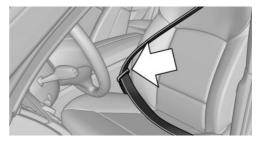

### Unbuckling the safety belt

- 1. Hold the safety belt firmly.
- 2. Press the red button in the belt buckle.
- 3. Guide the safety belt back into its roll-up mechanism.

## Safety belt reminder for driver's and passenger's seat

### **Display in the instrument cluster**

The indicator light lights up and a signal sounds. Make sure that the safety belts are positioned correctly. The safety belt

reminder can also be activated if objects are placed on the front passenger seat.

## **Front head restraints**

## **Safety information**

### 🛆 WARNING

A missing protective effect due to removed or not correctly adjusted head restraints can cause injuries in the head and neck area. There is a risk of injury.

- Before driving, install the removed head restraints on the occupied seats.
- Adjust the head restraint so its center supports the back of the head at as close to eye level as possible.
- Adjust the distance so that the head restraint is as close as possible to the back of the head. Adjust the distance via the backrest tilt as needed.

### \land WARNING

Body parts can be jammed when moving the head restraint. There is a risk of injury. Make sure that the area of movement is clear when moving the head restraint.


### \land WARNING

Objects on the head restraint reduce the protective effect in the head and neck area. There is a risk of injury.

- ▷ Do not use seat or head restraint covers.
- Do not hang objects, for instance clothes hangers, directly on the head restraint.
- Only use accessories that have been determined to be safe for attachment to a head restraint.

 Do not use any accessories, for instance pillows, while driving.

## Adjusting the height

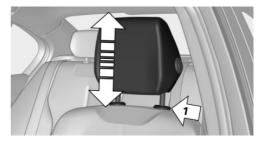


- ▶ To raise: push the head restraint up.
- To lower: press button, arrow 1, and push head restraint down.

After setting the height, move the head restraint up or down slightly, making sure it engages properly.

### Removing

Only remove the head restraint if no one will be sitting in the seat in question.

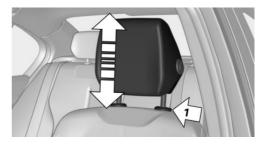

- 1. Raise the head restraint up against the resistance.
- 2. Press the button, arrow 1, and pull the head restraint out completely.

### Installing

Proceed in the reverse order to install the head restraint.

## **Rear head restraints**

## **Safety information**

### 

A missing protective effect due to removed or not correctly adjusted head restraints can cause injuries in the head and neck area. There is a risk of injury.

- Before driving, install the removed head restraints on the occupied seats.
- Adjust the head restraint so its center supports the back of the head at as close to eye level as possible.
- Adjust the distance so that the head restraint is as close as possible to the back of the head. Adjust the distance via the backrest tilt as needed.

### \rm MARNING

Body parts can be jammed when moving the head restraint. There is a risk of injury. Make sure that the area of movement is clear when moving the head restraint.


### 🛆 WARNING

Objects on the head restraint reduce the protective effect in the head and neck area. There is a risk of injury.

- ▷ Do not use seat or head restraint covers.
- ▷ Do not hang objects, for instance clothes hangers, directly on the head restraint.
- Only use accessories that have been determined to be safe for attachment to a head restraint.
- Do not use any accessories, for instance pillows, while driving.

### Height

#### Settings

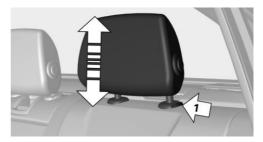


- ▷ To lower: press the button, arrow 1, and push the head restraint down.
- ▷ To raise: push the head restraint up.

After setting the height, move the head restraint up or down slightly, making sure it engages properly.

### Folding down the head restraint


Only fold the head restraint back if no one will be sitting in the seat in question.

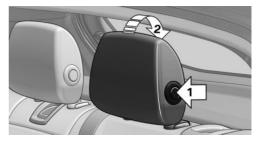

- ▷ To the back: press the button, arrow 1, and fold the head restraint back, arrow 2.
- Forward: fold the head restraint toward the front as far as it will go. Make sure that the head restraint engages correctly.

### Removing

Only remove the head restraint if no one will be sitting in the seat in question.

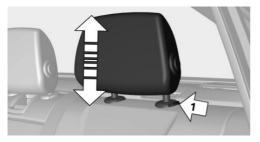

- 1. Raise the head restraint up against the resistance.
- 2. Press the button, arrow 1, and pull the head restraint out completely.

### Installing

Proceed in the reverse order to install the head restraint.

## **Memory function**

### Concept

The following settings can be stored and, if necessary, retrieved using the memory function:

- Seat position.
- Exterior mirror position.

### **General information**

Two memory locations with different settings can be set for each driver profile, refer to page 74.

Depending on the vehicle equipment, the following settings are not stored:

- Backrest width.
- ▷ Lumbar support.

## **Safety information**

### 🛆 WARNING

Using the memory function while driving can lead to unexpected movements of the seat. Vehicle control could be lost. There is a risk of an accident. Only retrieve the memory function when the vehicle is stationary.

### 🛆 WARNING

There is a risk of jamming when moving the seats. There is a risk of injury or risk of damage to property. Make sure that the area of movement of the seat is clear prior to any adjustment.

### **Overview**



### Storing

- 1. Switch on the ignition.
- 2. Set the desired position.
- 3. SET Press button. The LED in the button lights up.
- 4. Press selected button 1 or 2 while the LED is lit. The LED goes out.



Button was pressed inadvertently: Press button again.

The LED goes out.

### **Calling up settings**

The stored position is called up automatically. Press selected button 1 or 2.

The procedure stops when a switch for setting the seat or one of the memory buttons is pressed.

While driving, the seat position adjustment on the driver's side is interrupted after a short time.

## Calling up of a seat position deactivated

After a brief period, calling up stored seat positions is deactivated to save battery power.

To reactivate calling up of a seat position:

- > Open and close the door or tailgate.
- > Press a button on the remote control.
- Press the Start/Stop button.

dent. Estimate the distance to the traffic behind by looking over your shoulder.

#### **Overview**



- 1 Settings
- 2 Selecting a mirror, Automatic Curb Monitor
- 3 Folding in and out

### **Selecting a mirror**



To change over to the other mirror: Slide the switch.

### Adjusting electrically



#### Press button.

The mirror movement follows the button movement.

### Malfunction

In case of an electrical malfunction, adjust the mirror by pressing the edges of the mirror glass.

### Folding in and out

### 

Depending on the vehicle width, the vehicle can be damaged in vehicle washes. There is a risk of damage to property. Before washing, fold in the mirrors by hand or with the button.



Press button.

## Mirrors

### **Exterior mirrors**

### **General information**

The mirror on the front passenger side is more curved than the driver's side mirror.

The mirror setting is stored for the driver profile currently in use. When the vehicle is unlocked via the remote control, the position is automatically retrieved if the function, refer to page 77, is activated for this purpose.

The current exterior mirror position can be stored using the memory function, refer to page 91.

### Safety information

## 🛆 WARNING

Objects reflected in the mirror are closer than they appear. The distance to the traffic behind could be incorrectly estimated, for instance while changing lanes. There is a risk of an acciFolding is only possible up to a speed of approx. 15 mph/20 km/h.

Folding the mirrors in and out is helpful in the following situations:

- In vehicle washes.
- On narrow roads.

Mirrors that were folded in are folded out automatically at a speed of approx. 25 mph/40 km/h.

#### **Automatic heating**

Both exterior mirrors are automatically heated whenever the ignition is switched on.

### Automatic dimming feature

The exterior mirror on the driver's side is automatically dimmed. Photocells in the interior mirror are used to control this.

## Automatic Curb Monitor, exterior mirror

#### Concept

If reverse gear is engaged, the mirror glass on the front passenger side is tilted downward. This improves your view of the curb and other low-lying obstacles when parking, for instance.

#### Activating

- 1. Slide the switch to the driver's side mirror position.
- 2. Engage selector lever position R.


#### Deactivating



Slide the switch to the passenger's side mirror position.


## Interior mirror, manually dimmable

#### **Flip lever**

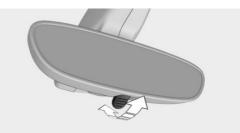

To reduce the blinding effect of the interior mirror, flip the lever forward.


#### Turn knob

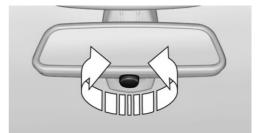

Turn the knob to reduce the blinding effect by the interior mirror.

## Interior mirror, automatic dimming feature

#### **Overview**

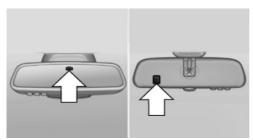

Photocells are used for control:

- ▷ In the mirror glass.
- ▷ On the back of the mirror.

### **Functional requirements**

- ▶ Keep the photocells clean.
- Do not cover the area between the interior mirror and the windshield.


## **Steering wheel**

## **Safety information**

### 🛆 WARNING

Steering wheel adjustments while driving can lead to unexpected steering wheel movements. Vehicle control could be lost. There is a risk of an accident. Adjust the steering wheel while the vehicle is stationary only.

### Settings

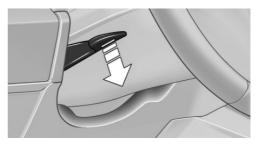

- 1. Fold the lever down.
- 2. Move the steering wheel to the preferred height and angle to suit your seating position.
- 3. Fold the lever back up.

## Heated steering wheel

#### **Overview**





Heated steering wheel

### Switching on/off



Press button.

- ▷ On: the LED lights up.
- ▷ Off: the LED goes out.

## **Transporting children safely**

# Vehicle features and options

This chapter describes all standard, country-specific and optional features offered with the series. It also describes features that are not necessarily available in your vehicle, e. g., due to the selected options or country versions. This also applies to safety-related functions and systems. When using these functions and systems, the applicable laws and regulations must be observed.

## The right place for children

## **Safety information**

### \land WARNING

Unattended children or animals can cause the vehicle to move and endanger themselves and traffic, for instance due to the following actions:

- ▷ Pressing the Start/Stop button.
- ▷ Releasing the parking brake.
- Opening and closing the doors or windows.
- ▷ Engaging selector lever position N.
- ▷ Using vehicle equipment.

There is a risk of accidents or injuries. Do not leave children or animals unattended in the vehicle. Take the remote control with you when exiting and lock the vehicle.

## Always transport children in the rear seat

### **General information**

Accident research shows that the safest place for children is in the rear seat.

Transport children younger than 13 years of age or shorter than 5 ft/150 cm only in the rear seat in suitable child restraint systems designed for the age, weight and size of the child. Children 13 years of age or older must wear a safety belt as soon as a suitable child restraint system can no longer be used due to their age, weight, and size.

### **Safety information**

### 🛆 WARNING

The safety belt cannot be fastened correctly on children shorter than 5 ft, 150 cm without suitable additional child restraint systems. The efficacy of safety gear, including safety belts, can be limited or lost when safety belts are fastened incorrectly. An incorrectly fastened safety belt can cause additional injuries, for instance in the event of an accident or during braking and evasive maneuvers. There is a risk of injuries or danger to life. Secure children shorter than 5 ft, 150 cm using suitable child restraint systems.

## Children on the front passenger seat

### **General information**

Should it ever be necessary to use a child restraint system in the front passenger seat, make sure that the front, knee and side airbags on the front passenger side are deactivated. Automatic deactivation of front-seat passenger airbags, refer to page 138.

### **Safety information**

### 🛆 WARNING

Active front-seat passenger airbags can injure a child in a child restraint system when the airbags are activated. There is a risk of injury. Make sure that the front-seat passenger airbags are deactivated and that the PASSEN-GER AIRBAG OFF indicator light lights up.

## \land WARNING

The stability of the child restraint system is limited or compromised with incorrect seat adjustment or improper installation of the child seat. There is a risk of injuries or danger to life. Make sure that the child restraint system fits securely against the backrest. If possible, adjust the backrest tilt for all affected backrests and correctly adjust the seats. Make sure that seats and backrests are securely engaged or locked. If possible, adjust the height of the head restraints or remove them.

# Installing child restraint systems

## **General information**

Pay attention to the specifications of the child restraint system manufacturer when selecting, installing, and using child restraint systems.

## **Safety information**

### \land WARNING

The stability of the child restraint system is limited or compromised with incorrect seat adjustment or improper installation of the child seat. There is a risk of injuries or danger to life. Make sure that the child restraint system fits securely against the backrest. If possible, adjust the backrest tilt for all affected backrests and correctly adjust the seats. Make sure that seats and backrests are securely engaged or locked. If possible, adjust the height of the head restraints or remove them.

### 🛆 WARNING

The protective effect of damaged child restraint systems or of child restraint systems exposed to an accident and their fastening systems can be limited or lost. A child can e.g.,not sufficiently restrained, for instance in the event of an accident or braking and evasive maneuvers. There is a risk of injuries or danger to life. Have damaged child restraint systems or of child restraint systems exposed to an accident and their fastening systems checked and possibly replaced by the dealer's service center or another qualified service center or repair shop.

## On the front passenger seat

### **Deactivating airbags**

### 🛆 WARNING

Active front-seat passenger airbags can injure a child in a child restraint system when the airbags are activated. There is a risk of injury. Make sure that the front-seat passenger airbags are deactivated and that the PASSEN-GER AIRBAG OFF indicator light lights up.

After installing a child restraint system in the front passenger seat, make sure that the front, knee and side airbags on the front passenger side are deactivated.

Deactivate the front-seat passenger airbags automatically, refer to page 138.

### Seat position and height

Before installing a child restraint system, move the front passenger seat as far back as possible and bring it as far up as possible to obtain the best possible position for the belt and to offer optimal protection in the event of an accident.

If the upper anchorage of the safety belt is located in front of the belt guide of the child seat, move the front passenger seat carefully forward until the best possible belt guide position is reached.

#### **Backrest width**

Adjustable backrest width: before installing a child restraint system in the front passenger seat, open the backrest width completely. Do not change the backrest width again and do not call up a memory position.

### **Child seat security**



The rear safety belts and the front passenger safety belt can be permanently locked to fasten child restraint systems.

### Locking the safety belt

- 1. Pull out the belt strap completely.
- 2. Secure the child restraint system with the safety belt.
- Allow the belt strap to be pulled in and pull it tight against the child restraint system. The safety belt is locked.

### Unlocking the safety belt

- 1. Unbuckle the safety belt buckle.
- 2. Remove the child restraint system.

3. Allow the belt strap to be pulled in completely.

# LATCH child restraint fixing system

### **General information**

LATCH: Lower Anchors and Tether for Children.

Pay attention to the operating and safety information of the child restraint system manufacturer when installing and using LATCH child restraint fixing systems.

## Mounts for the lower LATCH anchors

The lower anchors may be used to attach the CRS to the vehicle seat up to a combined child and CRS weight of 65 lbs/30 kg when the child is restrained by the internal harnesses.

### **Safety information**

### 🛆 WARNING

If the LATCH child restraint fixing systems are not correctly engaged, the protective effect of the LATCH child restraint fixing system can be limited. There is a risk of injuries or danger to life. Make sure that the lower anchors are securely engaged and that the LATCH child restraint fixing system fits securely against the backrest.

### Position



Meaning

The corresponding symbol shows the mounts for the lower LATCH anchors.

Seats equipped with lower anchors are marked with a pair, 2, of LATCH symbols.

## Before installing LATCH child restraint fixing systems

Pull the safety belt away from the area of the child restraint system.

## Assembly of LATCH child restraint fixing systems

- 1. Install child restraint system, see manufacturer's information.
- 2. Ensure that both LATCH anchors are properly connected.

# Child restraint systems with tether strap

## **Safety information**

## \rm MARNING

If the upper retaining strap is incorrectly used for the child restraint system, the protective effect can be reduced. There is a risk of injury. Make sure that the upper retaining strap is not guided across sharp edges and without twisting to the upper retaining strap.

### 🛆 WARNING

If the rear backrest is not locked, the protective effect of the child restraint system is limited or there is none. In particular situations, for instance braking maneuvers or in case of an accident, the rear backrest can fold forward. There is a risk of injuries or danger to life. Make sure that the rear backrests are locked.

## 🛆 NOTICE

The anchors for the upper retaining straps of child restraint systems are only provided for these retaining straps. When other objects are mounted, the anchors can be damaged. There is a risk of damage to property. Only mount child restraint systems to the upper retaining straps.


### Anchors



The respective symbol shows the anchor for the upper retaining strap. Seats with an upper top tether are marked with this

symbol. It can be found on the rear seat backrest or the rear window shelf.

## Routing the retaining strap

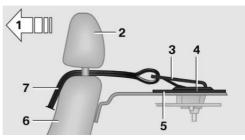

- 1 Direction of travel
- 2 Head restraint
- 3 Hook for upper retaining strap
- 4 Anchor

- 5 Rear window shelf
- 6 Seat backrest
- 7 Upper retaining strap

## Attaching the upper retaining strap to the anchor

- 1. Remove the anchor cover.
- 2. Raise the head restraint.
- 3. Guide the upper retaining strap between or along both sides of the supports of the head restraint to the anchor.
- 4. Attach the hook of the retaining strap to the anchor.
- 5. Tighten the retaining strap by pulling it down.
- 6. Lower and lock head restraints as needed.

## Driving

# Vehicle features and options

This chapter describes all standard, country-specific and optional features offered with the series. It also describes features that are not necessarily available in your vehicle, e. g., due to the selected options or country versions. This also applies to safety-related functions and systems. When using these functions and systems, the applicable laws and regulations must be observed.

## Start/Stop button

### Concept



Pressing the Start/Stop button switches the ignition on or off and starts the engine.

M double-clutch transmission: the engine starts with the brake pedal

pressed when you press the Start/Stop button.

Manual transmission: the engine starts with the clutch pedal pressed when the Start/Stop button is pressed.

### **Ignition on**

M double-clutch transmission: press the Start/ Stop button, and do not press on the brake pedal at the same time.

Manual transmission: press the Start/Stop button without stepping on the clutch pedal.

All vehicle systems are ready for operation.

Most of the indicator/warning lights in the instrument cluster light up for a varied length of time.

To save battery power when the engine is off, switch off the ignition and any unnecessary electronic systems/power consumers.

## **Ignition off**

M double-clutch transmission: press the Start/ Stop button again without stepping on the brake.

Manual transmission: press the Start/Stop button again without stepping on the clutch pedal.

All indicator lights in the instrument cluster go out.

To save battery power when the engine is off, switch off the ignition and any unnecessary electronic systems/power consumers.

### Safety measures

When switching off the ignition, the transmission position P is engaged automatically if the selector lever position D or R is engaged.

The ignition is switched off automatically in the following situations while the vehicle is stationary and the engine is off:

- ▷ When locking the vehicle, and when the low beams are switched on.
- Shortly before the battery is discharged completely, so that the engine can still be started.
- When opening or closing the driver door, if the driver's safety belt is unbuckled and the low beams are switched off.
- While the driver's safety belt is unbuckled with driver's door open and low beams off.

The low beams switch to parking lights after some minutes of no use.

### **Radio-ready state**

### **General information**

In the radio-ready state, certain power consumers remain ready for operation.

### Activating

With the engine running, press the Start/Stop button.

If the engine is not running and the ignition is switched on: the system automatically activates radio-ready state when the door is opened if the lights are switched off or the daytime running lights are switched on.

The radio-ready state remains active if, for instance the ignition is automatically switched off for the following reasons:

- ▷ Opening or closing the driver's door.
- ▷ Unfastening of the driver's safety belt.
- When automatically switching from low beams to parking lights.

### Switching off automatically

The radio-ready state is switched off automatically in the following situations:

- If the ignition is switched off manually with the Start/Stop button.
- ▷ After approx. 8 minutes.
- When the vehicle is locked using the central locking system.
- Shortly before the battery is discharged completely, so that the engine can still be started.

## Starting the engine

### **Safety information**

### 🛆 DANGER

If the exhaust pipe is blocked or ventilation is insufficient, harmful exhaust gases can enter into the vehicle. The exhaust gases contain pollutants which are colorless and odorless. In enclosed areas, exhaust gases can also accumulate outside of the vehicle. There is danger to life. Keep the exhaust pipe free and ensure sufficient ventilation.

### 🛆 WARNING

An unsecured vehicle can begin to move and possibly roll away. There is a risk of an accident. Before exiting, secure the vehicle against rolling.

In order to ensure that the vehicle is secured against rolling away, follow the following:

- ▷ Set the parking brake.
- On uphill grades or on a downhill slope, turn the front wheels in the direction of the curb.
- On uphill grades or on a downhill slope, also secure the vehicle, for instance with a wheel chock.

## A NOTICE

In the case of repeated starting attempts or repeated starting in quick succession, the fuel is not burned or is inadequately burned. The catalytic converter can overheat. There is a risk of damage to property. Avoid repeated starting in quick succession.

### **Gasoline engine**

Depending on the motorization, the full drive power may not be available for approximately 30 seconds after starting the engine. In this case, the vehicle will not accelerate as usual.

### M double-clutch transmission

### Starting the engine

- 1. Depress the brake pedal.
- 2. Press the Start/Stop button.

The ignition is activated automatically for a brief time and is stopped as soon as the engine starts.

### Manual transmission

### **Starting the engine**

- 1. Depress the brake pedal.
- 2. Press on the clutch pedal and shift to neutral.
- 3. Press the Start/Stop button.

The ignition is activated automatically for a brief time and is stopped as soon as the engine starts.

## **Engine stop**

## **Safety information**

### 🛆 WARNING

Unattended children or animals can cause the vehicle to move and endanger themselves and traffic, for instance due to the following actions:

- ▷ Pressing the Start/Stop button.
- ▷ Releasing the parking brake.
- Opening and closing the doors or windows.
- ▷ Engaging selector lever position N.
- ▷ Using vehicle equipment.

There is a risk of accidents or injuries. Do not leave children or animals unattended in the vehicle. Take the remote control with you when exiting and lock the vehicle.

### \land WARNING

An unsecured vehicle can begin to move and possibly roll away. There is a risk of an accident. Before exiting, secure the vehicle against rolling.

In order to ensure that the vehicle is secured against rolling away, follow the following:

▷ Set the parking brake.

- On uphill grades or on a downhill slope, turn the front wheels in the direction of the curb.
- On uphill grades or on a downhill slope, also secure the vehicle, for instance with a wheel chock.

## M double-clutch transmission

### Switching off the engine

- 1. Apply the brakes until the vehicle comes to a stop.
- Press the Start/Stop button.
  The engine is switched off.
  The radio-ready state is switched on.
- 3. Set the parking brake.

## Manual transmission

### Switching off the engine

- 1. With the vehicle at a standstill, press the Start/Stop button.
- 2. Shift into first gear or reverse.
- 3. Set the parking brake.

## **Auto Start/Stop function**

### Concept

The Auto Start/Stop function helps save fuel. The system switches off the engine during a stop, for instance in traffic congestion or at traffic lights. The ignition remains switched on. The engine starts automatically for driving off.

### **General information**

After every start of the engine using the Start/ Stop button, the Auto Start/Stop function is in the last selected state. When the Auto Start/Stop function is active, it is available when the vehicle is traveling faster than about 3 mph/5 km/h.

## **Engine stop**

### **Functional requirements**

The engine is switched off automatically during a stop under the following conditions:

M double-clutch transmission:

- The selector lever is in selector lever position D.
- The brake pedal remains depressed while the vehicle is stopped.
- ▷ The driver's safety belt is buckled or the driver's door is closed.

Manual transmission:

- Neutral is engaged and the clutch pedal is not pressed.
- ▷ The driver's safety belt is buckled or the driver's door is closed.

The air flow from the air conditioner is reduced when the engine is switched off.

### **Displays in the instrument cluster**



The READY display in the tachometer signals that the Auto Start/Stop function is ready to start the engine automatically.



The display indicates that the conditions for an automatic engine stop have not been met.

### **Functional limitations**

The engine is not switched off automatically in situations such as the following:

- In case of a steep downhill grade.
- ▷ External temperature too low.
- ▷ The external temperature is high and automatic climate control is running.
- The car's interior has not yet been heated or cooled to the required level.

- The engine is not yet at operating temperature.
- The wheels are at a sharp angle or the steering wheel is being turned.
- After driving in reverse.
- Where there is a risk of window condensation when the automatic climate control is switched on.
- ▷ Vehicle battery is heavily discharged.
- ▷ At higher elevations.
- ▶ The hood is unlocked.
- Stop-and-go traffic.
- ▷ Use of fuel with high ethanol content.

## Starting the engine

The engine starts automatically under the following conditions:

- M double-clutch transmission: by releasing the brake pedal.
- > Manual transmission: clutch pedal is pressed.

After the engine starts, accelerate as usual.

### Safety mode

After the engine switches off automatically, it will not start again automatically if any one of the following conditions are met:

- The driver's safety belt is unbuckled and the driver's door is open.
- ▷ The hood was unlocked.

Some indicator lights light up for a varied length of time.

The engine can only be started via the Start/Stop button.

### **Functional limitations**

Even if driving off was not intended, the deactivated engine starts up automatically in the following situations:

 Excessive warming of the car's interior when the air conditioning is switched on.

- ▷ The steering wheel is turned.
- Double-clutch transmission: change from selector lever position D to N, R or D/S.
- M double-clutch transmission: accelerating while simultaneously applying the brake.
- The vehicle begins rolling.
- Where there is a risk of window condensation when the automatic climate control is switched on.
- Vehicle battery is heavily discharged.
- Excessive cooling of the car's interior when the heating is switched on.
- Low brake vacuum pressure; this can occur, for instance if the brake pedal is depressed a number of times in succession.

# Preventing an automatic engine stop with aM double-clutch transmission

#### Concept

To make it possible to drive off very quickly, such as at an intersection, the automatic engine stop can be actively prevented.

## Preventing an engine stop using the brake pedal

The engine stop can be actively prevented within one second after the vehicle comes to a standstill:

- Immediately after the vehicle comes to a standstill, briefly press the brake pedal forcefully.
- Then press the brake pedal with normal braking force.

## Activating/deactivating the system manually

#### Using the button



(A) OFF

Press button.

 LED comes on: auto Start/Stop function is deactivated.

The engine is started during an automatic engine stop.

The engine can only be stopped or started via the Start/Stop button.

 LED goes out: auto Start/Stop function is activated.

## Switching off the vehicle during an automatic engine stop

During an automatic engine stop, the vehicle can be switched off permanently, for instance when leaving it.

M double-clutch transmission:

 Press the Start/Stop button. The ignition is switched off. The Auto Start/Stop function is deactivated.

Selector lever position P is engaged automatically.

2. Set the parking brake.

Manual transmission:

- 1. Press the Start/Stop button. The ignition is switched off. The Auto Start/Stop function is deactivated.
- 2. Shift into first gear or reverse.

3. Set the parking brake.

Engine start as usual via Start/Stop button.

### Automatic deactivation

In certain situations, the Auto Start/Stop function is deactivated automatically for safety reasons, for instance if no driver is detected.

### Malfunction

The Auto Start/Stop function no longer switches off the engine automatically. A Check Control message is displayed. It is possible to continue driving. Have the system checked by a dealer's service center or another qualified service center or repair shop.

## **Parking brake**

### **Safety information**

### 🛆 WARNING

An unsecured vehicle can begin to move and possibly roll away. There is a risk of an accident. Before exiting, secure the vehicle against rolling.

In order to ensure that the vehicle is secured against rolling away, follow the following:

- ▷ Set the parking brake.
- On uphill grades or on a downhill slope, turn the front wheels in the direction of the curb.
- On uphill grades or on a downhill slope, also secure the vehicle, for instance with a wheel chock.

## Applying

The lever automatically engages after being pulled up.



The indicator light lights up red. The parking brake is set.

Lower light: indicator light in Canadian models

If for once use during driving is required, engage the parking brake slightly and hold the button down.

To prevent corrosion and one-sided brake action, lightly apply the parking brake periodically while coasting, if traffic conditions permit.

The brake lights will not light up if the parking brake is set.

### Releasing



Raise lever slightly, press the button and guide the lever down.

# Turn signal, high beams, headlight flasher


## **Turn signal**

### Turn signal in exterior mirror

When driving and during operation of the turn signals or hazard warning system, do not fold in the exterior mirrors, so that the signal lights on the exterior mirror are easy to see.

#### BRAKE

### Using turn signals

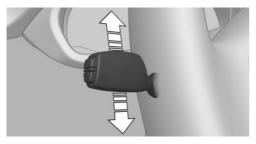

Press the lever past the resistance point.

### Triple turn signal activation

Lightly tap the lever up or down.

The turn signal flashes three times.

The function can be activated or deactivated. Via iDrive:

- 1. "My Vehicle"
- 2. "Vehicle settings"
- 3. "Lighting"
- 4. "Exterior lighting"
- 5. "One-touch turn signal"
- 6. Select the desired setting.

Settings are stored for the profile currently used.

### **Signaling briefly**

Press the lever to the resistance point and hold it there for as long as you want the turn signal to flash.

### Malfunction

Unusually rapid flashing of the indicator light indicates that a turn signal bulb has failed.

## High beams, headlight flasher

Push the lever forward or pull it backward.



- High beams on, arrow 1.
  The high beams light up when the low beams are switched on.
- ▶ High beams off/headlight flasher, arrow 2.

## Washer/wiper system

### **General information**

Do not use the wipers if the windshield is dry, as this may damage the wiper blades or cause them to become worn more quickly.

### **Safety information**

### 🛆 WARNING

If the wipers start moving in the folded away state, body parts can be jammed or damage may occur to parts of the vehicle. There is a risk of injury or risk of damage to property. Make sure that the vehicle is switched off when the wipers are in the folded away state and the wipers are folded in when switching on.

## 🛆 NOTICE

If the wipers are frozen to the windshield, the wiper blades can be torn off and the wiper motor can overheat when switching on. There is a risk of damage to property. Defrost the windshield prior to switching the wipers on.

### Switching on



Press the lever up until the desired position is reached.

- Resting position of the wipers, position 0.
- Intermittent operation or rain sensor, position 1.
- ▷ Normal wiper speed, position 2.
- ▶ Fast wiper speed, position 3.

When travel is interrupted with the wiper system switched on: when travel continues, the wipers resume at their previous speed.

### Switching off and brief wipe



Press the lever down.

- Switching off: press the lever down until it reaches its standard position.
- Brief wipe: press the lever down from the standard position.

The lever automatically returns to its initial position when released.

### Interval mode or rain sensor

### Concept

The rain sensor automatically controls the time between wipes depending on the intensity of the rainfall.

### **General information**

The sensor is located on the windshield, directly in front of the interior mirror. Without the rain sensor, the frequency of the wiper operation is preset.

### **Safety information**

## 

If the rain sensor is activated, the wipers can accidentally start moving in vehicle washes. There is a risk of damage to property. Deactivate the rain sensor in vehicle washes.

### Activating



Press the lever up once from its standard position, arrow 1.

Wiping is started.


The LED in the wiper lever is illuminated.

If wipers are frozen to windshield, wiper operation is deactivated.

### Deactivating

Press the lever back into the standard position.

## Setting the frequency or sensitivity of the rain sensor

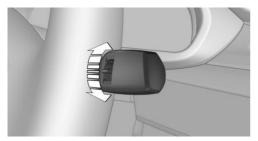

Turn the thumbwheel to adjust the frequency or sensitivity of the rain sensor.

Up: short interval or high sensitivity of the rain sensor.

Down: long interval or low sensitivity of the rain sensor.

## Windshield and headlight washer system

### **Safety information**

### \rm MARNING

The washer fluid can freeze onto the window at low temperatures and obstruct the view. There is a risk of an accident. Only use the washer systems, if the washer fluid cannot freeze. Use washer fluid with antifreeze, if needed.

### 

When the washer fluid reservoir is empty, the wash pump cannot work as intended. There is a risk of damage to property. Do not use the washer system when the washer fluid reservoir is empty.

#### **Cleaning the windshield**



Pull the lever.

The system sprays washer fluid on the windshield and activates the wipers briefly.

In addition, the headlights are cleaned at regular intervals when the vehicle's lights are switched on.

#### Windshield washer nozzles

The washer jets are automatically heated whenever the ignition is switched on.

### Fold-away position of the wipers

#### Concept

The fold-out position enables the wipers to be folded away from the windshield.

#### **General information**

Important, for instance when changing the wiper blades or when folding out under frosty conditions.

### **Safety information**

### \land WARNING

If the wipers start moving in the folded away state, body parts can be jammed or damage may occur to parts of the vehicle. There is a risk of injury or risk of damage to property. Make sure that the vehicle is switched off when the wipers are in the folded away state and the wipers are folded in when switching on.

#### 🛆 NOTICE

If the wipers are frozen to the windshield, the wiper blades can be torn off and the wiper motor can overheat when switching on. There is a risk of damage to property. Defrost the windshield prior to switching the wipers on.

#### Folding away the wipers

- 1. Switch the ignition on and off again.
- 2. Press and hold the wiper level down, until the wipers stop in a close to vertical position.



3. Fold the wipers all the way away from the windshield.



#### Folding down the wipers

After the wipers are folded back down, the wiper system must be reactivated.

- 1. Fold the wipers back down onto the windshield.
- 2. Switch on the ignition.
- 3. Push wiper lever down. Wipers return to their resting position and are ready again for operation.

# Washer fluid

#### **General information**

All washer nozzles are supplied from one reservoir.

Use a mixture of tap water and windshield washer concentrate. If desired, a windshield washer concentrate containing antifreeze can be used.

Recommended minimum fill quantity: 0.2 US gal/1 liter.

### **Safety information**

#### \Lambda WARNING

Some antifreeze agents can contain harmful substances and are flammable. There is a risk of fire and a risk of injury. Follow the instructions on the containers. Keep antifreeze away from ignition sources. Do not refill operating materials into different bottles. Store operating materials out of reach of children.

United States: the washer fluid mixture ratio is regulated by the U.S. EPA and many individual states; do not exceed the allowable washer fluid dilution ratio limits that apply. Follow the usage instructions on the washer fluid container.

Use of BMW's Windshield Washer Concentrate or the equivalent is recommended.

#### \rm MARNING

Washer fluid can ignite and catch fire on contact with hot engine parts. There is a risk of injury or risk of damage to property. Only add washer fluid when the engine is cooled down. Next, fully close the lid of the washer fluid reservoir.

#### 

Silicon-containing additives in the washer fluid for the water-repelling effect on the windows can lead to damage to the washing system. There is a risk of damage to property. Do not add silicon-containing additives to the washer fluid.

### 

Mixing different windshield washer concentrates or antifreeze can damage the washing system. There is a risk of damage to property. Do not mix different windshield washer concentrates or antifreeze. Follow the information and mixing ratios provided on the containers.

#### **Overview**



The washer fluid reservoir is located in the engine compartment.

#### Malfunction

The use of undiluted windshield washer concentrate or alcohol-based antifreeze can lead to incorrect readings at temperatures below +5 °F/-15 °C.

## **Manual transmission**

#### Safety information

#### 🛆 WARNING

An unsecured vehicle can begin to move and possibly roll away. There is a risk of an accident. Before exiting, secure the vehicle against rolling.


In order to ensure that the vehicle is secured against rolling away, follow the following:

- ▷ Set the parking brake.
- On uphill grades or on a downhill slope, turn the front wheels in the direction of the curb.
- On uphill grades or on a downhill slope, also secure the vehicle, for instance with a wheel chock.

### 🛆 NOTICE

When shifting to a lower gear, excessive speeds can damage the engine. There is a risk of damage to property. When shifting into 5th or 6th gear, press the gearshift lever to the right.

#### Schematic diagram

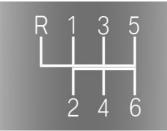

- ▷ 1 6: forward gears
- ▷ R: reverse

#### Shifting

#### **General information**

Depending on the engine installation, the engine speed during a shifting operation is adjusted automatically as required for harmonious and dynamic gear shifting.

#### **Reverse gear**

Select only when the vehicle is stationary.

To overcome the resistance push the gearshift lever dynamically to the left and engage reverse gear with a forward shifting movement.

#### **Rolling or pushing the vehicle**

In some situations, the vehicle is to roll without its own power, for instance in a vehicle wash, or be pushed.

- 1. Switch on the ignition.
- 2. Press on the clutch pedal and shift out of a forward gear or reverse.
- 3. Release the parking brake.

### M double-clutch transmission with Drivelogic

#### **General information**

The M double-clutch transmission with Drivelogic is an automatic shift transmission with two clutches and partial transmissions in which the gears can be changed without interrupting the tractive force.

The operation is via the selector lever or two shift paddles on the steering wheel.

#### **Functions**

- Drive mode or Sequential mode.
- ▷ Various drive programs, Drivelogic.

- Automatic downshifting and protection from misshifting even in sequential mode.
- Launch Control.
- Low Speed Assistant.

#### **Safety information**

#### \Lambda WARNING

An unsecured vehicle can begin to move and possibly roll away. There is a risk of an accident. Before exiting, secure the vehicle against rolling.

In order to ensure that the vehicle is secured against rolling away, follow the following:

- ▷ Set the parking brake.
- On uphill grades or on a downhill slope, turn the front wheels in the direction of the curb.
- On uphill grades or on a downhill slope, also secure the vehicle, for instance with a wheel chock.

# Selector lever, selector lever positions

#### Overview



- R: reverse gear.
- ▷ N: neutral.
- Center position, forward position.
- ► +: manual upshifting.
- -: manual downshifting.

 D/S: switch between drive mode and sequential mode.

#### **Engaging a selector lever position**

Press on the brake pedal and pull or push the selector lever in the corresponding direction.

As soon as the selector lever is released, it reverts to the center position. In position R, the selector lever locks.

The engaged selector lever position is displayed in the instrument cluster and on the selector lever.

If a selector lever position is engaged, the vehicle may start rolling, after the brake is released, for instance on downhill slopes. Thus, drive off immediately after releasing the brake.

Use the Slow Speed Assistant for maneuvering and during stop-and-go traffic.

#### Low Speed Assistant

#### Concept

The Low Speed Assistant gives assistance at very low speeds. The vehicle moves at walking speed.

This can also be used for rocking the vehicle in the snow. To do this, switch between reverse gear and forward gear without stepping on the brakes in the process.

#### Safety information

#### 

When using the function and simultaneously stepping on the brake pedal for a longer time, the transmission can overheat. There is a risk of damage to property. When using the function, do not brake for a longer period.

#### Activating

- 1. Engage a driving position.
- 2. Briefly tap the accelerator pedal.

In 1st and 2nd gear and in reverse, the vehicle rolls at minimum speed.

#### Deactivating

Apply the brakes until the vehicle comes to a stop.

#### Flashing display on the selector lever of the double clutch transmission

The actually engaged transmission position can deviate from the selector lever position in some situations. The display in the selector lever flashes.

Observe the display in the instrument cluster in these cases.

#### D is Drive mode

In Drive mode, all forward gears are automatically changed.

Kickdown: for maximum acceleration, for instance when passing. To do this, depress the accelerator pedal past the resistance point.

Switch to Sequential mode: shift using the shift paddles or the selector lever, or push the selector lever in the D/S direction.

#### S is Sequential mode

Use the shift paddles or the selector lever to upshift or downshift without letting off the gas.

- Shortly before falling below a gear-dependent minimum speed, the transmission is automatically downshifted.
- Upshifting or downshifting is done only if the rpm and vehicle speed are appropriate.

E.g., there is no downshifting if the engine speed is too high.

- Kickdown: the lowest possible gear is selected by simultaneously operating the kickdown and the left shift paddle or selector lever.
- It is also possible to start out in 2nd gear, for instance on icy roads.

Switch to Drive mode: push selector lever in D/S direction.

#### **Reverse R**

Select only when the vehicle is stationary.

It is also possible to rock the vehicle up to 6 mph/10 km/h. To do this, switch between forward gear and reverse gear without stepping on the brakes in the process.

#### **N** is Neutral

The vehicle may roll in selector lever position N, for instance in vehicle washes, refer to page 251.

#### P Park

The drive wheels are blocked.

P is engaged automatically:

- After the engine is switched off, if the vehicle is in radio-ready state, refer to page 100, or if the ignition is switched off, refer to page 100, and if position R or D is set.
- ▶ With the ignition is off, if position N is set.

#### **Rolling or pushing the vehicle**

#### **General information**

In some situations, the vehicle is to roll without its own power for a short distance, for instance in a vehicle wash, or be pushed.

#### **Engaging selector lever position N**

- 1. Start the engine while pressing on the brake pedal.
- 2. If necessary, release the parking brake.
- 3. Depress the brake pedal.
- 4. Engage selector lever position N.
- 5. Switch the engine off.

In this way, the ignition remains switched on, and a Check-Control message is displayed.

The vehicle may roll.

#### 

Selector lever position P is automatically engaged when the ignition is switched off. There is a risk of damage to property. Do not switch ignition off in vehicle washes.

Irrespective of the ignition, the selector lever position P is automatically engaged after approx. 15 minutes.

# Displays in the instrument cluster

P

The selector lever position is displayed, for example: P.

#### Information

When the external temperature is very low, the display may not work. Current driving direction is recognizable at the engaged selector lever position.

#### **Gear change**

#### **General information**


Shifting in Sequential mode possible.

A shift in Drive mode causes a switch to Sequential mode.

#### Using the selector lever

- ▷ To shift up: pull the selector lever rearwards.
- To shift down: press the selector lever forward.

# Using the shift paddles on the steering wheel

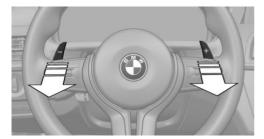

- Shift up: pull right shift paddle.
- ▷ Shift down: pull left shift paddle.

#### Drivelogic

#### **General information**

Various driving programs are available.

After each switch between Sequential mode and Drive mode, the last program selected is an active.

Exception: after each engine start, driving program 1 is active in Drive mode.

#### In Drive mode

Choice of three driving programs:

- ▷ D1: efficient driving.
- D2: relaxed driving.
- D3: sporty driving.

#### In Sequential mode

Choice of three driving programs:

- S1: comfortable shifting operations.
- S2: sporty, fast shifting operations.
- S3: maximum shifting speed, Launch Control.

# Selecting driving program using button in center console



Press the button repeatedly until the desired driving program is displayed in the instrument cluster.

#### Selecting driving program using M Drive

Via iDrive:

- 1. "My Vehicle"
- 2. "M Drive 1" or "M Drive 2"
- 3. "Transmission"
- 4. Turn the Controller until the desired setting is reached and press the Controller.
  - ▶ "D1" to "D3": Drive mode.
  - ▶ "S1" to "S3": sequential mode.
- 5. Selecting another driving program.

When M Drive is active, setting is immediately applied.

To activate M Drive with the selected settings, press the corresponding button on the steering wheel:



▶ (M)2

#### 🛆 WARNING

Depending on the setting, the DSC may only be available to a limited extent or may not be available with activated M drive. There is a risk of accidents or risk of damage to property. Heed the settings for DSC in the M drive and react actively, if necessary. Modify your driving style and react, if necessary.

#### **Display in the instrument cluster**



Selected driving program corresponds to the number of illuminated fields.

#### Launch Control

#### Concept

Launch Control enables optimum acceleration on surfaces with good traction.

#### **General information**

The use of Launch Control causes premature component wear since this function represents a very heavy load for the vehicle.

Do not use Launch Control during the break-in, refer to page 197, period.

#### Requirements

Launch Control is available when the engine is warmed up, that is, after uninterrupted driving of at least 6 miles/10 km.

To start with Launch Control do not steer the steering wheel.

#### **Activate Launch Control**

- 1. Deactivate Dynamic Stability Control, refer to page 157.
- 2. Select Sequential mode with gear 1.

- 3. With the engine running, apply the brake with the left foot.
- Fully depress the accelerator pedal. The starting engine speed adjusts.
- 5. If necessary, change the starting engine speed by 500 rpm via cruise control.
- 6. Release the brake, the vehicle accelerates. Continue to depress the accelerator pedal.

Upshifting occurs automatically as long as the accelerator pedal is fully depressed.

Launch Control is available again only after a certain distance has been driven.

#### **System limits**

This transmission has an overheating protection mechanism, which protects the clutch from extreme stress.



Indicator light lights up yellow: transmission too hot.

Avoid high engine stress and frequent starts.

 Indicator light lights up red: transmission is overheating.

Further driving at a moderate pace is possible. At the next opportunity, stop the vehicle, shut off the engine and allow the transmission to cool down.

Avoid fast starts. On uphill grades, do not keep the vehicle stationary by applying a small amount of acceleration while riding the clutch, as this may cause the transmission to overheat.

During traffic jams or at very low speeds, use the Low Speed Assistant, refer to page 112.

### **M Engine Dynamics** Control

#### Concept

The M Engine Dynamics Control affects the response of the vehicle to accelerator pedal movements.

#### **Programs**

Response behavior options:

- ▷ "Sport Plus": spontaneous, direct. Maximum dynamics.
- "Sport": sporty, dynamic.
- ▷ "Efficient": efficient, comfortable, Minimal fuel consumption.

Ideal, for instance in city traffic or on snow.

### Selecting a channel

#### Via iDrive

- 1. "My Vehicle"
- 2. "M Drive 1" or "M Drive 2"
- 3. "Engine"
- 4. Select the desired channel.

When M Drive is active, setting is immediately applied.

To activate M Drive with the selected settings, press the corresponding button on the steering wheel:



#### Using the button



Press the button repeatedly until the desired program is displayed in the instrument cluster.

#### **Display in the instrument cluster**



Engine Dynamics Control with selected program with activated Display of the system states of the driving dynamics,


refer to page 124.

# **Displays**

# Vehicle features and options

This chapter describes all standard, country-specific and optional features offered with the series. It also describes features that are not necessarily available in your vehicle, e. g., due to the selected options or country versions. This also applies to safety-related functions and systems. When using these functions and systems, the applicable laws and regulations must be observed.

## **Overview, instrument cluster**

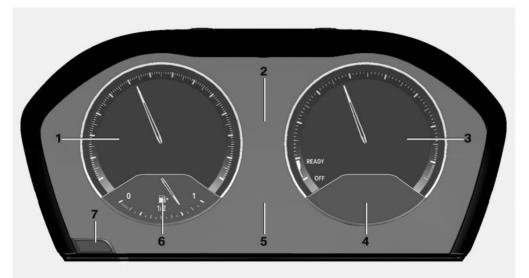

- 1 Speedometer
- 2 Messages, for instance Check Control
- 3 Tachometer 121
- 4 Current consumption

## **Check Control**

#### Concept

The Check Control system monitors functions in the vehicle and notifies you of malfunctions in the monitored systems. Driving dynamics systems

- 5 Electronic displays
- 6 Fuel gage 121
- 7 Reset miles 121

#### **General information**

A Check Control message is displayed as a combination of indicator or warning lights and SMS text messages in the instrument cluster. In addition, an acoustic signal may sound and an SMS text message may appear on the Control Display.

#### Indicator/warning lights

#### **General information**

The indicator/warning lights in the instrument cluster can light up in a variety of combinations and colors.

Several of the lights are checked for proper functioning and light up temporarily when the engine is started or the ignition is switched on.

#### **Red lights**

#### Safety belt reminder

Safety belt on the driver's side is not buckled. For some country versions: passenger belt is not worn or objects are detected on the front passenger seat.

Indicator light flashes or is illuminated: safety belt on the driver or passenger side is not buckled. The safety belt reminder can also be activated if objects are placed on the front passenger seat.

Make sure that the safety belts are positioned correctly.

#### Airbag system



Airbag system and belt tensioner are not working.

Have the vehicle checked immediately by a dealer's service center or another gualified service center or repair shop.

#### Parking brake



The parking brake is set. Release the parking brake, refer to page 105.

BRAKE

#### Approach control warning



Indicator light illuminates: advance warning is issued, for example when there is the impending danger of a collision or

the distance to the vehicle ahead is too small.

Increase distance.

Indicator light flashes: acute warning of the imminent danger of a collision when the vehicle approaches another vehicle at a relatively high differential speed.

Intervention by braking or make an evasive maneuver.

#### Person warning

Symbol in the instrument cluster.

If a collision with a person detected in this way is imminent, the symbol lights up and a signal sounds.

#### Yellow lights

#### Anti-lock Braking System ABS



Braking force boost may not be working. Avoid abrupt braking. Take the longer braking distance into account.

ABS Have the system immediately checked by a dealer's service center or another qualified service center or repair shop.

#### **DSC Dynamic Stability Control**



The indicator light flashes: DSC controls the drive and braking forces. The vehicle is stabilized. Reduce speed and modify your driving style to the driving circumstances.

The indicator light lights up: DSC has malfunctioned.

Have the system checked by a dealer's service center or another qualified service center or repair shop.

DSC, refer to page 157.

#### DSC Dynamic Stability Control deactivated



DSC is deactivated.

DSC, refer to page 157.

#### M Dynamic Mode MDM



M Dynamic Mode MDM is switched on.

M Dynamic Mode (MDM), refer to page 158.



Indicator light also flashes: MDM controls the drive and braking forces. The vehicle is stabilized.



Indicator lights light up: MDM has malfunctioned. Have the system checked by a dealer's service center or another qualified service center or repair shop.

M Dynamic Mode (MDM), refer to page 158.

#### Flat Tire Monitor FTM



The Flat Tire Monitor signals a loss of tire inflation pressure in a tire.

Reduce your speed and stop cautiously. Avoid sudden braking and steering maneuvers. Flat Tire Monitor, refer to page 143.

#### Tire Pressure Monitor TPM

The indicator light lights up: the Tire Pressure Monitor reports a low tire inflation pressure or a flat tire. Follow the information in the Check Control message.

The indicator light flashes and then continuously lights up: no flat tire or loss of tire inflation pressure can be detected.

- Interference caused by systems or devices with the same radio frequency: after leaving the area of the interference, the system automatically becomes active again.
- TPM was unable to complete the reset. Reset the system again.

- A wheel without TPM wheel electronics is mounted: have it checked by a dealer's service center or another qualified service center or repair shop as needed.
- Malfunction: have the system checked by a dealer's service center or another qualified service center or repair shop.

Tire Pressure Monitor, refer to page 139.

#### Steering system



Steering system in some cases not working.

Have the system checked by a dealer's service center or another qualified service center or repair shop.

#### Emissions



▷ The warning light lights up:

Emissions are deteriorating. Have the vehicle checked as soon as possible.

The warning light flashes under certain circumstances:

This indicates that there is excessive misfiring in the engine.

Reduce the vehicle speed and have the system checked immediately; otherwise, serious engine misfiring within a brief period can seriously damage emission control components, in particular the catalytic converter.

Socket for Onboard Diagnosis, refer to page 237.

#### Lane departure warning

7 3

System is switched on and under certain circumstances warns if a detected lane is left without flashing beforehand.

Lane departure warning, refer to page 151.

#### **Green lights**

#### Turn signal



Turn signal switched on.

Unusually rapid flashing of the indicator light indicates that a turn signal bulb has

failed.

Turn signal, refer to page 105.

#### Parking lights, headlight

Parking lights or headlights are switched on.

#### High-beam Assistant

High-beam Assistant is switched on. High beams are switched on and off automatically depending on the traffic sit-

uation.

High-beam Assistant, refer to page 133.

#### Cruise control



The system is switched on. It maintains the speed that was set using the control elements on the steering wheel.

#### **Blue lights**

#### High beams



High beams are switched on. High beams, refer to page 106.

#### **Hiding Check Control messages**



Press and hold button on signal lever.

#### **Continuous display**

Some Check Control messages are displayed continuously and are not cleared until the malfunction is eliminated. If several malfunctions occur at once, the messages are displayed consecutively.

The messages can be hidden for approx. 8 seconds. After this time, they are displayed again automatically.

#### **Temporary display**

Some Check Control messages are hidden automatically after approx. 20 seconds. The Check Control messages are stored and can be displayed again later.

# Displaying stored Check Control messages

Via iDrive:

- 1. "My Vehicle"
- 2. "Vehicle status"
- 3. 🛕 "Check Control"
- 4. Select the SMS text message.

### Display

#### **Check Control**



At least one Check Control message is displayed or is stored.

#### SMS text messages

SMS text messages in combination with a symbol in the instrument cluster explain a Check Control message and the meaning of the indicator/warning lights.

#### Supplementary SMS text messages

Additional information, such as on the cause of an error or the required action, can be called up via Check Control.

With urgent messages the added text will be automatically displayed on the Control Display.

#### Functions

Depending on the Check Control message, the following functions can be selected.

"Owner's Manual"

Display additional information about the Check Control message in the Integrated Owner's Manual.

"Service request"

Contact a dealer's service center or another qualified service center or repair shop.

"BMW Roadside Assistance"

Contact Roadside Assistance.

#### Messages after trip completion

Special messages displayed while driving are displayed again after the ignition is switched off.

### **Fuel gauge**



An arrow beside the fuel pump symbol shows which side of the vehicle the fuel filler flap is on. Vehicle tilt position may cause the display to vary.

Follow the information on refueling.



The yellow indicator light illuminates, once the fuel reserve is reached.

# Tachometer

Always avoid engine speeds in the red warning field. In this range, the fuel supply is reduced to protect the engine.

### **Coolant temperature**

If the coolant along with the engine becomes too hot, a Check Control message is displayed.



A red indicator light is displayed.

Check the coolant level.

# Odometer and trip odometer

#### Display



- ▷ Odometer, arrow 1.
- ▷ Trip odometer, arrow 2.

#### Show/reset miles



Press the button.

- When the ignition is switched off, the time, the external temperature and the odometer are displayed.
- When the ignition is switched on, the trip odometer is reset.

### **External temperature**

#### **General information**

If the indicator drops to +37  $^\circ\text{F}/\text{+}3\,^\circ\text{C}$  or lower, a signal sounds.

A Check Control message is displayed. There is an increased risk of ice on roads.

#### **Safety information**

#### \rm MARNING

Even at temperatures above +37 °F/+3 °C there can be a risk of icy roads, for instance on bridges or shady sections of road. There is a risk of an accident. Modify your driving style to the weather conditions at low temperatures.

### Display

+74.0 °F

The external temperature is displayed in the instrument cluster.

# Time

	The time is displayed in the in- strument cluster.
11:35	The time can be set on the Con- trol Display.

# Date

13/12/23	The date is displayed in the in- strument cluster.
	The date can be set on the Con- trol Display.

# Gear display with Drivelogic

#### **Sequential mode**



- Engaged gear, arrow 1.
- Selected driving program, Drivelogic, arrow 2.

#### **Drive mode**



- Engaged gear together with a D, arrow 1.
- Selected driving program, Drivelogic, arrow 2.

### Range

### **General information**

With a low remaining range:

- ▷ A Check Control message is displayed briefly.
- ▷ The remaining range is shown on the Onboard Computer.
- With a dynamic driving style, for instance taking curves aggressively, the engine function is not always ensured.

The Check Control message appears continuously below a range of approx. 30 miles/50 km.

### Safety information

### 

With a driving range of less than 30 miles/50 km the engine may no longer have sufficient fuel. Engine functions are not ensured anymore. There is a risk of damage to property. Refuel promptly.

#### Display



The current range is displayed in the instrument cluster.

### **Current consumption**

#### Instrument cluster



Displays the current fuel consumption. Check whether you are currently driving in an efficient and environmentally-friendly manner.

# Displaying the current consumption

Depending on your vehicle's optional features, the current consumption can also be displayed as bar in the instrument cluster.

Via iDrive:

- 1. "My Vehicle"
- 2. "iDrive settings"
- 3. "Displays"
- 4. "Instrument panel"
- 5. If necessary, "M dynamic driving systems"

The display for the current consumption is active.

Display of the driving dynamics systems, refer to page 124.

### **Energy recovery**

#### Display



In coasting overrun mode the kinetic energy of the vehicle is converted to electrical energy. The vehicle battery is partially charged and fuel consumption can be re-

duced.

# **EfficientDynamics display**

### **Displaying Efficient Dynamics**

Information on fuel consumption and technology can be displayed while driving.

- 1. "My Vehicle"
- 2. "Technology in action"
- 3. "EfficientDynamics"

# Displaying fuel consumption history

The average fuel consumption can be displayed within an adjustable time frame.

- 1. "My Vehicle"
- 2. "Technology in action"
- 3. "EfficientDynamics"
- 4. Select the symbol.

#### **Selecting route length**

- 1 OPT
  - Press button.
- 2. Select the desired setting.

# Resetting fuel consumption history

- Press button.
- 2. "Reset consumption history"

# Displaying EfficientDynamics info

The current efficiency can be displayed.

- 1. "My Vehicle"
- 2. "Technology in action"
- 3. "EfficientDynamics"
- 4. 😔 Select the symbol.

The following systems are displayed:

- ▷ Auto Start/Stop function.
- ▷ Energy recovery.
- Climate control output.

## **Driving dynamics systems**

#### Display



The driving dynamics system states are displayed in the instrument cluster.

#### Symbols Description



M Engine Dynamics Control, refer to page 116.



Servotronic, refer to page 159.

#### **Activate display**

- 1. "My Vehicle"
- 2. "iDrive settings"
- 3. "Displays"
- 4. "Instrument panel"
- 5. If necessary, "M dynamic driving systems"

The display for the driving dynamics systems is active.

Display Current consumption, refer to page 123, and Energy recovery, refer to page 123.

## **Service requirements**

#### Concept

The function displays the service requirements and the corresponding maintenance scopes.

#### **General information**

After the ignition is switched on the instrument cluster briefly displays available driving distance or time to the next scheduled maintenance.

A service advisor can read out the current service requirements from your remote control.

#### Display

# Detailed information on service requirements

More information on the type of service required may be displayed on the Control Display.

Via iDrive:

- 1. "My Vehicle"
- 2. "Vehicle status"
- 3. Service required"

Required maintenance procedures and legally mandated inspections are displayed.

4. Select an entry to call up detailed information.

#### Symbols

Symbols	Description
OK	No service is currently required.
$\triangle$	The deadline for scheduled maintenance or a legally man- dated inspection is approaching.
	The service deadline has already passed.

#### **Entering appointment dates**

Enter the dates for the mandatory vehicle inspections.

Make sure that the vehicle's date and time are set correctly.

Via iDrive:

- 1. "My Vehicle"
- 2. "Vehicle status"
- 3. Service required"
- 4. "Vehicle inspection"
- 5. "Date:"
- 6. Select the desired setting.

#### **Automatic Service Request**

Data regarding the service status or legally mandated vehicle inspections is automatically transmitted to your dealer's service center before your vehicle is due for service.

You can check when your dealer's service center was notified.

Via iDrive:

- 1. "My Vehicle"
- 2. "Vehicle status"
- 3. 🖋 "Teleservice Call"

## **Gear shift indicator**

#### Concept

The system recommends the most fuel efficient gear for the current driving situation.

#### **General information**

The gear shift indicator is active in the sequential mode of the M double clutch transmission and for the manual transmission.

Suggestions to shift gear up or down are displayed in the instrument cluster.

On vehicles without a gear shift indicator, the engaged gear is displayed.

# M double-clutch transmission: displaying

Example	Description
3	Efficient gear is set.
3▶4	Shift into efficient gear.

# **Speed Limit Info**

### **Speed Limit Info**

#### Concept

Speed Limit Info shows the current maximum permitted speed in the instrument cluster.

#### **General information**

The camera in the area of the interior mirror detects traffic signs at the edge of the road as well as variable overhead sign posts. Traffic signs with extra symbols for wet road conditions, etc., are also detected and compared with the vehicle's onboard data, such as from the rain sensor, and will be displayed depending on the situation. The system takes into account the information stored in the navigation system and also displays speed limits present on routes without signs.

#### **Safety information**

#### \rm MARNING

The system cannot serve as a substitute for the driver's personal judgment in assessing visibility and traffic situation. There is a risk of an accident. Adjust driving style to traffic conditions. Watch traffic closely and actively intervene where appropriate.

#### **Overview**

#### Camera



The camera is installed near the interior mirror. Keep the windshield in front of the interior mirror clean and clear.

### Display

#### **General information**

Speed Limit Info is permanently displayed in the instrument cluster.

#### **Speed Limit Info**



Current speed limit.



Speed Limit Info not available.

#### **System limits**

The system may not be fully functional and may provide incorrect information in the following situations:

- ▷ In heavy fog, wet conditions, or snowfall.
- When signs are fully or partially concealed by objects, stickers or paint.

- When driving very close to the vehicle in front of you.
- When driving toward bright lights or strong reflections.
- When the windshield in front of the interior mirror is fogged over, dirty or covered by a sticker, etc.
- In the event of incorrect detection by the camera.
- If the speed limits stored in the navigation system are incorrect.
- In areas not covered by the navigation system.
- ▷ When roads differ from the navigation, such as due to changes in road routing.
- When passing buses or trucks with a speed sticker.
- ▷ If the traffic signs are non-conforming.
- When signs that are valid for a parallel road are detected.
- During calibration of the camera immediately after vehicle delivery.

# **Selection lists**


#### **General information**

Depending on your vehicle's equipment, the following can be displayed or operated using the buttons and the thumbwheel on the steering wheel and the display in the instrument cluster:

- Current audio source.
- Redial phone feature.
- Turn on voice activation system.

It also displays programs of the Driving Dynamics Control.


# Activating a list and adjusting the setting

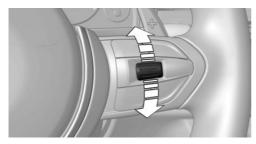

On the right side of the steering wheel, turn the thumbwheel to activate the corresponding list.

- 1. Turn the thumbwheel and select the desired setting.
- 2. Press the thumbwheel.

#### Display

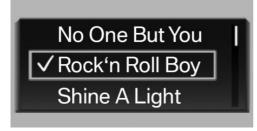


Depending on the equipment version, the list in the instrument cluster may differ from the illustration.

## **Onboard Computer**

#### Concept

The Onboard Computer displays different vehicle data in the instrument cluster, such as average values.

# Calling up information on the Info Display

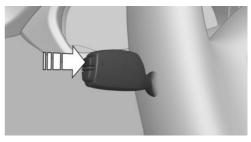

Press and hold the button on the turn signal lever.

Information is displayed in the Info Display of the instrument cluster. Pressing the button repeatedly displays additional information.

#### Information at a glance

Repeatedly pressing the button on the turn signal lever calls up the following information in the Info Display:

- Range.
- ▶ Average consumption, fuel.
- ▷ Current consumption, fuel.
- Average speed.
- ▷ Date.
- ▷ Engine temperature display.
- ▷ Engine oil temperature.
- ⊳ Speed.
- Depending on the equipment, the time of arrival.

When destination guidance is activated in the navigation system.

 Depending on the equipment, the distance to destination.

When destination guidance is activated in the navigation system.

### **Selecting information**

You can select what information from the Onboard Computer is to be displayed on the Info Display of the instrument cluster.

Via iDrive:

- 1. "My Vehicle"
- 2. "iDrive settings"
- 3. "Displays"
- 4. "Instrument panel"
- 5. Select the desired setting.

### Indication in the Info Display



The information from the Onboard Computer is shown in the Info Display in the instrument cluster.

### Information in detail

#### Range

Displays the estimated cruising range available with the remaining fuel.

The range is calculated based on your driving style over the last 20 miles/30 km.

#### Average consumption


The average consumption is calculated for the period while the engine is running.

The average consumption is calculated for the distance traveled since the last reset by the Onboard Computer.

#### Average speed

Periods in which the vehicle is parked with the engine manually stopped are not included in the calculation of the average speed.

#### **Resetting average values**

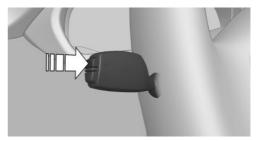

Press and hold the button on the turn signal lever.

#### Engine oil temperature

#### Concept

The current engine oil temperature is displayed in the instrument cluster.

As soon as the optimum operating temperature has been attained, the indicator is in the center position.


#### **General information**

If the engine oil along with the engine becomes too hot, a check control message is displayed too.



When the engine oil temperature is too high, a red indicator light is displayed.

#### Display

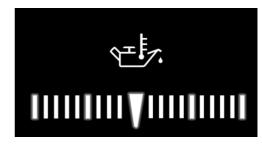

#### **Distance to destination**

Depending on the vehicle equipment, the distance remaining to the destination is displayed if a destination is entered in the navigation system before the trip is started.

The distance to the destination is adopted automatically.

#### **Time of arrival**

#### € 11:35

Depending on the vehicle equipment, the estimated time of arrival is displayed if a destination is entered in the navigation system before the trip is started.

The time must be correctly set.

#### Onboard Computer on the Control Display

#### Concept

The Onboard Computer displays different vehicle data on the Control Display, such as average values.

#### **General information**

Two types of Onboard Computers are available on the Control Display:

- "Onboard info": average values, such as the fuel consumption, are displayed. The values can be reset individually.
- "Trip computer": the values deliver an overview of a certain distance and can be reset as often as necessary.

# Calling up the Onboard Computer or trip computer

#### Via iDrive:

- 1. "My Vehicle"
- 2. "Driving information"
- 3. "Onboard info" or "Trip computer"

#### **Resetting the Onboard Computer**

Via iDrive:

- 1. "My Vehicle"
- 2. "Driving information"
- 3. "Onboard info"
- 4. "Consumption" or "Speed"
- 5. "OK"

#### **Resetting the trip computer**

Via iDrive:

- 1. "My Vehicle"
- 2. "Driving information"
- 3. "Trip computer"
- 4. Move the Controller to the left, if needed.

  - •••A "Automatic reset": all values are reset approx. 4 hours after the vehicle has come to a standstill.
- 5. If necessary, "OK"

## Sport displays

#### **General information**

Depending on the vehicle equipment, the current values for performance and torque can be displayed on the Control Display.

#### **Displaying sport displays**

Via iDrive:

- 1. "My Vehicle"
- 2. "Technology in action"
- 3. "Sport displays"

### **Speed warning**

#### Concept

A speed limit can be set that when reached will cause a warning to be issued.

#### **General information**

The warning is repeated if the vehicle speed exceeds the set speed limit again, after it has dropped below it by 3 mph/5 km/h.

# Displaying, setting or changing the speed warning

Via iDrive:

- 1. "My Vehicle"
- 2. "Vehicle settings"
- 3. "Speed warning"
- 4. "Warning at:"
- 5. Turn the Controller until the desired speed is displayed.
- 6. Press the Controller.

# Activating/deactivating the speed warning

Via iDrive:

- 1. "My Vehicle"
- 2. "Vehicle settings"
- 3. "Speed warning"
- 4. "Speed warning"

# Setting your current speed as the speed warning

Via iDrive:

- 1. "My Vehicle"
- 2. "Vehicle settings"
- 3. "Speed warning"
- 4. "Select current speed"

# Vehicle status

#### **General information**

The status can be displayed and actions performed for several systems.

#### **Opening the vehicle status**

Via iDrive:

- 1. "My Vehicle"
- 2. "Vehicle status"

#### Information at a glance

- (!) "Flat Tire Monitor": Status of the Flat Tire Monitor, refer to page 143.
- (!) "Tire Pressure Monitor": Status of the Tire Pressure Monitor, refer to page 139.
- "Engine oil level": Electronic engine oil level check, refer to page 230.
- M "Check Control": Check Control messages are stored in the background and can be displayed on the Control Display. Displaying stored Check Control messages, refer to page 120.
- Service required": Displaying service requirements, refer to page 124.
- ▷ 🌾 "Teleservice Call": service request.

# Lights

# Vehicle features and options

This chapter describes all standard, country-specific and optional features offered with the series. It also describes features that are not necessarily available in your vehicle, e. g., due to the selected options or country versions. This also applies to safety-related functions and systems. When using these functions and systems, the applicable laws and regulations must be observed.

### **Overview**

#### Switches in the vehicle



The light switch element is located next to the steering wheel.

Symbol	Function
≣CA	Automatic headlight control. Adaptive light functions.
0	Lights off. Daytime running lights.
EDDE	Parking lights.

Symbol	Function
≣D	Low beams.
C D	Instrument lighting.

# Parking lights, low beams and roadside parking lights

#### **General information**

Position of switch:  $\mathbf{0}$  ,  $\mathbf{ID}$  ,  $\mathbf{ID}$ 

If the driver's door is opened when the ignition is switched off, the exterior lighting is automatically switched off.

### **Parking lights**

Position of switch: EDOE

The vehicle is illuminated on all sides.

Do not use the parking lights for extended periods; otherwise, they might drain the battery and it would then be impossible to start the engine.

Canada: when parking, switch on the one-sided roadside parking light, refer to page 131.

#### Low beams

Position of switch:


The low beams light up when the ignition is switched on.

### Canada: roadside parking light

#### Concept

The vehicle can be illuminated on one side.

#### Switching on

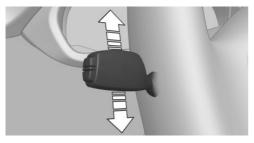

With radio-ready state switched off, press the lever either up or down past the resistance point.

#### Switching off

Press the lever back into the standard position.

### Welcome lights and headlight courtesy delay feature

#### **Welcome lights**

#### **General information**

Depending on the vehicle equipment and the ambient brightness, individual light functions may be switched on briefly when the vehicle is unlocked.

#### Activating/deactivating

Position of switch: D, C

Via iDrive:

- 1. "My Vehicle"
- 2. "Vehicle settings"
- 3. "Lighting"
- 4. "Exterior lighting"
- 5. "Welcome lights"

The setting is stored for the driver profile currently used.

#### Headlight courtesy delay feature

#### **General information**

The low beams stay illuminated for a particular time if the high beams are switched on after radio-ready state is switched off.

#### Setting the duration

Via iDrive:

- 1. "My Vehicle"
- 2. "Vehicle settings"
- 3. "Lighting"
- 4. "Exterior lighting"
- 5. "Pathway lighting"
- 6. Set length of time.

The setting is stored for the driver profile currently used.

# Automatic headlight control

#### Concept

The low beams are switched on and off automatically depending on the ambient brightness, for instance in tunnels, in twilight or if there is precipitation.

#### **General information**

A blue sky with the sun low on the horizon can cause the lights to be switched on.

When emerging from a tunnel during the day, the low beams are not switched off immediately but instead only after approx. 2 minutes.

### Activating

Position of switch:

The indicator light in the instrument cluster is illuminated when the low beams are switched on.

#### **System limits**

The automatic headlight control cannot serve as a substitute for your personal judgment of lighting conditions.

For example, the sensors are unable to detect fog or hazy weather. In these situations, switch the light on manually.

### **Daytime running lights**

#### **General information**

Position of switch: 0, EDOE,

The daytime running lights light up when the ignition is switched on. After the ignition is switched off, the parking lights light up in position **DOE**.

#### Activating/deactivating

In some countries, daytime running lights are mandatory, so it may not be possible to deactivate the daytime running lights.

Via iDrive:

- 1. "My Vehicle"
- 2. "Vehicle settings"
- 3. "Lighting"
- 4. "Exterior lighting"
- 5. Select the desired setting.

Settings are stored for the profile currently used.

## **Adaptive light functions**

#### Concept

Adaptive light functions enable dynamic illumination of the roadway.

#### **General information**

The adaptive light functions may consist of one system or multiple systems, depending on the equipment version:

▷ Adaptive Light Control, refer to page 133.

#### Activating

Position of switch:

The adaptive light functions are active when the engine is running.

#### **Adaptive Light Control**

Depending on the steering angle and other parameters, the light from the headlight follows the course of the road.

To avoid blinding oncoming traffic, the Adaptive Light Control does not swivel to the opposite lane when the vehicle is at a standstill.

# Adaptive headlight range control

The adaptive headlight range control compensates for acceleration and braking operations in order not to blind the oncoming traffic and to achieve optimum illumination of the roadway.

## **High-beam Assistant**

#### Concept

The high-beam Assistant detects other traffic participants early on and automatically switches the high beams on or off depending on the traffic situation.


#### **General information**

The high-beam Assistant ensures that the high beams are switched on, whenever the traffic situation allows. In the low speed range, the high beams are not switched on by the system.

The system responds to light from oncoming traffic and traffic driving ahead of you, and to ambient lighting, for instance in towns and cities.

The high beams can be switched on and off manually at any time.

#### Activating/deactivating

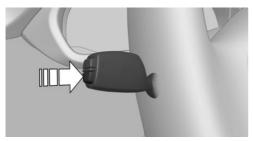

Position of switch, depending on the vehicle equipment:  ${\rm I\!I\!C}$  ,  ${\rm I\!I\!D}$ 

Press and hold button on signal lever.



The indicator light in the instrument cluster is illuminated when the low beams are switched on.

The headlights are automatically switched between low beams and high beams.



The blue indicator light in the instrument cluster lights up when the system switches on the high beams.

The high-beam Assistant is deactivated when manually switching the high beams on and off, refer to page 106.

To reactivate the high-beam Assistant, press the button on the turn signal lever.

#### **System limits**

The high-beam Assistant cannot serve as a substitute for the driver's personal judgment of when to use the high beams. In situation that require this, therefore switch off manually.

The system is not fully functional in the following situations, and driver intervention may be necessary:

- In very unfavorable weather conditions, such as fog or heavy precipitation.
- When detecting poorly-lit road users such as pedestrians, cyclists, horseback riders and

wagons; when driving close to train or ship traffic; and at animal crossings.

- In tight curves, on hilltops or in depressions, in cross traffic or half-obscured oncoming traffic on highways.
- In poorly-lit towns and cities and in the presence of highly reflective signs.
- When the windshield in front of the interior mirror is fogged over, dirty or covered with stickers, etc.

# **Instrument lighting**

#### **Functional requirement**

The parking lights or low beams must be switched on to adjust the brightness.

#### Settings



Adjust the brightness with the thumbwheel.

# **Interior lights**

#### **General information**

Depending on the equipment, the interior lights, footwell lights, entry lights, and courtesy lights are controlled automatically.

Thumbwheel for the instrument lighting controls brightness of some of these features.

#### **Overview**



- 1 Interior lights
- 2 Reading lights

# Switching the interior lights on/off



Press the button.

To switch off permanently: press the button and hold for approx. 3 seconds.

# Switching the reading lights on/off



Press button.

Depending on the vehicle equipment, the reading lights are located next to the interior lights in the front and rear.

#### **Ambient light**

#### **General information**

Depending on the equipment version, lighting can be adjusted for some lights in the car's interior.

#### **Selecting color scheme**

Via iDrive:

- 1. "My Vehicle"
- 2. "Vehicle settings"
- 3. "Lighting"

- 4. "Interior lighting"
- 5. "Ambient lighting"
- 6. Select the desired setting.

#### Setting the brightness

Depending on the equipment, the brightness of the ambient light can be adjusted via the thumbwheel for the instrument lighting or on the Control Display.

Via iDrive:


- 1. "My Vehicle"
- 2. "Vehicle settings"
- 3. "Lighting"
- 4. "Interior lighting"
- 5. "Brightness"
- 6. Adjust the brightness.

# Safety

# Vehicle features and options

This chapter describes all standard, country-specific and optional features offered with the series. It also describes features that are not necessarily available in your vehicle, e. g., due to the selected options or country versions. This also applies to safety-related functions and systems. When using these functions and systems, the applicable laws and regulations must be observed.

# Airbags

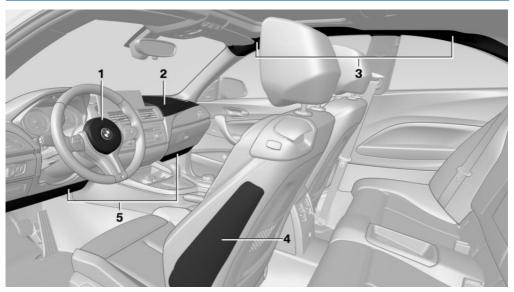

- 1 Front airbag, driver
- 2 Front airbag, front passenger
- 3 Head airbag

#### **Front airbags**

Front airbags help protect the driver and the front passenger by responding to frontal impacts in which safety belts alone would not provide adequate protection.

- 4 Side airbag
- 5 Knee airbag

#### Side airbag

In a lateral impact, the side airbag supports the side of the body in the chest and lap area.

#### **Head airbag**

In a lateral impact, the head airbag supports the head.

#### **Ejection Mitigation**

The head airbag system is designed as an ejection mitigation countermeasure to reduce the likelihood of ejections of vehicle occupants through side windows during rollovers or side impact events.

#### **Knee airbag**

The knee airbag supports the legs in a frontal impact.

#### **Protective action**

Airbags are not triggered in every impact situation, for instance in less severe accidents or rearend collisions.

# Information on optimum effect of the airbags

#### \land WARNING

If the seat position is incorrect or the deployment area of the airbags is impaired, the airbag system cannot provide protection as intended and may cause additional injuries due to triggering. There is a risk of injuries or danger to life. Follow the information on achieving the optimum protective effect of the airbag system.

- Keep a distance from the airbags.
- Always grasp the steering wheel on the steering wheel rim. Hold your hands at the 3 o'clock and 9 o'clock positions, to keep the risk of injury to your hands or arms as low as possible when the airbag is triggered.
- Make sure that occupants keep their heads away from the side airbag.
- Make sure that the front passenger is sitting correctly, i.e., keeps his or her feet and legs in the floor area and does not support them on the dashboard.
- There should be no additional persons, animals or objects between an airbag and a person.

Dashboard and windshield on the front passenger side must stay clear - do not attach adhesive labels or coverings and do not attach brackets or cables, for instance for GPS devices or mobile phones.

Safetv

- Do not apply adhesive materials to the airbag cover panels, do not cover them or modify them in any way.
- Do not use the cover of the front airbag on the front passenger side as a storage area.
- Do not place slip covers, seat cushions or other objects on the front passenger seat that are not specifically suited for seats with integrated side airbags.
- Do not hang pieces of clothing, such as jackets, over the backrests.
- Never modify either the individual components or the wiring in the airbag system. This also applies to steering wheel covers, the dashboard, and the seats.
- Do not remove the airbag system.

Even when you follow all instructions very closely, injury from contact with the airbags cannot be fully ruled out in certain situations.

The ignition and inflation noise may lead to short-term and, in most cases, temporary hearing impairment in sensitive occupants.

Vehicle modifications for a person with disabilities may affect the air bag system; contact BMW Customer Relations for further information.

Warnings and information on the airbags are also found on the sun visors.

# Functional readiness of the airbag system

#### Safety information

#### ▲ WARNING

Individual components can be hot after triggering of the airbag system. There is a risk of injury. Do not touch individual components.

#### ▲ WARNING

Improperly executed work can lead to failure. malfunction or unintentional triggering of the airbag system. In the case of a malfunction, the airbag system might not trigger as intended despite the accident severity. There is a risk of injuries or danger to life. Have the airbag system checked, repaired, dismantled and scrapped by a dealer's service center or another gualified service center or repair shop.

#### **Correct function**



When the ignition is switched on, the warning light in the instrument cluster lights up briefly and thereby indicates the operational readiness of the entire airbag system and the belt tensioner.

#### Airbag system malfunctioning

- > Warning light does not come on when the ignition is switched on.
- The warning light lights up continuously.

#### Automatic deactivation of the front-seat passenger airbags

#### Concept

The system reads if the front passenger seat is occupied by measuring the human body's resistance.

Front, knee, and side airbag on the front passenger's side are activated or deactivated.

#### **General information**

Before transporting a child on the front passenger seat, refer to the safety information and instructions for children on the front passenger seat, see Children.

#### **Safety information**

#### \Lambda WARNING

To ensure the front-seat passenger airbag function, the system must be able to detect whether a person is sitting in the front passenger seat. The entire seat cushion area must be used for this purpose. There is a risk of injuries or danger to life. Make sure that the front passenger keeps his or her feet in the floor area.

#### Malfunction of the automatic deactivation system

When transporting older children and adults, the front-seat passenger airbags may be deactivated in certain sitting positions. In this case, the indicator light for the front-seat passenger airbags liahts up.

In this case, change the sitting position so that the front-seat passenger airbags are activated and the indicator light goes out.

If it is not possible to activate the airbags, have the person sit in the rear.

To enable correct recognition of the occupied seat cushion.

- Do not attach covers, cushions, ball mats or other items to the front passenger seat unless they are specifically determined to be safe for use on the front passenger seat.
- > Do not place any electronic devices on the front passenger seat if a child restraint system is to be installed on it.
- Do not place objects under the seat that could press against the seat from below.
- No moisture in or on the seat.

# Indicator light for the front-seat passenger airbags



The indicator light for the front-seat passenger airbags indicates the operating state of the frontseat passenger airbags.

The light indicates whether the airbags are either activated or deactivated.



- The indicator light lights up when a child is properly seated in a child restraint system or when the seat is empty. The airbags on the front passenger side are not activated.
- The indicator light does not light up when, for instance a correctly seated person of sufficient size is detected on the seat. The airbags on the front passenger side are activated.

#### **Detected child restraint systems**

The system generally detects children seated in a child restraint system, particularly in child restraint systems required by NHTSA at the point in time when the vehicle was manufactured. After installing a child restraint system, make sure that the indicator light for the front-seat passenger airbags lights up. This indicates that the child restraint system has been detected and the front-seat passenger airbags are not activated.

# Strength of the driver's and front-seat passenger airbag

The explosive power that activates driver's/frontseat passenger airbags very much depends on the positions of the driver's/front passenger seat.

To maintain the accuracy of this function over the long term, calibrate the front seats as soon as a respective message appears on the Control Display.

#### **Calibrating the front seats**

#### ▲ WARNING

There is a risk of jamming when moving the seats. There is a risk of injury or risk of damage to property. Make sure that the area of movement of the seat is clear prior to any adjustment.

A corresponding message appears on the Control Display.

- 1. Press the switch and move the respective seat all the way forward, until it stops.
- 2. Press the switch forward again. The seat still moves forward slightly.
- 3. Readjust the seat to the desired position.

The calibration procedure is completed when the message on the Control Display disappears.

If the message continues to be displayed, repeat the calibration.

If the message does not disappear after a repeat calibration, have the system checked as soon as possible.

# Tire Pressure Monitor TPM

#### Concept

The system monitors tire inflation pressure in the four mounted tires. The system warns you if there is a significant loss of pressure in one or more tires.

#### **General information**

Sensors in the tire valves measure the tire inflation pressure and, depending on the model, the tire temperature.

With use of the system follow further information found under Tire inflation pressure, refer to page 212.

#### **Functional requirements**

The following conditions must be met for the system; otherwise, reliable flagging of a loss of tire inflation pressure is not assured:

- After a tire or wheel replacement, a reset was performed with the correct tire inflation pressure.
- After the tire inflation pressure was adjusted to a new value, a reset was performed.
- ▷ Wheels with TPM wheel electronics.

### **Status display**

#### **Current status**

The system status can be displayed on the Control Display, e.g., whether or not the system is active.

Via iDrive:

- 1. "My Vehicle"
- 2. "Vehicle status"
- 3. (!) "Tire Pressure Monitor"

The current status is displayed.

#### **Tire conditions**

#### **General information**

Tire and system status are indicated by the color of the wheels and a SMS text message on the Control Display.

#### All wheels green

System is active and will issue a warning related to the tire inflation pressures stored during the last reset.

#### One to four yellow wheels

A flat tire or major drop in the tire inflation pressure has occurred in the indicated tires.

#### **Gray wheels**

It may not be possible to identify tire pressure losses.

Possible causes:

- ▶ Malfunction.
- ▷ The system is being reset.

#### **Additonal information**

The status control display additionally shows the current tire inflation pressures and, depending on the model, tire temperatures. It shows the actual values read; they may vary depending on driving style or weather conditions.

#### **Resetting the system**

Via iDrive:

- 1. "My Vehicle"
- 2. "Vehicle status"
- 3. (!) "Tire Pressure Monitor"
- 4. Start the engine but do not drive off.
- 5. Reset tire inflation pressure: "Perform reset".
- 6. Drive away.

The wheels are displayed in gray and the following is displayed "Resetting Tire Pressure Monitor...".

After driving faster than 19 mph/30 km/h for a short period, the set tire inflation pressures are accepted as reference values. The reset is completed automatically while driving.

After a successfully completed reset, the wheels on the Control Display are shown in green and

"Tire Pressure Monitor active. See label for recommended pressures." is displayed.

You may interrupt this trip at any time. When you continue the reset resumes automatically.

#### Messages

#### **General information**

A low tire inflation pressure may cause the DSC Dynamic Stability Control to be switched on.

#### Safety information

#### 🛆 WARNING

A damaged regular tire with low or missing tire inflation pressure impacts handling, such as steering and braking response. There is a risk of an accident. Do not continue driving. Repair the flat tire or replace the wheel.

# If a tire inflation pressure check is required

#### Message

A symbol with a Check Control message appears on the Control Display.

#### Symbol Possible cause



The system has detected a wheel change, but no reset was done.

No reset was performed for the system. The system issues a warning based on the tire inflation pressures stored during the last reset.

Inflation was not carried out according to specifications.

The tire inflation pressure has fallen below the level of the last reset.

#### Measure

- 1. Check the tire pressure and correct as needed.
- 2. Reset the system.

Safety

# If the tire inflation pressure is too low

#### Message



A yellow warning light is illuminated in the instrument cluster.

In addition, a symbol with a Check Control message appears on the Control Display.

#### Symbol Possible cause



There is a tire inflation pressure loss.

No reset was performed for the system. The system issues a warning based on the tire inflation pressures stored during the last reset.

#### Measure

- 1. Reduce your speed and drive moderately. Do not exceed a speed of 80 mph/130 km/h.
- 2. At the next opportunity, for instance gas station, check and correct the tire inflation pressure in all four tires, if necessary.
- 3. Reset the system.

# If there is a significant loss of tire inflation pressure

#### Message



A yellow warning light is illuminated in the instrument cluster.

In addition, a symbol with the affected tire appears in a Check Control message on the Control Display.

#### Symbol Possible cause



There is a flat tire or a major loss in tire inflation pressure.

No reset was performed for the system. The system issues a warning based on the tire inflation pressures stored during the last reset.

#### Measure

Reduce your speed and stop cautiously. Avoid sudden braking and steering maneuvers.

#### Actions in the event of a flat tire

1. Identify the damaged tire.

To do this, check the air pressure in all four tires, for instance using the tire pressure gage of a flat tire kit.

If the tire inflation pressure in all four tires is correct, the Tire Pressure Monitor may not have been initialized. In this case, initialize the system.

If identification of flat tire damage is not possible, please contact a dealer's service center or another qualified service center or repair shop.

2. Repair the flat tire, e.g., with a flat tire kit or by changing the wheel.

Use of sealant, for instance from the flat tire kit, may damage the TPM wheel electronics. In this case, have the electronics checked and replaced at the next opportunity.

#### System limits

#### Temperature

The tire inflation pressure depends on the tire's temperature.

Driving or exposure to the sun will increase the tire's temperature, thus increasing the tire inflation pressure.

The tire inflation pressure is reduced when the tire temperature falls again.

These circumstances may cause a warning when temperatures fall very sharply.

#### Sudden tire pressure loss

The system cannot indicate sudden serious tire damage caused by external circumstances.

#### Failure to perform a reset

The system does not function properly if a reset has not been carried out, for instance a flat tire is reported though tire inflation pressures are correct.

#### Malfunction



The yellow warning light flashes and is then illuminated continuously. A Check Control message is displayed. It may not be possible to identify tire pressure losses.

Examples and recommendations in the following situations:

- A wheel without TPM wheel electronics is mounted: have it checked by a dealer's service center or another qualified service center or repair shop as needed.
- Malfunction: have system checked by a dealer's service center or another gualified service center or repair shop.
- The system was unable to complete the reset. Perform a system reset again.
- Interference caused by systems or devices with the same radio frequency: after leaving the area of the interference, the system automatically becomes active again.

#### **Declaration according to NHTSA/** FMVSS 138 Tire Pressure **Monitoring System**

Each tire, including the spare (if provided) should be checked monthly when cold and inflated to the inflation pressure recommended by the vehicle manufacturer on the vehicle placard or tire inflation pressure label. (If your vehicle has tires of a different size than the size indicated on the vehicle placard or tire inflation pressure label, you should determine the proper tire inflation pressure for those tires.) As an added safety feature, your vehicle has been equipped with a tire pressure monitoring system (TPMS) that illuminates a low tire pressure telltale when one or more of your tires is significantly under-inflated. Accordingly, when the low tire pressure telltale illuminates, you should stop and check your tires as soon as possible, and inflate them to the proper pressure. Driving on a significantly under-inflated tire causes the tire to overheat and can lead to tire failure. Under-inflation also reduces fuel efficiency and tire tread life, and may affect the vehicle's handling and stopping ability. Please note that the TPMS is not a substitute for proper tire maintenance, and it is the driver's responsibility to maintain correct tire pressure, even if underinflation has not reached the level to trigger illumination of the TPMS low tire pressure telltale. Your vehicle has also been equipped with a TPMS malfunction indicator to indicate when the system is not operating properly. The TPMS malfunction indicator is combined with the low tire pressure telltale. When the system detects a malfunction, the telltale will flash for approximately one minute and then remain continuously illuminated. This sequence will continue upon subsequent vehicle start-ups as long as the malfunction exists. When the malfunction indicator is illuminated, the system may not be able to detect or signal low tire pressure as intended. TPMS malfunctions may occur for a variety of reasons, including the installation of replacement or alternate tires or wheels on the vehicle that prevent the TPMS from functioning properly. Always check the TPMS malfunction telltale after replacing one or more tires or wheels on your vehicle to ensure that the replacement or alternate tires and wheels allow the TPMS to continue to function properly.

## **FTM Flat Tire Monitor**

#### Concept

The system detects tire inflation pressure loss on the basis of rotation speed differences between the individual wheels while driving.

In the event of a tire inflation pressure loss, the diameter and therefore the rotational speed of the corresponding wheel changes. The difference will be detected and reported as a flat tire.

The system does not measure the actual inflation pressure in the tires.

#### **Functional requirements**

The following conditions must be met for the system; otherwise, reliable flagging of a loss of tire inflation pressure is not assured:

- After a tire or wheel replacement, an initialization was performed with the correct tire inflation pressure.
- After the tire inflation pressure was adjusted to a new value, an initialization was performed.

#### **Status display**

The current status of the flat tire monitor can be displayed, for instance whether the RPA is active. Via iDrive:

- 1. "My Vehicle"
- 2. "Vehicle status"
- 3. (!) "Flat Tire Monitor"

The status is displayed.

#### **Initialization required**

An initialization must be performed in the following situations:

- After the tire inflation pressure has been adjusted.
- ▷ After a tire or wheel replacement.

### **Performing initialization**

When initializing, the set tire inflation pressures serve as reference values in order to detect a flat tire. Initialization is started by confirming the tire inflation pressures.

Do not initialize the system when driving with snow chains.

Via iDrive:

- 1. "My Vehicle"
- 2. "Vehicle status"
- 3. (!) "Flat Tire Monitor"
- 4. Start the engine but do not drive off.
- 5. Start the initialization with: "Perform reset"
- 6. Drive away.

The initialization is completed while driving, which can be interrupted at any time.

The initialization automatically continues when driving resumes.

### Messages

#### Safety information

### 🛆 WARNING

A damaged regular tire with low or missing tire inflation pressure impacts handling, such as steering and braking response. There is a risk of an accident. Do not continue driving. Repair the flat tire or replace the wheel.

#### Indication of a flat tire



A yellow warning light is illuminated in the instrument cluster.

In addition, a symbol with a Check Control message appears on the Control Display.

Symbol Possible cause



There is a flat tire or a major loss in tire inflation pressure.

#### Measure

- Reduce your speed and stop cautiously. Avoid sudden braking and steering maneuvers.
- 2. Identify the damaged wheel. To do this, check the air pressure in all four tires, for instance using the tire pressure gage of a flat tire kit. If the tire inflation pressure in all tires is correct, the Flat Tire Monitor may not have been initialized. In this case, initialize the system.
- 3. Repair the flat tire, e.g., with a flat tire kit or by changing the wheel.

### System limits

The system could be delayed or malfunction in the following situations:

- A natural, even tire inflation pressure loss in all four tires will not be recognized. Therefore, check the tire inflation pressure regularly.
- Sudden serious tire damage caused by external circumstances cannot be recognized in advance.
- > When the system has not been initialized.
- When driving on a snowy or slippery road surface.
- Sporty driving style: spinning traction wheels, high lateral acceleration (drifting).
- When driving with snow chains.

# **Intelligent Safety**

### Concept

Intelligent Safety enables central operation of the driver assistance system.

Depending on how the vehicle is equipped, Intelligent Safety consists of one or more systems that can help prevent an imminent collision. These systems are active automatically every time the engine is started using the Start/Stop button:

- Approach control warning with City light braking function, refer to page 146.
- Pedestrian warning, refer to page 149.

# **Safety information**

#### 🛆 WARNING

The system cannot serve as a substitute for the driver's personal judgment in assessing visibility and traffic situation. There is a risk of an accident. Adjust driving style to traffic conditions. Watch traffic closely and actively intervene where appropriate.

#### \land WARNING

Indicators and warnings cannot serve as a substitute for the driver's personal judgment. Due to its limits, the system might not output warnings or reactions or these might be output late, incorrectly, or without justification. There is a risk of an accident. Adjust driving style to traffic conditions. Watch traffic closely and actively intervene where appropriate.

## 🛆 WARNING

Due to system limits, individual functions can malfunction during tow-starting/towing with the Intelligent Safety systems activated. There is a risk of an accident. Switch all Intelligent Safety systems off prior to tow-starting/towing.

#### **Overview**

#### **Button in the vehicle**







The camera is installed near the interior mirror. Keep the windshield in front of the interior mirror clean and clear.

# Switching on/off

The Intelligent Safety systems are automatically active after every departure.



Press button: the systems are switched off. The LED goes out.

Press button: the systems are switched on. The LED lights up.

Settings can be made on the Control Display.

# Approach control warning with City light braking function

# Concept

The system can help prevent accidents. If an accident cannot be prevented, the system will help reduce the collision speed.

The system sounds a warning before an imminent collision and activates brakes independently, if needed.

The automatic braking intervention is done with limited force and duration.

A camera in the area of the interior mirror controls the system.

The approach control warning is available even if cruise control has been deactivated.


With the vehicle approaching another vehicle intentionally, the approach control warning and braking are delayed in order to avoid false system reactions.

## **General information**

The system warns at two levels of an imminent danger of collision at speeds from approx. 3 mph/5 km/h. Time of warnings may vary with the current driving situation.

Appropriate braking kicks in at speeds of up to 35 mph/60 km/h.

# **Detection range**

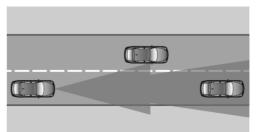

Objects that the system can detect are taken into account.

# Safety information

## 🛆 WARNING

The system cannot serve as a substitute for the driver's personal judgment in assessing visibility and traffic situation. There is a risk of an accident. Adjust driving style to traffic conditions. Watch traffic closely and actively intervene where appropriate.

# \Lambda WARNING

Indicators and warnings cannot serve as a substitute for the driver's personal judgment. Due to its limits, the system might not output warnings or reactions or these might be output late, incorrectly, or without justification. There is a risk of an accident. Adjust driving style to traffic conditions. Watch traffic closely and actively intervene where appropriate.

#### 🛆 WARNING

Due to system limits, individual functions can malfunction during tow-starting/towing with the Intelligent Safety systems activated. There is a risk of an accident. Switch all Intelligent Safety systems off prior to tow-starting/towing.

#### **Overview**

#### **Button in the vehicle**





Intelligent Safety button

#### Camera



The camera is installed near the interior mirror. Keep the windshield in front of the interior mirror clean and clear.

# Switching on/off

#### Switching on automatically

The system is automatically active after every driving off.

#### Switching off



Press button: the system is switched off. The LED goes out.

Re-press button: the system is switched on. The LED lights up.

#### Setting the warning time

The warning time can be set.

Via iDrive:

- 1. "My Vehicle"
- 2. "Vehicle settings"
- 3. "Intelligent Safety"
- 4. "Warning time"
- 5. Select the desired setting.

The selected time is stored for the driver profile currently used.

# Warning with braking function

#### Display

If a collision with a vehicle detected in this way is imminent, a warning symbol appears on the instrument cluster.

Symbol	Measure
	Symbol lights up red: prewarning. Brake and increase distance.
	Symbol flashes red and an acoustic signal sounds: acute warning. Brake and make an evasive maneu- ver, if necessary.

#### Prewarning

This warning is issued, for instance when there is the impending danger of a collision or the distance to the vehicle ahead is too small.

The driver must intervene actively when there is a prewarning.

#### Acute warning with braking function

Acute warning is displayed in case of the imminent danger of a collision when the vehicle approaches another object at a high differential speed.

The driver must intervene actively when there is an acute warning. If necessary, the driver is as-

sisted by a minor automatic braking intervention in a possible risk of collision.

Acute warnings can also be triggered without previous forewarning.

#### **Braking intervention**

The warning prompts the driver to react. During a warning, the maximum braking force is used. Prerequisite for the brake booster is sufficiently quick and hard stepping on the brake pedal. If there is a risk of collision, the system may assist with braking. When the vehicle is traveling at a low speed, the vehicle may come to a complete stop.

Manual transmission: during a braking intervention up to a complete stop, the engine may be shut down.

The braking intervention occurs only if vehicle stability has not been restricted, for instance by deactivating the DSC Dynamic Stability Control.

The driver may cancel the braking intervention by stepping on the accelerator pedal or by actively moving the steering wheel.

Object detection can be restricted. Follow the limitations of the detection range and functional restrictions.

# **System limits**

#### **Safety information**

#### \land WARNING

The system can react not at all, too late, incorrectly, or without justification due to the system limits. There is a risk of accidents or risk of damage to property. Follow the information regarding the system limits and actively intervene if needed. Thus, a system reaction might not come or might come late.

E.g., the following situations may not be detected:

- Slow moving vehicles when you approach them at high speed.
- Vehicles that suddenly swerve in front of you, or sharply decelerating vehicles.
- ▷ Vehicles with an unusual rear appearance.
- ▷ Two-wheeled vehicles ahead of you.

#### **Functional limitations**

The system may not be fully functional in the following situations:

- ▶ In heavy fog, wet conditions, or snowfall.
- ▶ In tight curves.
- If the driving stability control systems are limited or deactivated, for instance DSC OFF.
- If the field of view of the camera in the mirror is dirty or obscured.
- Up to 10 seconds after the start of the engine via the Start/Stop button.
- During calibration of the camera immediately after vehicle delivery.
- If there are constant blinding effects because of oncoming light, for instance from the sun low in the sky.

#### Warning sensitivity

The more sensitive the warning settings are, for example the warning time, the more warnings are displayed. Therefore, there may also be an excess of premature or unjustified warnings and reactions.

#### **Detection range**

The system's detection potential is limited.

# Person warning with City light braking function

#### Concept

The system can help prevent accidents with pedestrians.

When driving at city speeds, the system will issue a warning if there is imminent risk of a collision with pedestrians, and support this with a light braking function.


The camera in the area of the interior mirror controls the system.

#### **General information**

With sufficient brightness, the system warns about possible collision danger with pedestrians starting at approx. 6 mph/10 km/h to approx. 35 mph/60 km/h and assists with braking before a collision.

The system reacts to people who are within the detection range of the system.

#### **Detection range**

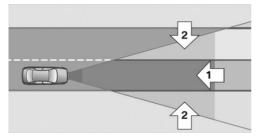

The detection area in front of the vehicle is divided into two areas:

- Central area, arrow 1, directly in front of the vehicle.
- Expanded area, arrow 2, to the right and left of the central area.

A collision is imminent if pedestrians are located within the central area. A warning is issued about pedestrians who are located within the extended area only if they are moving in the direction of the central area.

# **Safety information**

### 🛆 WARNING

The system cannot serve as a substitute for the driver's personal judgment in assessing visibility and traffic situation. There is a risk of an accident. Adjust driving style to traffic conditions. Watch traffic closely and actively intervene where appropriate.

#### \Lambda WARNING

Indicators and warnings cannot serve as a substitute for the driver's personal judgment. Due to its limits, the system might not output warnings or reactions or these might be output late, incorrectly, or without justification. There is a risk of an accident. Adjust driving style to traffic conditions. Watch traffic closely and actively intervene where appropriate.

#### \land WARNING

Due to system limits, individual functions can malfunction during tow-starting/towing with the Intelligent Safety systems activated. There is a risk of an accident. Switch all Intelligent Safety systems off prior to tow-starting/towing.

#### **Overview**

#### **Button in the vehicle**





Intelligent Safety button

#### Camera



The camera is installed near the interior mirror. Keep the windshield in front of the interior mirror clean and clear.

# Switching on/off

#### Switching on automatically

The system is automatically active after every driving off.

#### **Switching off**



Press button: the systems are switched off. The LED goes out.

Press button: the systems are switched on. The LED lights up.

# Warning with braking function

#### Display

If a collision with a person detected in this way is imminent, a warning symbol appears on the instrument cluster.



The red symbol is displayed and a signal sounds.

Intervene immediately by braking or make an evasive maneuver.

#### **Braking intervention**

The warning prompts the driver to react. During a warning, the maximum braking force is used. Prerequisite for the brake booster is sufficiently quick and hard stepping on the brake pedal. If there is a risk of collision, the system may assist with braking. When the vehicle is traveling at a low speed, the vehicle may come to a complete stop.

Manual transmission: during a braking intervention up to a complete stop, the engine may be shut down.

The braking intervention occurs only if vehicle stability has not been restricted, for instance by deactivating the DSC Dynamic Stability Control.

The driver may cancel the braking intervention by stepping on the accelerator pedal or by actively moving the steering wheel.

Object detection can be restricted. Follow the limitations of the detection range and functional restrictions.

# **System limits**

#### Safety information

## 🛆 WARNING

The system can react not at all, too late, incorrectly, or without justification due to the system limits. There is a risk of accidents or risk of damage to property. Follow the information regarding the system limits and actively intervene if needed.

#### **Detection range**

The detection potential of the camera is limited.

Thus, a warning might not be issued or be issued late.

E.g., the following situations may not be detected:

- Partially covered pedestrians.
- Pedestrians that are not detected as such because of the viewing angle or contour.
- Pedestrians outside of the detection range.
- Pedestrians having a body size less than 32 in/80 cm.

#### **Functional limitations**

The system may not be fully functional or may not be available in the following situations:

- ▷ In heavy fog, wet conditions, or snowfall.
- In tight curves.
- If the driving stability control systems are deactivated, for instance DSC OFF.
- If the field of view of the camera or the windshield are dirty or covered.
- Up to 10 seconds after the start of the engine via the Start/Stop button.
- During calibration of the camera immediately after vehicle delivery.
- If there are constant blinding effects because of oncoming light, for instance from the sun low in the sky.
- ▷ When it is dark outside.

# Lane departure warning

#### Concept

The lane departure warning alerts when the vehicle on roads with lane markings is about to leave the lane.

### **General information**

Depending on the country version, the system issues a warning at speeds between 35 mph/55 km/h and 45 mph/70 km/h.

When switching on the system below this speed, a message is displayed in the instrument cluster.

Warnings are issued by means of a steering wheel vibration. The time of the warning may vary depending on the current driving situation.

The system does not provide a warning if the turn signal is set before leaving the lane.

# **Safety information**

## \rm MARNING

The system cannot serve as a substitute for the driver's personal judgment in assessing road and traffic safety. There is a risk of an accident. Adjust driving style to traffic conditions. Watch traffic closely and actively intervene where appropriate. Do not jerk the steering wheel in response to a warning.

#### \Lambda WARNING

Indicators and warnings cannot serve as a substitute for the driver's personal judgment. Due to its limits, the system might not output warnings or reactions or these might be output late, incorrectly, or without justification. There is a risk of an accident. Adjust driving style to traffic conditions. Watch traffic closely and actively intervene where appropriate.

#### **Overview**

#### **Button in the vehicle**





Lane departure warning

#### Camera



The camera is installed near the interior mirror. Keep the windshield in front of the interior mirror clean and clear.

# Switching on/off



Press button.

- ▷ On: the LED lights up.
- Off: the LED goes out.

The setting is stored for the driver profile currently used.

## **Display in the instrument cluster**

- 73
  - Lines: system is activated.
  - Arrows: at least one lane marking was detected and warnings can be issued.

# **Issued warning**

#### If you leave the lane

If you leave the lane and if a lane marking has been detected, the steering wheel vibrates.

If the turn signal is switched on before changing the lane, a warning is not issued.

#### **End of warning**

The warning is canceled in the following situations:

- ▷ Automatically after approx. 3 seconds.
- ▷ When returning to your own lane.
- When braking hard.
- ▷ When using the turn signal.

# **System limits**

#### Safety information

# 🛆 WARNING

The system can react not at all, too late, incorrectly, or without justification due to the system limits. There is a risk of accidents or risk of damage to property. Follow the information regarding the system limits and actively intervene if needed.

#### **Functional limitations**

The system may not be fully functional in the following situations:

- ▷ In heavy fog, wet conditions, or snowfall.
- In the event of missing, worn, poorly visible, merging, diverging, or multiple lane markings such as in construction areas.
- When lane markings are covered in snow, ice, dirt or water.
- In tight curves or on narrow lanes.
- When the lane markings are covered by objects.

- When driving very close to the vehicle in front of you.
- When driving toward bright lights.
- When the windshield in front of the interior mirror is fogged over, dirty or covered with stickers, etc.
- During calibration of the camera immediately after vehicle delivery.

# **Brake force display**

# Concept

Additional brake lights indicate emergency braking to the traffic behind. This can reduce the risk of a rear-end collision.

# **General information**



- During normal brake application, the outer brake lights light up.
- During heavy brake application, the inner brake lights additionally light up.

# Alertness assistant

## Concept

The system can detect decreasing alertness or fatigue of the driver during long, monotonous trips, for instance on highways. In this situation, it is recommended that the driver takes a break.

# Safety information

# \Lambda WARNING

The system cannot serve as a substitute for the driver's personal judgment in assessing one's physical state. An increasing lack of alertness or fatigue may not be detected or not be detected in time. There is a risk of an accident. Make sure that the driver is rested and alert. Adjust driving style to traffic conditions.

# Function

The system is switched on each time the engine is started and cannot be switched off.

After travel has begun, the system monitors certain aspects of the driver's behavior, so that decreasing alertness or fatigue can be detected.

This procedure takes the following criteria into account:

- Personal driving style, for instance steering behavior.
- > Driving conditions, for instance length of trip.

Starting at approximately 43 mph/70 km/h, the system is active and can display a recommendation to take a break.

## **Break recommendation**

If the driver becomes less alert or fatigued, a message is displayed in the Control Display with the recommendation to take a break.

A recommendation to take a break is displayed only once during an uninterrupted trip.

After a break, another recommendation to take a break cannot be displayed until after approximately 45 minutes.

## **System limits**

The function may be limited in the following situations, for instance and will either output an incorrect warning or no warning at all:

When the clock is set incorrectly.

- When the vehicle speed is mainly below about 43 mph/70 km/h.
- With a sporty driving style, such as during rapid acceleration or when cornering fast.
- In active driving situations, such as when changing lanes frequently.
- ▶ When the road surface is poor.
- In the event of strong side winds.

The system is reset approx. 45 minutes after parking the vehicle, for instance in the case of a break during longer trips on highways.

# **Driving stability control systems**

# Vehicle features and options

This chapter describes all standard, country-specific and optional features offered with the series. It also describes features that are not necessarily available in your vehicle, e. g., due to the selected options or country versions. This also applies to safety-related functions and systems. When using these functions and systems, the applicable laws and regulations must be observed.

# Anti-lock Braking System ABS

ABS prevents locking of the wheels during braking.

The vehicle maintains its steering power even during full brake applications, thus increasing active safety.

ABS is operational every time you start the engine.

# **Brake assistant**

When you apply the brakes rapidly, this system automatically boosts the vehicle braking capability to the furthest possible extent. It reduces the braking distance to a minimum during emergency stop. This system utilizes all of the capabilities provided by the Antilock Brake System ABS.

Do not reduce the pressure on the brake pedal for the duration of the emergency stop.

# **M Drive**

#### Concept

Individual settings can be carried out in two preassigned configurations for the vehicle.

When the engine is started, an efficient vehicle state is active by default. M Drive is deactivated.

# **General information**

#### Configurations

The configurations are preassigned as follows:

- ▷ "M Drive 1": relaxed, comfortable driving.
- ▶ "M Drive 2": sporty, dynamic driving.

#### Setting options

Symbol	Meaning
<b>₽₀</b> ₱₽ "DSC"	Dynamic Stability Control DSC, refer to page 157, and M Dynamic Mode MDM.
🕅 "Engine"	Programs of M Engine Dy- namics Control, refer to page 116.
	Programs of Servotronic, refer to page 159.
<b>y</b> "Transmission"	Drivelogic, refer to page 114: shift modes and Drivelogic driving pro- grams.

#### **Configuring M Drive**

The preassigned configurations can be individually adjusted. Via iDrive:

- 1. "My Vehicle"
- 2. "M Drive 1" or "M Drive 2"
- 3. Select the desired setting option.
- 4. Select the desired channel.

Individual settings are stored for the profile currently used.

When M Drive is active, any changes to the setting are immediately applied.

# Activating/deactivating M Drive

# Activating

Press the corresponding button on the steering wheel:

► (M)<sub>1</sub>

Activate M Drive 1.



Activate M Drive 2.

If DSC OFF or MDM is set in M Drive, a message appears in the instrument cluster. This message is confirmed by pressing the button again.

## Deactivating

Press the corresponding button on the steering wheel.

# **Indicator lights**

Symbol	Description
<b>M</b> <sub>1</sub>	Indicator light comes on: corre- sponding M Drive is activated.
<b>M</b> <sub>2</sub>	
$(M)_1$	Indicator light flashes: M Drive could not be activated.
<b>M</b> <sub>2</sub>	Antilock braking system ABS or Dynamic Stability Control DSC directly regulate the driving sta- bility.
	Reactivate M Drive if indicator light is no longer flashing.

# Performing M Drive settings using the buttons

If M Drive is activated, individual settings can also be modified outside of M Drive, for instance using the buttons in the center console. This deactivates M Drive.

To reactivate all settings made for M Drive on the Control Display, briefly press one of the following buttons:



► (M)2

To adopt the changed settings in M Drive, press and hold the corresponding button.

# **Reset M Drive**

Individual settings can be reset to default values.

- 1. "My Vehicle"
- 2. "M Drive 1" or "M Drive 2"
- 3. "Reset M1" or "Reset M2"
- 4. "OK"

To cancel resetting: "Cancel"

# DSC Dynamic Stability Control

### Concept

Within the physical limits, the system helps to keep the vehicle on a steady course by reducing engine speed and by applying brakes to the individual wheels.

### **General information**

DSC detects the following unstable driving conditions, for instance:

- ▷ Fishtailing, which can lead to oversteering.
- Loss of traction of the front wheels, which can lead to understeering.

# **Safety information**

#### \land WARNING

The system cannot serve as a substitute for the driver's personal judgment in assessing the traffic situation. Based on the limits of the system, it cannot independently react to all traffic situations. There is a risk of an accident. Adjust driving style to traffic conditions. Watch traffic closely and actively intervene where appropriate.

## 🛆 WARNING

When driving with a roof load, for instance with roof-mounted luggage rack, the vehicle's center of gravity is higher, which increases the risk of the vehicle tipping in critical driving situations. There is a risk of accidents or risk of damage to property. Do not deactivate DSC Dynamic Stability Control when driving with roof load.

#### **Overview**

#### **Button in the vehicle**





DSC OFF button

# Indicator/warning lights



The indicator light flashes: DSC controls the drive and braking forces.

The indicator light lights up: DSC has malfunctioned.

# Deactivating DSC: DSC OFF

#### **General information**

When DSC is deactivated, driving stability is reduced during acceleration and when driving in curves.

To increase vehicle stability, activate DSC again as soon as possible.

#### **Deactivating DSC**

Press and hold this button but not longer than approx. 10 seconds, until the indicator light for DSC OFF lights up in the instrument cluster and displays DSC OFF.

DSC is switched off.

#### Activating DSC



Press button.

DSC OFF and the DSC OFF indicator light go out.

#### Indicator/warning lights

When DSC is deactivated, DSC OFF is displayed in the instrument cluster.



The indicator light lights up: DSC is deactivated.

# M Dynamic Mode MDM

#### Concept

M Dynamic Mode makes it possible to drive on a dry roadway with high longitudinal and transverse acceleration but with limited vehicle stability.

Only in the absolute limit area does the system intervene for stabilization by reducing the engine power and by braking interventions on the wheels. In this driving condition, additional steering corrections may be necessary.

You may find it useful to briefly activate MDM under the following special circumstances:

- When driving in slush or on uncleared, snowcovered roads.
- When freeing vehicle from deep snow or driving off from loose ground.
- When driving with snow chains.

#### Safety information

## \Lambda WARNING

When M Dynamic Mode is activated, stabilizing interventions are carried out only to a reduced extent. There is a risk of accidents or risk of damage to property. Adjust driving style to traffic conditions. Watch traffic closely and actively intervene where appropriate. Do not jerk the steering wheel in response to a warning.

To increase vehicle stability, activate DSC again as soon as possible.

#### **Activating MDM**



Press the button briefly.

The MDM and DSC OFF symbols in the instrument cluster light up.

#### **Deactivating MDM**



- Press the button.
- The MDM and DSC OFF symbols go out.

#### Via iDrive

- 1. "My Vehicle"
- 2. "M Drive 1" or "M Drive 2"
- 3. "DSC"
- 4. "MDM"

To open M Drive with the selected settings, press the corresponding button on the steering wheel:



A message appears in the instrument cluster. This message is confirmed by pressing the button again.

#### **Deactivating MDM**

Press the appropriate button 1 or button 2 on the steering wheel again.

M Dynamic Mode and the settings selected under M Drive are deactivated.

#### Indicator/warning lights

Symbol	Description
MDM	Symbols light up: M Dynamic Mode is activated.
CFF	

2 2 2 DSC indicator light also flashes: M Dynamic Mode controls the drive forces and braking forces.

Indicator lights light up: M Dynamic Mode or DSC has failed.

# **Active M differential**

## Concept

The active M differential provides for continuously variable locking of the rear axle differential depending on the driving situation. This prevents individual rear wheels from spinning even when DSC is switched off and in M Dynamic Mode, enabling optimum traction to be achieved in all driving situations.

The driver is responsible adapting his or her driving style to the situation.

# Servotronic

## Concept

Servotronic is a speed-dependent power steering function.

The system provides the steering force with more support at low speeds than at higher ones. This makes it easier to park, for instance, and makes steering more direct when driving at faster speeds.

Furthermore, the steering force adapts according to the driving program, so that a direct, sporty feel or a comfortable steering response is conveyed.

#### **Programs**

Steering force setting options:

- ▷ "Sport Plus": high.
- ▷ "Sport": medium.
- "Comfort": low.

## **Selecting a channel**

#### Via iDrive

- 1. "My Vehicle"
- 2. "M Drive 1" or "M Drive 2"
- 3. "Steering"
- 4. Select the desired channel.

When M Drive is active, setting is immediately applied.

To activate M Drive with the selected settings, press the corresponding button on the steering wheel:



#### Using the button



Press the button repeatedly until the desired program is displayed in the instrument cluster.

### **Display in the instrument cluster**



Servotronic with selected program with activated display of the System states of the driving dynamics, refer to page 124.

# **Drive-off assistant**

#### Concept

This system supports driving off on uphill grades. The parking brake is not required.

#### Driving off with the drive-off assistant

- 1. Hold the vehicle in place with the foot brake.
- 2. Release the foot brake and drive off without delay.

After the foot brake is released, the vehicle is held in place for approx. 2 seconds.

Depending on the vehicle load or when a trailer is used, the vehicle may roll back slightly.

# **Driving comfort**

# Vehicle features and options

This chapter describes all standard, country-specific and optional features offered with the series. It also describes features that are not necessarily available in your vehicle, e. g., due to the selected options or country versions. This also applies to safety-related functions and systems. When using these functions and systems, the applicable laws and regulations must be observed.

# **Cruise control**

#### Concept

Using this system, a desired speed can be adjusted using the buttons on the steering wheel. The system maintains the desired speed. The system accelerates and brakes automatically as needed.

#### **General information**

Depending on the driving settings, the features of the cruise control can change in certain areas.

## **Safety information**

#### 🛆 WARNING

The system cannot serve as a substitute for the driver's personal judgment in assessing the traffic situation. Based on the limits of the system, it cannot independently react to all traffic situations. There is a risk of an accident. Adjust driving style to traffic conditions. Watch traffic closely and actively intervene where appropriate.

#### \Lambda WARNING

The use of the system can lead to an increased risk of accidents in the following situations, for instance:

- ▷ On winding roads.
- ▷ In heavy traffic.
- ▷ On slippery roads, in fog, snow, or wet conditions, or on a loose road surface.

There is a risk of accidents or risk of damage to property. Only use the system if driving at constant speed is possible.

#### \land WARNING

The desired speed can be incorrectly adjusted or called up by mistake. There is a risk of an accident. Adjust the desired speed to the traffic conditions. Watch traffic closely and actively intervene where appropriate.

#### **Overview**

#### Buttons on the steering wheel

Button	Function
ିର	Cruise control on/off, interrupting, re- fer to page 162.
SET	Store speed, refer to page 162.
RES	Resume speed, continue cruise con- trol, refer to page 163.
	Rocker switch:
	Set speed, refer to page 162.

# Switching on/off and interrupting cruise control

#### Switching on



Press button on the steering wheel.

The marking in the speedometer is set to the current speed.

Cruise control can be used.

DSC Dynamic Stability Control is switched on, if necessary.

#### Switching off



Press button on the steering wheel.

- If active: press twice.
- ▷ If interrupted: press once.

The displays go out. The stored desired speed is deleted.

#### Interrupting manually



When active, press the button on the steering wheel.


#### Interrupting automatically

The system is automatically interrupted in the following situations:

- When the driver applies the brakes.
- If the clutch pedal is depressed for a few seconds or released while a gear is not engaged.
- If the gear engaged is too high for the current speed.
- When M Dynamic Mode MDM is activated or DSC Dynamic Stability Control is deactivated.
- ▷ If DSC Dynamic Stability Control intervenes.

# Setting the speed

#### Maintaining/storing the speed

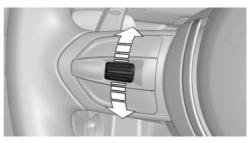

Press the rocker switch up or down once while the system is interrupted.

When the system is switched on, the current speed is maintained and stored as the desired speed.


The stored speed is displayed in the speedometer and in the instrument cluster, refer to page 163.

DSC Dynamic Stability Control is switched on, if necessary.

The speed can also be stored by pressing a button.

SET Press button.

#### Changing the speed

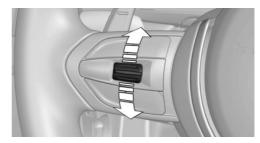

Press the rocker switch up or down repeatedly until the desired speed is set.

If active, the displayed speed is stored and the vehicle reaches the stored speed when the road is clear.

- Each time the rocker switch is pressed to the point of resistance, the desired speed increases or decreases by approx. 1 mph/1 km/h.
- Each time the rocker switch is pressed past the point of resistance, the desired speed increases or decreases by a maximum of 5 mph/10 km/h.

The maximum speed that can be set depends on the vehicle.

Pressing the rocker switch to the resistance point and holding it accelerates or decelerates the vehicle without requiring pressure on the accelerator pedal.

After the rocker switch is released, the vehicle maintains its final speed. Pressing the switch beyond the resistance point causes the vehicle to accelerate more rapidly.

## **Continuing cruise control**

#### General information

An interrupted cruise control can be continued by calling up the stored speed.

Make sure that the difference between current speed and stored speed is not too large before calling up the stored speed. Otherwise, unintentional braking or accelerating may occur.

In the following cases, the stored speed value is deleted and cannot be called up again:

- When the system is switched off.
- When the ignition is switched off.

#### Calling up stored speed

Press button on the steering wheel.

The stored speed is reached again and maintained.

#### **Displays in the instrument** cluster

#### Indicator light



Depending on how the vehicle is equipped, the indicator light in the instrument cluster indicates whether the system is switched on.

#### Desired speed and stored speed



- Marking lights up green: system is active, the marking indicates the desired speed.
- Marking lights up orange: system is interrupted, the marking indicates the stored speed.
- > The marking does not light up: the system is switched off.

#### Status display



Selected desired speed.

If no speed is indicated, it is possible that the conditions necessary for operation are not currently fulfilled.

# System limits

#### **Engine power**

The desired speed is also maintained downhill, but may not be maintained on uphill grades if engine power is insufficient.

# PDC Park Distance Control

#### Concept

PDC is a support when parking. The system detects objects behind the vehicle. If the vehicle is equipped with front PDC, objects in front of the vehicle are detected too. Objects that you are

CONTROLS

approaching slowly are indicated by signal tones and a display on the Control Display.

# **General information**

The ultrasound sensors for measuring the distances are located in the bumpers.

The maneuvering range, depending on the obstacle and environmental conditions, is approx. 6 ft/2 m.

An acoustic warning is first given in the following situations:

- By the front sensors and the two rear corner sensors at approx. 24 in/60 cm from the object.
- By the rear middle sensors at a distance to the object of approx. 5 ft/1.50 m.
- ▶ When a collision is imminent.

# **Safety information**

#### 🛆 WARNING

The system cannot serve as a substitute for the driver's personal judgment in assessing the traffic situation. Based on the limits of the system, it cannot independently react to all traffic situations. There is a risk of an accident. Adjust driving style to traffic conditions. Watch traffic closely and actively intervene where appropriate.

## \land WARNING

Due to high speeds when PDC Park Distance Control is activated, the warning can be delayed due to physical circumstances. There is a risk of injury or risk of damage to property. Avoid approaching an object too fast. Avoid driving off fast while PDC Park Distance Control is not yet active.

#### **Overview**

### With front PDC: button in vehicle





Park assistance button

#### **Ultrasound sensors**



Ultrasound sensors of the PDC, for instance in the bumpers.

## **Functional requirements**

Ensure full functionality:

- Do not cover sensors, for instance with stickers, bicycle racks.
- ▷ Keep the sensors clean and unobstructed.

# Switching on/off

#### Switching on automatically

With the engine running, engage the selector lever in position R.

#### Automatic deactivation during forward travel

The system switches off when a certain driving distance or speed is exceeded.

Switch the system back on, if needed.

# With front PDC: switching on/off manually

₽∥

Press park assistance button.

- ▷ On: the LED lights up.
- ▷ Off: the LED goes out.

#### WARNING

#### **Signal tones**

An intermittent tone indicates when the vehicle is approaching an object. E.g., if an object is detected to the left rear of the vehicle, a signal tone sounds from the left rear speaker.

The shorter the distance to the object, the shorter the intervals.

If the distance to a detected object is less than approx. 10 inches/25 cm, a continuous tone is sounded.

With front PDC: if objects are simultaneously located both in front of and behind the vehicle, an alternating continuous signal is sounded.

#### Volume

The ratio of the PDC signal tone volume to the entertainment volume can be adjusted.

Via iDrive:

- 1. "My Vehicle"
- 2. "iDrive settings"
- 3. "Tone"
- 4. "Volume settings"
- 5. "PDC"
- 6. Set the desired value.

The setting is stored for the driver profile currently used.

#### **Visual warning**



The approach of the vehicle to an object is shown on the Control Display. Objects that are farther away are already displayed on the Control Display before a signal sounds.

A display appears as soon as Park Distance Control (PDC) is activated.

The range of the sensors is represented in the colors green, yellow and red.

When the image of the rearview camera is displayed, the switch can be made to PDC:

- 1. Move the Controller to the left, if needed.
- 2. 📌 "Rear view camera"

## **System limits**

#### Safety information

#### 🛆 WARNING

The system can react not at all, too late, incorrectly, or without justification due to the system limits. There is a risk of accidents or risk of damage to property. Follow the information regarding the system limits and actively intervene if needed.

#### Limits of ultrasonic measurement

Ultrasonic measurements might not function in the following situations:

▶ For small children and animals.

- For persons with certain clothing, for instance coats.
- With external interference of the ultrasound, for instance from passing vehicles or loud machines.
- When sensors are dirty, iced over, damaged or out of position.
- Under certain weather conditions such as high relative humidity, wet conditions, snowfall, extreme heat, or strong wind.
- With tow bars and trailer couplings of other vehicles.
- With thin or wedge-shaped objects.
- ▷ With moving objects.
- With elevated, protruding objects such as ledges or cargo.
- ▶ With objects with corners and sharp edges.
- With objects with a fine surface structure such as fences.
- ▶ For objects with porous surfaces.
- If cargo protrudes.
- Low objects already displayed, for instance curbs, can move into the blind area of the sensors before or after a continuous tone sounds.

#### False warnings

The system may issue a warning under the following conditions even though there is no obstacle within the detection range:

- In heavy rain.
- When sensors are very dirty or covered with ice.
- When sensors are covered in snow.
- On rough road surfaces.
- On uneven surfaces, such as speed bumps.
- In large buildings with right angles and smooth walls, for instance in underground garages.
- In automatic vehicle washes.

- Due to heavy exhaust.
- Due to other ultrasound sources, for instance sweeping machines, high pressure steam cleaners or neon lights.

As soon as the malfunction due to other ultrasound sources is no longer present, the system is again fully functional.

#### Malfunction

A Check Control message is displayed.

The range of the sensors is shown as a shaded area on the Control Display.

PDC has failed. Have the system checked by a dealer's service center or another qualified service center or repair shop.

# **Rearview camera**

#### Concept

The rearview camera provides assistance in parking and maneuvering backwards. The area behind the vehicle is shown on the Control Display.

#### **Safety information**

#### 🛆 WARNING

The system cannot serve as a substitute for the driver's personal judgment in assessing the traffic situation. There is a risk of an accident. Adjust driving style to traffic conditions. Watch traffic and vehicle surroundings closely and actively intervene where appropriate.

#### **Overview**


# Depending on the vehicle equipment: button in the vehicle





Park assistance button

#### Camera

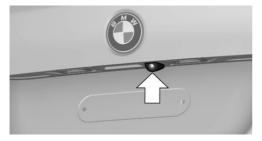

The camera lens is located in the handle of the tailgate.

The image quality may be impaired by dirt. If necessary, clean the camera lens.

## Switching on/off

#### Switching on automatically

The system is switched on automatically if selector lever position R is engaged when the engine is running.

The rearview camera image is displayed if the system was switched on via iDrive.

# Automatic deactivation during forward travel

The system switches off when a certain driving distance or speed is exceeded.

Switch the system back on, if needed.

#### Depending on the vehicle equipment: switching on/off manually



Press park assistance button.

- ▷ On: the LED lights up.
- ▷ Off: the LED goes out.

The parking assistance functions are shown on the Control Display.

#### Switching the view via iDrive

If the rearview camera view is not displayed, change the view via iDrive:

- 1. Move the Controller to the left, if needed.
- 2. Rear view camera"

The rearview camera image is displayed.

# **Display on the Control Display**

#### **Functional requirement**

- ▶ The rearview camera is switched on.
- ▶ The tailgate is fully closed.
- Keep the recording range of the camera clear. Protruding cargo can lead to malfunctions.

#### Activating assistance functions

More than one assistance function can be active at the same time.

Move the Controller to the left, if needed.

Parking aid lines

Parking aid lines"


Lanes and turning radius are indicated.

Obstacle marking

#### ₱ "Obstacle marking"

Obstacles are marked, depending on the vehicle equipment.

#### **Pathway lines**

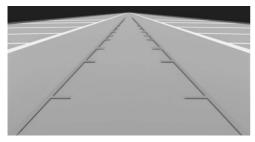

Pathway lines can be superimposed on the image of the rearview camera.

Pathway lines help you to estimate the space required when parking and maneuvering on level roads.

Pathway lines depend on the current steering angle and are continuously adjusted to the steering wheel movements.

#### **Turning radius lines**




Turning radius lines can only be superimposed on the rearview camera image together with pathway lines.

Turning radius lines show the course of the smallest possible turning radius on a level road.

Only one turning radius line is displayed after the steering wheel is turned past a certain angle.

#### **Obstacle marking**

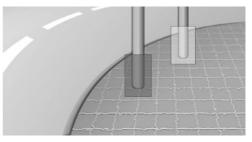


Depending on the vehicle equipment, obstacle markings can be faded into the image of the rearview camera.


The colored thresholds of the obstacle markings match the markings of the PDC Park Distance Control.

# Parking using pathway and turning radius lines

 Position the vehicle so that the turning radius lines lead to within the limits of the parking space.

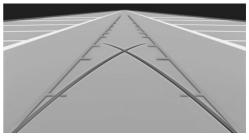

2. Turn the steering wheel to the point where the pathway line covers the corresponding turning radius line.

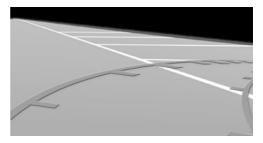

# **Display settings**

#### **Brightness**

With the rearview camera switched on:

- 1. Move the Controller to the left, if needed.
- 2. Select the symbol.
- 3. Turn the Controller until the desired setting is reached, and press the Controller.

#### Contrast

With the rearview camera switched on:

- 1. Move the Controller to the left, if needed.
- 2. O Select the symbol.
- 3. Turn the Controller until the desired setting is reached, and press the Controller.

# **System limits**

#### **Detection of objects**

Very low obstacles as well as high, protruding objects such as ledges may not be detected by the system.

Depending on the vehicle equipment, some assistance functions also consider data from the PDC Park Distance Control.

Follow the notes in the PDC Park Distance Control chapter.

The objects displayed on the Control Display may be closer than they appear. Do not estimate the distance from the objects on the display.

# **Climate control**

# Vehicle features and options

This chapter describes all standard, country-specific and optional features offered with the series. It also describes features that are not necessarily available in your vehicle, e. g., due to the selected options or country versions. This also applies to safety-related functions and systems. When using these functions and systems, the applicable laws and regulations must be observed.

- Emission tested car's interior.
- Microfilter.
- Air conditioning system to control the temperature, air flow and recirculated-air mode.


Depending on the equipment specification:

- ▷ Microfilter/activated-charcoal filter.
- ▶ Automatic recirculated-air control AUC.
- Parked-car ventilation.

# **Interior air quality**

The air quality in the vehicle is improved by the following components:

# Automatic climate control

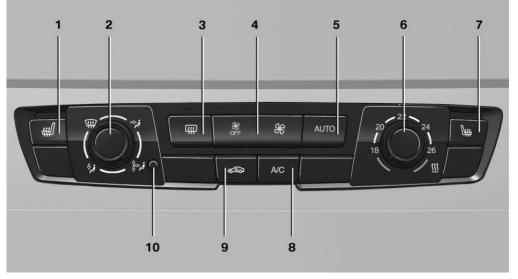

1 Seat heating, left 86

2 Air distribution settings

- 3 Rear window defroster
- 4 Air flow
- 5 AUTO program
- 6 Temperature

# Climate control functions in detail

#### Switching the system on/off

#### Switching on

Press any button except for the following:

- Rear window defroster.
- Seat heating.

#### Switching off



Press the left button for the minimum speed.

#### Temperature

#### Concept

The automatic climate control achieves the set temperature as quickly as possible, if necessary by using the maximum cooling or heating power, and then keeps it constant.

#### Settings



Turn the ring to set the desired temperature.

Do not rapidly switch between different temperature settings. Otherwise, the automatic climate control will not have sufficient time to adjust the set temperature.

- 7 Seat heating, right 86
- 8 Air conditioning
- 9 Recirculated-air mode
- 10 Interior temperature sensor

#### Air conditioning

#### Concept

The air in the car's interior will be cooled and dehumidified and, depending on the temperature setting, warmed again.

The car's interior can only be cooled with the engine running.

#### Switching on/off



Press button.

The LED is illuminated with air conditioning switched on.

Depending on the weather, the windshield and side windows may fog up briefly when the engine is started.

The air conditioning is switched on automatically with the AUTO program.

When using the automatic climate control, condensation water, refer to page 200, develops and drains underneath the vehicle. This is normal.

#### **AUTO program**

#### Concept

The AUTO program cools, ventilates or heats the car's interior automatically.

The air flow, air distribution and temperature will be controlled automatically depending on the interior temperature and the setting for the desired temperature.

#### Switching on/off



Press button.

The LED is illuminated with the AUTO program switched on.

Depending on the selected temperature and outside influences, the air is directed to the windshield, side windows, upper body, and into the floor area.

The air conditioning, refer to page 171, is switched on automatically with the AUTO program.

#### **Recirculated-air mode**

#### Concept

You may react to unpleasant odors or pollutants in the immediate environment by temporarily suspending the supply of outside air. The system then recirculates the air flow within the vehicle.

#### Operation



Press button repeatedly to select an operating mode:

- ▶ LED off: outside air flows in continuously.
- LED on, recirculated-air mode: the supply of outside air into the vehicle is permanently blocked.

To prevent window fogging, recirculated-air mode switches off automatically after a certain amount of time, depending on the environmental conditions.

With constant recirculated-air mode, the air quality in the car's interior deteriorates and the fogging of the windows increases.

If the windows fog over, switch off recirculatedair mode and increase the air flow, if needed.

## Controlling the air flow manually

#### Concept

The air flow for climate control can be adjusted manually.

#### Operation



Press the left or right side of the button: decrease or increase air flow.

The air flow from the air conditioner may be reduced automatically to save battery power.

# Controlling the air distribution manually

#### Concept

The air distribution for climate control can be adjusted manually.

#### Operation



Turn the wheel to select the desired program or the desired intermediate setting.

- ▶ 🗰 Windows.
- View State Stat
- Windows, upper body region, and floor area.
- Isor area.

# Defrosting windows and removing condensation

Make the following settings to defrost the windows and remove condensation:

- Direct the air distribution onto the windows.
- ▷ Increasing the air flow.
- ▷ Increase the temperature.
- ▷ Switch on the air conditioning if needed.

#### **Rear window defroster**




Press the button. The LED lights up.

The rear window defroster switches off automatically after a certain period of time.

#### Microfilter

In external and recirculated-air mode the microfilter filters dust and pollen from the air. Have this filter changed during vehicle maintenance, refer to page 236.

# Automatic climate control with enhanced features

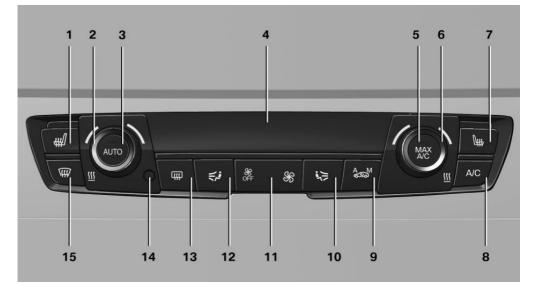

- 1 Seat heating, left 86
- 2 Temperature, left
- 3 AUTO program
- 4 Display
- 5 Maximum cooling
- 6 Temperature, right
- 7 Seat heating, right 86
- 8 Air conditioning
- 9 Automatic recirculated-air control/recirculated-air mode

- 10 Air distribution, right
- 11 Air flow, AUTO intensity
- 12 Air distribution, left
- 13 Rear window defroster
- 14 Interior temperature sensor always keep clear
- **15** Defrosting windows and removing condensation

# Climate control functions in detail

#### Switching the system on/off

#### Switching on

Press any button except for the following:

- Rear window defroster.
- Seat heating.

#### Switching off

Press the left button for the minimum speed.

#### Temperature

#### Concept

The automatic climate control achieves the set temperature as quickly as possible, if necessary by using the maximum cooling or heating power, and then keeps it constant.

#### Settings



Turn the ring to set the desired temperature.

The automatic climate control reaches this temperature as quickly as possible, if needed, by increasing the cooling or heating output, and then keeps it constant.

Do not rapidly switch between different temperature settings. Otherwise, the automatic climate control will not have sufficient time to adjust the set temperature.

#### Air conditioning

#### Concept

The air in the car's interior will be cooled and dehumidified and, depending on the temperature setting, warmed again. The car's interior can only be cooled with the engine running.

#### Switching on/off



Press the button.

The LED is illuminated with air conditioning switched on.

Depending on the weather, the windshield and side windows may fog up briefly when the engine is started.

The air conditioning is switched on automatically with the AUTO program.

When using the automatic climate control, condensation water, refer to page 200, develops and drains underneath the vehicle. This is normal.

#### **Maximum cooling**

#### Concept

The system is set to the lowest temperature, optimum air flow and recirculated-air mode.

#### **General information**

The function is available above an external temperature of approx. 32 °F/0 °C And with the engine running.

#### Switching on/off



Press button.

The LED is illuminated with the system switched on.

Air flows out of the vents to the upper body region. The vents need to be open for this.

The air flow can be adjusted with the air flow active.

#### **AUTO program**

#### Concept

The AUTO program cools, ventilates or heats the car's interior automatically.

The air distribution and temperature are controlled automatically depending on the temperature in the car's interior and the desired temperature setting including the selected intensity of the air flow.

#### Switching on/off

AUTO Pre

Press button.

The LED is illuminated with the AUTO program switched on.

Depending on the selected temperature, the intensity of the AUTO program, and outside influences, the air is directed to the windshield, side windows, upper body, and into the floor area.

The air conditioning, refer to page 174, is switched on automatically with the AUTO program.

At the same time, a condensation sensor controls the program so as to prevent window condensation as much as possible.

In the AUTO program, the air flow may be reduced during a phone call on the hands-free system.

#### Intensity

With the AUTO program switched on, the intensity can be set. This changes the automatic control for the air flow and air distribution.



Press the left or right side of the button: decrease or increase intensity.

The selected intensity is shown on the display of the automatic climate control.

# Automatic recirculated-air control/ recirculated-air mode

#### Concept

The automatic recirculated-air control AUC recognizes odors or pollutants in the outside air. The outside air supply is shut off and the interior air is recirculated.

#### **General information**

If the system is activated, a sensor detects pollutants in the outside air and controls the shut-off automatically.

If the system is deactivated, outside air continuously flows into the car's interior.

With constant recirculated-air mode, the air quality in the car's interior deteriorates and the fogging of the windows increases.

#### Switching on/off



Press button repeatedly to select an operating mode:

- ▶ LEDs off: outside air flows in continuously.
- Left LED on, automatic recirculated-air control: a sensor detects pollutants in the outside air and shuts off automatically.
- Right LED on, recirculated-air mode: the supply of outside air into the vehicle is permanently blocked.

Recirculated-air mode switches off automatically at low external temperatures after a certain amount of time in order to avoid window fogging.

If the windows are fogged over, switch off the recirculated-air mode and press the AUTO button to utilize the condensation sensor. Make sure that air can flow to the windshield.

#### Controlling the air flow manually

#### Concept

The air flow for climate control can be adjusted manually.

#### General information

To manually adjust air flow switch off AUTO program first.

#### Operation



Press the left or right side of the button: decrease or increase air flow.

The selected air flow is shown on the display of the automatic climate control.

The air flow of the automatic climate control may be reduced automatically to save battery power.

#### Controlling the air distribution manually

#### Concept

The air distribution for climate control can be adjusted manually.

#### Operation



Press button repeatedly to select a proaram:

- Upper body region.
- Upper body region and floor area.
- Floor area.
- ▶ Windows and floor area: driver's side only.
- ▶ Windows, upper body region and floor area: driver's side only.

If the windows are fogged over, press the AUTO button to utilize the condensation sensor.

#### **Defrosting windows and removing** condensation

#### Concept

Ice and condensation are guickly removed from the windshield and the front side windows

#### Switching on/off



Press button.

The LED is illuminated with the system switched on.

For this purpose, point the side vents towards the side windows as needed.

The air flow can be adjusted with the air flow active.

If the windows are fogged over, you can also switch on the air conditioning or press the AUTO button to utilize the condensation sensor.

#### Rear window defroster



Press the button. The LED lights up. The rear window defroster switches off automatically after a certain period of time.


#### Microfilter/activated-charcoal filter

In external and recirculated-air mode the microfilter/activated charcoal filter filters dust, pollen, and gaseous pollutants out of the air.

Have this filter changed during vehicle maintenance, refer to page 236.

# Ventilation

# Front ventilation

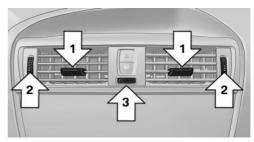

- Lever for changing the air flow direction, arrow 1.
- > Thumbwheels for opening and closing the vents continuously, arrows 2.
- Thumbwheel to vary the ventilation temperature in the upper body region, arrow 3.

Toward blue: colder.

Toward red: warmer.

This does not change the set interior temperature for the driver and front passenger.

#### **Settings**


Ventilation for cooling:

Direct vent in your direction when car's interior is too hot.

Draft-free ventilation:

Adjust the vent to let the air flow past you.

#### Ventilation in the rear

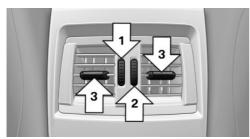

- Thumbwheel for variable opening and closing of the vents, arrow 1.
- Thumbwheel to vary the ventilation temperature, arrow 2.

Toward blue: colder.

Toward red: warmer.

This does not change the adjusted interior temperature.

Lever for changing the air flow direction, arrow 3.

# **Parked-car ventilation**

#### Concept

The parked-car ventilation ventilates the car's interior and lowers its temperature, if needed.

#### **General information**

The parked-car ventilation can be switched on and off directly or by using two preset activation times. The system remains switched on for 30 minutes. The parked-car ventilation system is operated via iDrive.

#### **Functional requirements**

- Direct operation: vehicle is in radio-ready state.
- Direct operation or preset activation time: does not depend on external temperature.
- Battery is sufficiently charged.

If parked-car ventilation is switched on, the vehicle battery will be discharged. Thus, limit the maximum activation time to save the vehicle battery. The system will be available again after the engine is started or after a short trip.

- Make sure that the vehicle's date and time are set correctly.
- > Open the vents to allow air to flow out.

## Switching on/off directly

Via iDrive:

- 1. "My Vehicle"
- 2. "Vehicle settings"
- 3. If necessary, "Climate functions"
- 4. "Activate comfort ventilation now"

Solution The automatic climate control flashes if the system is switched on.

#### Preselecting the activation time

Via iDrive:

- 1. "My Vehicle"
- 2. "Vehicle settings"
- 3. If necessary, "Climate functions"
- 4. "Comfort ventilation"
- 5. Select the desired activation time.
- 6. Set the desired time.

# Activating the activation time

Via iDrive:

- 1. "My Vehicle"
- 2. "Vehicle settings"
- 3. If necessary, "Climate functions"
- 4. "For start time at:"

Activate the desired activation time.

So The symbol on the automatic climate control lights up when the activation time is activated.

 $\ensuremath{\Re}$  The symbol on the automatic climate control flashes when the system has been switched on.

The system will only be switched on within the next 24 hours. After that, it needs to be reactivated.

# **Interior equipment**

# Vehicle features and options

This chapter describes all standard, country-specific and optional features offered with the series. It also describes features that are not necessarily available in your vehicle, e. g., due to the selected options or country versions. This also applies to safety-related functions and systems. When using these functions and systems, the applicable laws and regulations must be observed.

# Integrated Universal Remote Control

#### Concept

The integrated Universal Remote Control in the interior mirror can operate up to 3 functions of remote-controlled systems, such as garage door drives, barriers, or lighting systems. The Integrated Universal Remote Control replaces up to 3 different hand-held transmitters. To operate the remote control, the buttons on the interior mirror must be programmed with the desired functions. The hand-held transmitter for the particular system is required in order to program the remote control.

Before selling the vehicle, delete the stored functions for the sake of security.

# **Safety information**

#### ▲ WARNING

Body parts can be jammed when operating remote-controlled systems, such as the garage door, using the integrated Universal Remote Control. There is a risk of injury or risk of damage to property. Make sure that the area of movement of the respective system is clear during programming and operation. Also follow the safety information of the hand-held transmitter.

#### Compatibility

If this symbol is printed on the packaging or in the owner's manual of the system to be controlled, the system is generally


compatible with the integrated Universal Remote Control.

If you have any questions, please contact:

- A dealer's service center or another qualified service center or repair shop.
- www.homelink.com on the Internet.

HomeLink is a registered trademark of Gentex Corporation.

# Control elements on the interior mirror

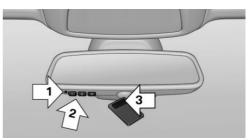

- ▶ LED, arrow 1.
- ▷ Buttons, arrow 2.
- The hand-held transmitter, arrow 3, is required for programming.

#### Programming

#### **General information**

- 1. Switch on the ignition.
- 2. Initial setup:

Press and hold the two outer buttons on the interior mirror simultaneously for approximately 20 seconds until the LED on the interior mirror flashes. This erases all programming of the buttons on the interior mirror.

- Hold the hand-held transmitter for the system to be controlled approx. 1 to 3 inches/2.5 to 8 cm away from the buttons of the interior mirror. The required distance depends on the hand-held transmitter.
- 4. Simultaneously press and hold the button of the desired function on the hand-held transmitter and the button to be programmed on the interior mirror. The LED on the interior mirror will begin flashing slowly.
- 5. Release both buttons as soon as the LED flashes more rapidly. The LED flashing faster indicates that the button on the interior mirror has been programmed.

If the LED does not flash faster after at least 60 seconds, change the distance between the interior mirror and the hand-held transmitter and repeat the step. Several more attempts at different distances may be necessary. Wait at least 15 seconds between attempts.

Canada: if programming with the hand-held transmitter was interrupted, hold down the interior mirror button and repeatedly press and release the hand-held transmitter button for 2 seconds.

6. To program other functions on other buttons, repeat steps 3 to 5.

The systems can be controlled using the interior mirror buttons.

# Special feature of the rolling code wireless system

If you are unable to operate the system after repeated programming, please check if the system to be controlled features a rolling code radio system.

Read the system's owner's manual, or press the programmed button on the interior mirror longer. If the LED on the interior mirror starts flashing rapidly and then stays lit constantly for 2 seconds, the system features a rolling code radio system. Flashing and continuous illumination of the LED will repeat for approximately 20 seconds.

For systems with a rolling code radio system, the integrated Universal Remote Control and the system also have to be synchronized.

Please read the owner's manual to find out how to synchronize the system.

Synchronizing is easier with the aid of a second person.

Synchronizing the universal remote control with the system:

- 1. Park the vehicle within range of the remotecontrolled system.
- 2. Program the desired button on the interior mirror as described.
- 3. Locate and press the synchronizing button on the system being programmed. You have approx. 30 seconds for the next step.
- 4. Hold down the programmed button on the interior mirror for approximately 3 seconds and then release it. If necessary, repeat this step up to three times in order to finish synchronization. Once synchronization is complete, the programmed function will be carried out.

# Reprogramming individual buttons

- 1. Switch on the ignition.
- 2. Press and hold the interior mirror button to be programmed.

- 3. As soon as the interior mirror LED starts flashing slowly, hold the hand-held transmitter for the system to be controlled approx. 1 to 3 inches/2.5 to 8 cm away from the buttons of the interior mirror. The required distance depends on the hand-held transmitter.
- 4. Likewise, press and hold the button of the desired function on the hand-held transmitter.
- Release both buttons as soon as the interior mirror LED flashes more rapidly. The LED flashing faster indicates that the button on the interior mirror has been programmed. The system can then be controlled by the button on the interior mirror.

If the LED does not flash faster after at most 60 seconds, change the distance and repeat the programming starting with step 4. Several more attempts at different distances may be necessary. Wait at least 15 seconds between attempts.

Canada: if programming with the hand-held transmitter was interrupted, hold down the interior mirror button and repeatedly press and release the hand-held transmitter button for 2 seconds.

#### Operation

#### 🛆 WARNING

Body parts can be jammed when operating remote-controlled systems, such as the garage door, using the integrated Universal Remote Control. There is a risk of injury or risk of damage to property. Make sure that the area of movement of the respective system is clear during programming and operation. Also follow the safety information of the hand-held transmitter.


The system, such as the garage door, can be operated using the button on the interior mirror while the engine is running or when the ignition is started. To do this, hold down the button within receiving range of the system until the function is activated. The interior mirror LED stays lit while the wireless signal is being transmitted.

#### **Deleting stored functions**

All stored functions will be deleted. The functions cannot be deleted individually. Press and hold the two outer buttons on the interior mirror simultaneously for approximately 20 seconds until the LED on the interior mirror flashes rapidly.

### **Digital compass**

#### **Overview**

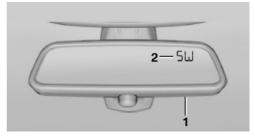

- 1 Control button
- 2 Mirror display

#### **Mirror display**

The point of the compass is displayed in the mirror when driving straight.

#### **Operating concept**

Various functions can be called up by pressing the control button with a pointed object, such as the tip of a ballpoint pen or similar object. The following setting options are displayed in succession, depending on how long the control button is pressed:


- Pressed briefly: turns display on/off.
- 3 to 6 seconds: compass zone setting.
- ▷ 6 to 9 seconds: compass calibration.

- 9 to 12 seconds: left/right-hand steering setting.
- ▶ 12 to 15 seconds: language setting.

#### Setting the compass zones

Sets the particular compass zones on the vehicle so that the compass operates correctly; refer to World map with compass zones.

#### World map with magnetic zones

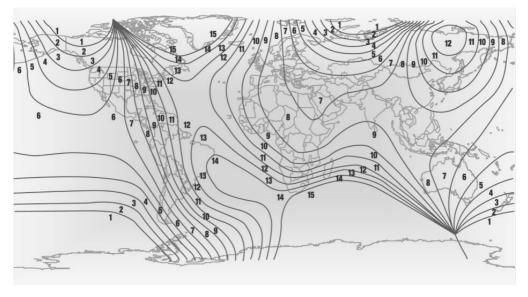

#### Procedure

- Press and hold the control button for approx.
  3 to 4 seconds. The number of the set compass zone appears in the mirror.
- To change the zone setting, press the control button quickly and repeatedly until the number of the compass zone that corresponds with your location appears in the mirror.

The set zone is stored automatically. The compass is ready for use again after approximately 10 seconds.

#### **Calibrating the digital compass**

The digital compass must be calibrated in the event of the following:

▶ The wrong compass point is displayed.

- The point of the compass displayed does not change despite changing the direction of travel.
- ▷ Not all points of the compass are displayed.

#### Procedure

- Make sure that there are no large metallic objects or overhead power lines near the vehicle and that there is sufficient room to drive around in a circle.
- 2. Set the currently applicable compass zone.
- Press and hold the control button for approx.
  6 to 7 seconds so that "C" appears on the display. Next, drive in a complete circle at least once at a speed of no more than 4 mph/7 km/h. If calibration is successful, the "C" is replaced by the points of the compass.

#### Left/right-hand steering

The digital compass is already set for right or left-hand steering at the factory.

#### Setting the language

Press and hold the control button for approx. 12 to 13 seconds. Briefly press the control button again to switch between English "E" and German "O".

Settings are stored automatically after approximately 10 seconds.

## Sun visor

#### **Glare shield**

Fold the sun visor down or up.

#### Vanity mirror

A vanity mirror is located in the sun visor behind a cover. When the cover is opened, the mirror lighting switches on.

## Ashtray/cigarette lighter

### Ashtray

#### Opening



Slide the cover forward.

#### Installing



The ashtray can be inserted in both cup holders.

#### Emptying

Take out the insert.

#### **Cigarette lighter**

#### 🛆 WARNING

Contact with the hot heating element or the hot socket of the cigarette lighter can cause burns. Flammable materials can ignite if the cigarette lighter falls down or is held against the respective objects. There is a risk of fire and injuries. Take hold of the cigarette lighter by its handle. Make sure that children do not use the cigarette lighter and burn themselves.

### 

If metal objects fall into the socket, they can cause a short circuit. There is a risk of damage to property. Replace the cigarette lighter or socket cover again after using the socket.



Slide the cover forward.



The cigarette lighter is located between the cup holders.



Push in the cigarette lighter.

The cigarette lighter can be removed as soon as it pops back out.

#### **Safety information**

#### \land WARNING

Devices and cables in the unfolding area of the airbags, such as portable navigation devices, can hinder the unfolding of the airbag or be thrown around in the car's interior during unfolding. There is a risk of injury. Make sure that devices and cables are not in the airbag's area of unfolding.

#### \land NOTICE

Battery chargers for the vehicle battery can work with high voltages and currents, which means that the 12 volt on-board network can be overloaded or damaged. There is a risk of damage to property. Only connect battery chargers for the vehicle battery to the starting aid terminals in the engine compartment.

### 🛆 NOTICE

If metal objects fall into the socket, they can cause a short circuit. There is a risk of damage to property. Replace the cigarette lighter or socket cover again after using the socket.

## Sockets

#### **General information**

The lighter socket can be used as a socket for electrical equipment while the engine is running or when the ignition is switched on.

The total load of all sockets must not exceed 140 watts at 12 volts.

Do not damage the socket by using non-compatible connectors.

#### Front center console



Slide the cover forward.




Remove the socket or cigarette lighter cover.

#### **Rear center console**



Remove the cover.

#### In the cargo area

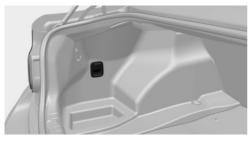

The socket is located on the left side in the cargo area.

### **USB** interface


#### Concept

Mobile devices with USB port can be connected to the USB interface.

#### **General information**

Follow the information regarding the connection of mobile devices to the USB interface in the section on USB connections, refer to page 57.

#### In the center armrest

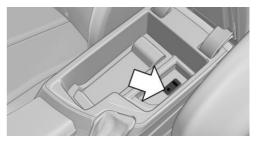

A USB interface is located in the center armrest.

#### In the center console



Slide the cover forward.



A USB interface is located in the center console.

### Cargo area

#### Enlarging the cargo area

#### Concept

The cargo area can be enlarged by folding down the rear seat backrest.

#### **General information**

The rear seat backrest is divided at a ratio of 60 to 40. The left rear seat backrest is connected to the center section.

With the through-loading system: the rear seat backrest is divided at a ratio of 40-20-40.

The rear seat backrests can be folded down from the cargo area. The center section can be separately folded down from the rear.

#### **Safety information**

#### \rm MARNING

Danger of jamming with folding down the backrests. There is a risk of injury or risk of damage to property. Make sure that the area of movement of the rear backrest and the of the head restraint is clear prior to folding down.

#### 🛆 WARNING

If a rear seat backrest is not locked, unsecured cargo can be thrown into the car's interior; for instance, in the event of an accident, braking or an evasive maneuver. There is a risk of injury. Make sure that the rear seat backrest is locked after folding it back.

#### \land WARNING


The stability of the child restraint system is limited or compromised with incorrect seat adjustment or improper installation of the child seat. There is a risk of injuries or danger to life. Make sure that the child restraint system fits securely against the backrest. If possible, adjust the backrest tilt for all affected backrests and correctly adjust the seats. Make sure that seats and backrests are securely engaged or locked. If possible, adjust the height of the head restraints or remove them.

### 🛆 NOTICE

Vehicle parts can be damaged when folding down the rear backrest. There is a risk of damage to property. Make sure that the area of movement of the rear backrest including head restraint is clear when folding down.

# Folding down the rear seat backrest from the cargo area

1. Pull the corresponding lever in the cargo area to release the rear seat backrest.

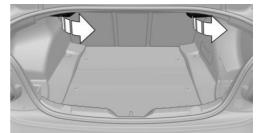

- 2. The unlocked rear seat backrest moves forward slightly.
- 3. Fold the rear seat backrest forward.



#### Fold back the backrest

Return the rear seat backrest to the seating position and engage it.

#### Fold down the center section



Press the switch and pull the center section forward.

# Storage compartments

# Vehicle features and options

This chapter describes all standard, country-specific and optional features offered with the series. It also describes features that are not necessarily available in your vehicle, e. g., due to the selected options or country versions. This also applies to safety-related functions and systems. When using these functions and systems, the applicable laws and regulations must be observed.

## **Safety information**

#### 🛆 WARNING

Loose objects or devices with a cable connection to the vehicle, for instance mobile phones, can be thrown into the car's interior while driving, for instance in the event of an accident or during braking and evasive maneuvers. There is a risk of injury. Secure loose objects or devices with a cable connection to the vehicle in the car's interior.

### 

Anti-slip pads such as anti-slip mats can damage the dashboard. There is a risk of damage to property. Do not use anti-slip pads.

## Storage compartments

The following storage compartments are available in the car's interior:

 Glove compartment on the front passenger side, refer to page 188.

- Glove compartment on the driver's side, refer to page 189.
- Compartments in the doors, refer to page 189.
- Front storage compartment, in front of the cup holders, refer to page 190.
- Storage compartment in the front center armrest, refer to page 190.
- Nets on the backrests of the front seats.
- Storage compartment in the rear center console, refer to page 190.
- With two rear seats: Storage compartment between the rear seats, refer to page 190.

### **Glove compartment**

#### Front passenger side

#### **Safety information**

#### 🛆 WARNING

Folded open, the glove compartment protrudes in the car's interior. Objects in the glove compartment can be thrown into the car's interior while driving, for instance in the event of an accident or during braking and evasive maneuvers. There is a risk of injury. Always close the glove compartment immediately after using it.

#### Opening



Pull the handle.

The light in the glove compartment switches on.

#### Closing

Fold cover closed.

#### Locking

The glove compartment can be locked with an integrated key to separately secure the tailgate, refer to page 74, for instance.

This prevents access to the glove compartment and to the cargo area.

After the glove compartment is locked, the remote control can be handed over, such as at a hotel, without the integrated key.

#### **Driver's side**

#### **Safety information**

#### 🛆 WARNING

Folded open, the glove compartment protrudes in the car's interior. Objects in the glove compartment can be thrown into the car's interior while driving, for instance in the event of an accident or during braking and evasive maneuvers. There is a risk of injury. Always close the glove compartment immediately after using it.

#### Opening



Pull the handle.

Closing Fold cover closed.

## **Compartments in the doors**

#### **General information**

There are storage compartments in the doors.

#### **Safety information**

#### \rm MARNING

Breakable objects, such as glass bottles or glasses, can break in the event of an accident or a braking or evasive maneuver. Broken glass can be scattered in the car's interior. There is a risk of injury or risk of damage to property. Do not use any breakable objects while driving. Only stow breakable objects in closed storage compartments.

### Front storage compartment



There is a storage compartment in the center console.

## **Center armrest**

#### Front

#### **General information**

A storage compartment is located in the center armrest between the front seats.

#### Opening



Fold the center armrest up.

#### Repositioning

The center armrest can be pushed forward or backward and engages in the end positions.

# Connection for an external audio device

An external audio device, for instance an MP3 player, can be connected via the USB audio interface in the center armrest.

# Storage compartment in the rear

A storage compartment is located in the center console.

# Storage compartment between the rear seats

There is a storage compartment between the rear seats.

## **Cup holders**

#### **Safety information**

#### 🛆 NOTICE

Unsuitable containers in the cup holder and hot beverages can damage the cup holder and increase the risk of injury in the event of an accident. There is a risk of injury or risk of damage to property. Use light-weight, unbreakable, and sealable containers. Do not transport hot beverages. Do not force objects into the cup holder.

#### Front




Two cup holders are located in the center console.

To open: slide the cover forward.

To close: slide the cover backward.

#### Rear

In the center armrest.

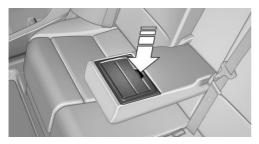

Pull the center armrest forward at the strap.

To open: press the button.

To close: push both covers back in, one after the other.

#### \Lambda NOTICE

With an open cup holder, the center armrest cannot be folded back up. There is a risk of damage to property. Press back the covers before the center armrest is folded up.

## **Clothes hooks**

#### **Safety information**

#### 🛆 WARNING

Clothing articles on the clothes hooks can obstruct the view while driving. There is a risk of an accident. When suspending clothing articles from the clothes hooks, ensure that they will not obstruct the driver's view.

#### \rm MARNING

Improper use of the clothes hooks can lead to a risk of objects flying about during braking and evasive maneuvers. There is a risk of injury and risk of damage to property. Only hang lightweight objects, for instance clothing articles, from the clothes hooks.

#### **General information**

The clothes hooks are located in the rear.

# Storage compartments in the cargo area

#### Storage compartment

One storage compartment each is located on the left and right side.

#### Net for storage compartment

Smaller objects can be stored in the net of right storage compartment.

#### **Multi-function hook**

#### \rm MARNING

Improper use of the multi-function hooks can lead to a risk of objects flying about during braking and evasive maneuvers, for example. There is a risk of injury and risk of damage to property. Only hang lightweight objects, such as shopping bags, from the multi-function hooks. Only transport heavy luggage in the cargo area if it has been appropriately secured.



A multi-function hook is located on each side of the cargo area.

#### Lashing eyes in the cargo area

To secure the cargo, refer to page 202, there are two or four lashing eyes in the cargo area.

#### **Floor net**

The floor net can also be used to secure the cargo, refer to page 202, and store small parts.



# **ORIVING TIPS**

BMW M2 Technology	196
Things to remember when driving	197
Loading	201
Saving fuel	204

# **BMW M2 Technology**

# Vehicle features and options

This chapter describes all standard, country-specific and optional features offered with the series. It also describes features that are not necessarily available in your vehicle, e. g., due to the selected options or country versions. This also applies to safety-related functions and systems. When using these functions and systems, the applicable laws and regulations must be observed.

## **High-performance engine**

#### **General information**

With a displacement of 3 liters, the high-performance engine generates a maximum power of 405 hp and a maximum torque of 405 lbs ft/550 Nm. With its spontaneous response behavior, a speed range of wide utility results. The maximum engine speed is 7,500 rpm and is controlled electronically. Because of the high engine dynamics, the maximum engine speed with the vehicle stationary is reduced.

#### Warm-up

During the engine warm-up phase, the high-performance engine has a somewhat rougher running behavior because of the emission controls.

When the engine is cold, the exhaust system has a slightly metallic undertone due to the nature of the system.

## **Compound brake**

The high-performance braking system has perforated compound brake discs. Because of particular structural characteristics, there may be operation-related noises during braking. The functional noises have no effect on the performance, operational reliability, and durability of the brake.

## Drivetrain

With this vehicle, particular value was placed on the direct connection from engine to the drivetrain. Due to the torsionally rigid design of the drivetrain, as is typical in a sports vehicle, the transmission of the torque also gives acoustic feedback.

When there are load changes, this may result in clicking noises. The clicking noises do not impair the operation or the service life of the components.

### **Driving on racetracks**

Higher mechanical and thermal loads during racetrack operation lead to increased wear. This wear is not covered by the warranty. The vehicle is not designed for use in motor sports competition.

The standard brake linings and the wear indicators are not designed for racetrack operation.

# Things to remember when driving

# Vehicle features and options

This chapter describes all standard, country-specific and optional features offered with the series. It also describes features that are not necessarily available in your vehicle, e. g., due to the selected options or country versions. This also applies to safety-related functions and systems. When using these functions and systems, the applicable laws and regulations must be observed.

## **Breaking-in period**

#### **General information**

Moving parts need to begin working together smoothly.

The following instructions will help you to achieve a long vehicle life and good efficiency.

During break-in, do not use the Launch Control.

#### **Safety information**

#### 🛆 WARNING

Due to new parts and components, safety and driver assistance systems can react with a delay. There is a risk of an accident. After installing new parts or with a new vehicle, drive conservatively and intervene early if necessary. Observe the break-in procedures of the respective parts and components.

# Engine, transmission, and axle drive

#### Up to 1,200 miles/2,000 km

Drive at varying engine and road speeds, but do not exceed 5,500 rpm and 106 mph/170 km/h.

Avoid full load or kickdown under all circumstances.

#### At 1,200 miles/2,000 km

Have drive-in checkup maintenance performed.

# From 1,200 miles/2,000 km to 3,100 miles/5,000 km

The engine and road speed can gradually be increased to a constant speed of 137 mph/220 km/h.

Use the maximum speed of 155 mph/250 km/h only briefly, for instance when passing.

#### Tires

Tire traction is not optimal due to manufacturing circumstances when tires are brand-new; they achieve their full traction potential after a break-in time.

Drive conservatively for the first 200 miles/300 km.

#### **Brake system**

Brake discs and brake pads only reach their full effectiveness after approx. 300 miles/500 km. Drive moderately during this break-in period.

#### Clutch

The function of the clutch reaches its optimal level only after a distance driven of approx. 300 miles/500 km. During this break-in period, engage the clutch gently.

#### Following part replacement

The same break-in procedures should be observed if any of the components above-mentioned have to be renewed in the course of the vehicle's operating life.

### **General driving notes**

#### **Closing the tailgate**

#### **Safety information**

#### 🛆 WARNING

An open trunk lid protrudes from the vehicle and can endanger occupants and other traffic participants or damage the vehicle in the event of an accident, braking or evasive maneuvers. In addition, exhaust fumes may enter the car's interior. There is a risk of injury or risk of damage to property. Do not drive with the trunk lid open.

#### Driving with the tailgate open

If driving with the tailgate open cannot be avoided:

- Close all windows and the glass sunroof.
- Greatly increase the air flow from the vents.
- Drive moderately.

#### Hot exhaust gas system

#### \rm MARNING

During driving operation, high temperatures can occur underneath the vehicle body, for instance caused by the exhaust gas system. If combustible materials, such as leaves or grass, come in contact with hot parts of the exhaust gas system, these materials can ignite. There is a risk of injury or risk of damage to property. Do not remove the heat shields installed and never apply undercoating to them. Make sure that no combustible materials can come in contact with hot vehicle parts in driving operation, idle or during parking. Do not touch the hot exhaust gas system.

# Mobile communication devices in the vehicle

#### 🛆 WARNING

Vehicle electronics and mobile phones can influence one another. There is radiation due to the transmission operations of mobile phones. There is a risk of injury or risk of damage to property. If possible, in the car's interior use only mobile phones with direct connections to an exterior antenna in order to exclude mutual interference and deflect the radiation from the car's interior.

#### Hydroplaning

On wet or slushy roads, a wedge of water can form between the tires and road surface.

This phenomenon is referred to as hydroplaning. It is characterized by a partial or complete loss of contact between the tires and the road surface, ultimately undermining your ability to steer and brake the vehicle.

#### **Driving through water**

#### **General information**

When driving through water, follow the following:

- Drive through calm water only.
- Drive through water only if it is not deeper than maximum 9.8 in/25 cm.
- Drive through water no faster than walking speed, up to 3 mph/5 km/h.

#### **Safety information**

#### Δ ΝΟΤΙCE

When driving too quickly through too deep water, water can enter into the engine compartment, the electrical system or the transmission. There is a risk of damage to property. When driving through water, do not exceed the maximum indicated water level and the maximum speed for driving through water.

#### **Braking safely**

#### **General information**

The vehicle is equipped with ABS as a standard feature.

Perform an emergency stop in situations that require such.

Steering is still responsive. You can still avoid any obstacles with a minimum of steering effort.

The pulsing of the brake pedal indicates that ABS is in its active mode.

In certain braking situations, the perforated brake discs can emit functional noises. Functional noises have no effect on the performance and operational reliability of the brake.

# Objects in the movement area around pedals and floor area

#### 🛆 WARNING

Objects in the driver's floor area can limit the pedal distance or block a depressed pedal. There is a risk of an accident. Stow objects in the vehicle such that they are secured and cannot enter into the driver's floor area. Use floor mats that are suitable for the vehicle and can be safely attached to the floor. Do not use loose floor mats and do not layer several floor mats. Make sure that there is sufficient clearance for the pedals. Ensure that the floor mats are securely fastened again after they were removed, for instance for cleaning.

#### **Driving in wet conditions**

When roads are wet, salted, or in heavy rain, gently press the brake pedal every few miles.

Ensure that this action does not endanger other traffic.

The heat generated during braking dries brake discs and brake pads and protects them against corrosion.

In this way braking efficiency will be available when you need it.

#### Hills

#### **General information**

Drive long or steep downhill gradients in the gear that requires least braking effort. Otherwise, the brakes may overheat and reduce brake efficiency.

Manual transmission:

You can increase the engine's braking effect by shifting down, going all the way to first gear, if needed.

M double-clutch transmission:

You can increase the engine's braking effect by shifting down in sequential mode, refer to page 112.

#### Safety information

#### 🛆 WARNING

Light but consistent brake pressure can lead to high temperatures, brakes wearing out and possibly even brake failure. There is a risk of an accident. Avoid placing excessive stress on the brake system.

#### \rm MARNING

In idle state or with the engine switched off, safety-relevant functions, for instance engine braking effect, braking force boost and steering assistance, are restricted or not available at all. There is a risk of an accident. Do not drive in idle state or with the engine switched off.

#### **Brake disc corrosion**

Corrosion on the brake discs and contamination on the brake pads are increased by the following circumstances:

- ▶ Low mileage.
- Extended periods when the vehicle is not used at all.
- Infrequent use of the brakes.
- Aggressive, acidic, or alkaline cleaning agents.

Corrosion buildup on the brake discs will cause a pulsating effect on the brakes in their response - generally this cannot be corrected.

# Condensation water under the parked vehicle

When using the automatic climate control, condensation water develops and collects underneath the vehicle.

#### Ground clearance

#### 

If ground clearance is insufficient, there might be contact with the front or rear spoiler, for instance when driving over curbs or entering into underground vehicle parking garages. There is a risk of damage to property. Ensure that there is sufficient ground clearance available.

# M Driver's Package: driving in the higher speed range

#### 🛆 WARNING

Damage to vehicle components can negatively impact the driving performance at high speeds. This includes, among other things, tires, undercarriage and parts for improving aerodynamics. There is a risk of an accident. Have damage corrected by a dealer's service center or another qualified service center or repair shop. Do not drive at high speeds until the damage is corrected.

# Loading

# Vehicle features and options

This chapter describes all standard, country-specific and optional features offered with the series. It also describes features that are not necessarily available in your vehicle, e. g., due to the selected options or country versions. This also applies to safety-related functions and systems. When using these functions and systems, the applicable laws and regulations must be observed.

## **Safety information**

#### 🛆 WARNING

High gross weight can overheat the tires, damage them internally and cause a sudden drop in tire inflation pressure. Driving characteristics may be negatively impacted, reducing lane stability, lengthening the braking distances and changing the steering response. There is a risk of an accident. Pay attention to the permitted load capacity of the tires and never exceed the permitted gross weight.

#### \land WARNING

Loose objects or devices with a cable connection to the vehicle, for instance mobile phones, can be thrown into the car's interior while driving, for instance in the event of an accident or during braking and evasive maneuvers. There is a risk of injury. Secure loose objects or devices with a cable connection to the vehicle in the car's interior.

#### \land WARNING

Improperly stowed objects can shift and be thrown into the car's interior, for instance in the event of an accident or during braking and evasive maneuvers. Vehicle occupants can be hit and injured. There is a risk of injury. Stow and secure objects and cargo properly.

#### 

Fluids in the cargo area can cause damage. There is a risk of damage to property. Make sure that no fluids leak in the cargo area.


### Steps for Determining Correct Load Limit

- Locate the statement "The combined weight of occupants and cargo should never exceed XXX kg or XXX lbs" on your vehicle's placard.
- Determine the combined weight of the driver and passengers that will be riding in your vehicle.
- Subtract the combined weight of the driver and passengers from XXX kg or XXX lbs
- The resulting figure equals the available amount of cargo and luggage load capacity. For example, if the "XXX" amount equals 1,400 lbs and there will be five 150 lbs passengers in your vehicle, the amount of available cargo and luggage load capacity is 650 lbs (1,400–750 (5 x 150) = 650 lbs)
- Determine the combined weight of luggage and cargo being loaded on the vehicle. That weight may not safely exceed the available

cargo and luggage load capacity calculated in Step 4.

 If your vehicle will be towing a trailer, load from your trailer will be transferred to your vehicle. Consult this manual to determine how this reduces the available cargo and luggage load capacity of your vehicle.

## Load

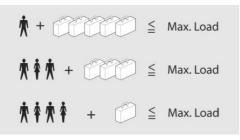

The maximum load is the sum of the weight of the occupants and the cargo.


The greater the weight of the occupants, the less cargo that can be transported.

# Stowing and securing cargo

- Cover sharp edges and corners on the cargo.
- Heavy cargo: stow as far forward as possible, directly behind and at the bottom of the rear passenger seat backrests.
- Very heavy cargo: when the rear seat is not occupied, secure each of the outer safety belts in the opposite buckle.
- If necessary, fold down the rear backrests to stow large cargo.
- Do not stack cargo above the top edge of the backrests.
- Smaller and lighter cargo: secure with ratchet straps, the floor net, or draw straps.

 Larger and heavy cargo: secure with cargo straps.

# Lashing eyes in the cargo area

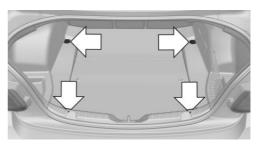


To secure the cargo there are two or four lashing eyes in the cargo area.

Attach load securing aids, such as lashing straps, retaining straps, draw straps or cargo nets, to the lashing eyes in the cargo area.

## **Floor net**

To secure the cargo the floor net can also be used.

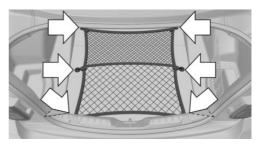

Hook the floor net into the fittings in the cargo area floor.

# Roof-mounted luggage rack

#### **General information**

Roof racks are available as special accessories.

### **Safety information**


#### 🛆 WARNING

When driving with a roof load, for instance with roof-mounted luggage rack, the vehicle's center of gravity is higher, which increases the risk of the vehicle tipping in critical driving situations. There is a risk of accidents or risk of damage to property. Do not deactivate DSC Dynamic Stability Control when driving with roof load.

#### Securing

Follow the installation instructions of the roof rack.

#### **Roof drip rail with flaps**

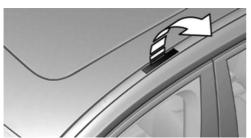

The fixing points are located in the roof drip rail above the doors.

Fold the cover outward.

#### Loading

Because roof-mounted luggage racks raise the vehicle's center of gravity when loaded, they

have a major effect on vehicle handling and steering response.

Therefore, note the following when loading and driving:

- Do not exceed the approved roof/axle loads and the approved gross vehicle weight.
- Be sure that adequate clearance is maintained for tilting and opening the glass sunroof.
- Distribute the roof load uniformly.
- The roof load should not extend past the loading area.
- Always place the heaviest pieces on the bottom.
- Secure the roof luggage firmly, for instance using ratchet straps.
- Do not let objects project into the opening path of the tailgate.
- Drive cautiously and avoid sudden acceleration and braking maneuvers. Take corners gently.

# **Saving fuel**

# Vehicle features and options

This chapter describes all standard, country-specific and optional features offered with the series. It also describes features that are not necessarily available in your vehicle, e. g., due to the selected options or country versions. This also applies to safety-related functions and systems. When using these functions and systems, the applicable laws and regulations must be observed.

## **General information**

The vehicle contains advanced technologies for the reduction of fuel consumption and emission values.

Fuel consumption depends on a number of different factors.

Carrying out certain measures, such as a moderate driving style and regular maintenance, can influence fuel consumption and the environmental impact.

# Remove unnecessary cargo

Additional weight increases fuel consumption.

# Remove attached parts following use

Remove roof-mounted luggage racks which are no longer required following use.

Attached parts on the vehicle impair the aerodynamics and increase the fuel consumption.

# Close the windows and glass sunroof

Driving with the glass sunroof and windows open results in increased air resistance and thereby reduces the range.

## Tires

#### **General information**

Tires can affect fuel consumption in various ways, for instance tire size may influence fuel consumption.

# Check the tire inflation pressure regularly

Check and, if needed, correct the tire inflation pressure at least twice a month and before starting on a long trip.

Low tire inflation pressure increases rolling resistance and thus raises fuel consumption and tire wear.

## **Drive away immediately**

Do not wait for the engine to warm-up while the vehicle remains stationary. Start driving right away, but at moderate engine speeds.

This is the quickest way of warming the cold engine up to operating temperature.

# Look well ahead when driving

Driving smoothly and proactively reduces fuel consumption.

Avoid unnecessary acceleration and braking.

By maintaining a suitable distance to the vehicle driving ahead of you.

## Avoid high engine speeds

Driving at low engine speeds lowers fuel consumption and reduces wear.

If necessary, observe the vehicle's gear shift indicator, refer to page 125.

## **Use coasting**

When approaching a red light, take your foot off the accelerator and let the vehicle coast to a halt.

For going downhill take your foot off the accelerator and let the vehicle roll.

The flow of fuel is interrupted while coasting.

# Switch off the engine during longer stops

#### Switching off the engine

Switch off the engine during longer stops, for instance at traffic lights, railroad crossings or in traffic congestion.

#### **Auto Start/Stop function**

The Auto Start/Stop function of the vehicle automatically switches off the engine during a stop.

If the engine is switched off and then restarted rather than leaving the engine running constantly, fuel consumption and emissions are reduced. Savings can begin within a few seconds of switching off the engine.

In addition, fuel consumption is also determined by other factors, such as driving style, road conditions, maintenance or environmental factors.

# Switch off any functions that are not currently needed

Functions such as seat heating and the rear window defroster require a lot of energy and reduce the range, especially in city and stop-and-go traffic.

Switch off these functions if they are not needed.

# Have maintenance carried out

Have the vehicle maintained regularly to achieve optimal vehicle efficiency and service life. BMW recommends that maintenance work be performed by a BMW dealer's service center.

For information on the BMW Maintenance System, refer to page 236.



# 

Refueling	208
Fuel	210
Wheels and tires	212
Engine compartment	227
Engine oil	230
Coolant	234
Maintenance	236
Replacing components	238
Breakdown assistance	244
Care	251

## Refueling

# Vehicle features and options

This chapter describes all standard, country-specific and optional features offered with the series. It also describes features that are not necessarily available in your vehicle, e. g., due to the selected options or country versions. This also applies to safety-related functions and systems. When using these functions and systems, the applicable laws and regulations must be observed.

## **General information**

Follow the fuel recommendation, refer to page 210, prior to refueling.

## **Safety information**

### 

With a driving range of less than 30 miles/50 km the engine may no longer have sufficient fuel. Engine functions are not ensured anymore. There is a risk of damage to property. Refuel promptly.


## **Fuel cap**

#### Opening


1. Briefly press the rear edge of the fuel filler flap.



2. Turn the fuel cap counterclockwise.

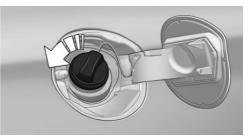

3. Place the fuel cap in the bracket attached to the fuel filler flap.

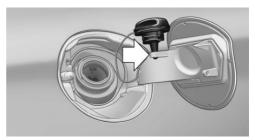

#### Closing

#### \land WARNING

The retaining strap of the fuel cap can be jammed and crushed during closing. The cap cannot be correctly closed. Fuel or fuel vapors can escape. There is a risk of injury or risk of damage to property. Pay attention that the retaining strap is not jammed or crushed when closing the cap.

- 1. Fit the cap and turn it clockwise until you clearly hear a click.
- 2. Close the fuel filler flap.

#### Manually unlocking fuel filler flap

E.g., in the event of an electrical malfunction.

Have fuel filler flap unlocked by a dealer's service center or another qualified service center or repair shop.

# Follow the following when refueling

#### **General information**

When refueling, insert the filler nozzle completely into the filler pipe. Lifting up the fuel pump nozzle during refueling causes:

- Premature switching off.
- ▷ Reduced return of the fuel vapors.

The fuel tank is full when the filler nozzle clicks off the first time.

Make sure that the fuel cap is closed properly after refueling, otherwise the emissions warning light may light up.

Follow safety regulations posted at the gas station.

#### **Safety information**

#### 

Fuels are toxic and aggressive. Overfilling of the fuel tank can damage the fuel system. Painted surfaces may be damaged by contact with fuel. Escaping fuel can harm the environment. There is a risk of damage to property. Avoid overfilling.

## Fuel

# Vehicle features and options

This chapter describes all standard, country-specific and optional features offered with the series. It also describes features that are not necessarily available in your vehicle, e. g., due to the selected options or country versions. This also applies to safety-related functions and systems. When using these functions and systems, the applicable laws and regulations must be observed.

### **Fuel recommendation**

#### **General information**

Depending on the region, many gas stations sell fuel that has been customized to winter or summer conditions. Fuel that is available in winter, for instance helps make a cold start easier.

#### Gasoline

#### **General information**

For the best fuel efficiency, the gasoline should be sulfur-free or very low in sulfur content.

Fuels that are marked on the gas pump as containing metal must not be used.

Fuels with a maximum ethanol content of 10 %, i. e., E10, may be used for refueling.

Ethanol should meet the following quality standards:

US: ASTM 4806-xx

CAN: CGSB-3.511-xx

xx: comply with the current standard in each case.

#### **Safety information**

#### 🛆 NOTICE

Even small quantities of the wrong fuel or wrong fuel additives can damage the fuel system and engine. Furthermore, the catalytic converter is permanently damaged. There is a risk of damage to property. Do not refuel or add the following in the case of gasoline engines:

- ▷ Leaded gasoline.
- Metallic additives, for instance manganese or iron.

Do not press the Start/Stop button after refueling with the wrong fuel. Contact a dealer's service center or another qualified service center or repair shop.

#### 🛆 NOTICE

Incorrect fuels can damage the fuel system and the engine. There is a risk of damage to property. Do not use fuels with a higher percentage of ethanol than recommended. Do not refuel with fuels containing methanol, e.g. M5 to M100.

#### 🛆 NOTICE

Fuel that does not comply with the minimum quality can compromise engine function or cause engine damage. There is a risk of damage to property. Do not fill with fuel that does not comply with the minimum quality.

#### ▲ CAUTION

The use of poor-quality fuels may result in harmful engine deposits or damage. Additionally, problems relating to drivability, starting and stalling, especially under certain environmental conditions such as high ambient temperature and high altitude, may occur.

If drivability problems are encountered, we recommend switching to a high quality gasoline brand and a higher octane grade — AKI number — for a few tank fills. To avoid harmful engine deposits, it is highly recommended to purchase gasoline from Top Tier retailers.

Failure to comply with these recommendations may result in the need for unscheduled maintenance.

#### **Recommended fuel grade**

BMW recommends AKI 93.

#### **Minimum fuel grade**

BMW recommends AKI 91.

If you use gasoline with this minimum AKI Rating, the engine may produce knocking sounds when starting at high external temperatures. This has no effect on the engine life.

## BMW M recommends V-Power

## Wheels and tires

# Vehicle features and options

This chapter describes all standard, country-specific and optional features offered with the series. It also describes features that are not necessarily available in your vehicle, e. g., due to the selected options or country versions. This also applies to safety-related functions and systems. When using these functions and systems, the applicable laws and regulations must be observed.

### **Tire inflation pressure**

#### **General information**

The tire inflation pressure and tire characteristics influence the following:

- ▷ The service life of the tires.
- Road safety.
- Driving comfort.
- Driving dynamics.
- ▶ Fuel consumption.

#### **Safety information**

#### 🛆 WARNING

A tire with too little or no tire inflation pressure may heat up significantly and sustain damage. This will have a negative impact on aspects of handling, such as steering and braking response. There is a risk of an accident. Regularly check the tire inflation pressure, and correct it as needed, for instance twice a month and before a long trip.

# Tire inflation pressure specifications

#### In the tire inflation pressure table

The tire inflation pressure table, refer to page 213, contains all tire inflation pressure specifications for the specified tire sizes at the ambient temperature. The tire inflation pressure values apply to tire sizes approved by the manufacturer of the vehicle for the vehicle type.

To identify the correct tire inflation pressure, please note the following:

- ▷ Tire sizes of your vehicle.
- Maximum permitted driving speed.

# Checking the tire inflation pressure

#### **General information**

Tires heat up while driving. The tire inflation pressure increases with the tire temperature.

Tires have a natural, consistent loss of tire inflation pressure.

The displays of inflation devices may under-read by up to 0.1 bar/2 psi.

#### Checking using tire inflation pressure specifications in the tire inflation pressure table

The tire inflation pressure specifications in the tire inflation pressure table only relate to cold tires or tires at the same temperature as the ambient temperature.

Only check the tire inflation pressure levels when the tires are cold, i.e.:

 Driving range of max. 1.25 miles/2 km has not been exceeded.

- If the vehicle has not moved again for at least 2 hours after a trip.
- 1. Determine, refer to page 212, the intended tire inflation pressure levels for the mounted tires.
- 2. Check the tire inflation pressure in all four tires, using a pressure gage, for example.
- 3. Correct the tire inflation pressure if the current tire inflation pressure value deviates from the specified value.
- 4. Check whether all valve caps are screwed onto the tire valves.

# After correcting the tire inflation pressure

For run-flat tires: reinitialize run-flat tires.

For the Tire Pressure Monitor TPM: reset the Tire Pressure Monitor TPM.

# Tire inflation pressures up to 100 mph/160 km/h

For speeds of up to 100 mph/160 km/h and for optimum driving comfort, note the tire inflation pressure values in the tire inflation pressure table, refer to page 213, and adjust as necessary.



These tire inflation pressure values can also be found on the tire inflation pressure label on the driver's door pillar.

Do not exceed a speed of 100 mph/160 km/h.

# Tire inflation pressure values up to 100 mph/160 km/h

#### **M2** Competition

Tire size	Pressure sp in bar/PSI	ecifications
Specifications in bar/PSI with cold tires	* * * * / @	
235/40 R 18 95 V M+S XL Std	2.3/33	2.4/35
235/35 R 19 91 W M+S XL Std	2.5/36	2.5 / 36
Front: 245/35 R 19 93 (Y) XL Std	2.4/35	-
Rear: 265/35 R 19 98 (Y) XL Std	-	2.4/35

# Tire inflation pressures at max. speeds above 100 mph/160 km/h

#### 🛆 WARNING

In order to drive at maximum speeds in excess of 100 mph/160 km/h, please observe, and, if necessary, adjust tire pressures for speeds exceeding 100 mph/160 km/h from the relevant table on the following pages. Otherwise, tire damage and accidents could occur.

For speeds over 100 mph/160 km/h and for optimum driving comfort, note the pressure values in the tire inflation pressure table, refer to page 213, and adjust as necessary.

# Tire inflation pressure values over 100 mph/160 km/h

#### **M2** Competition

Without M Driver's Package:

Tire size	Pressure sp in bar/PSI	ecifications
Specifications in bar/PSI with cold	<b>* * * *</b> /	0
tires		
235/40 R 18 95 V M+S XL Std	2.4/35	2.8/41
235/35 R 19 91 W M+S XL Std	2.6/38	3.0 / 44
Front: 235/40 R 18 95 V M+S XL Std	2.4 / 35	-
Rear: 255/35 R 18 94 V M+S XL Std	-	2.8/41
Front: 245/35 ZR 19 93 (Y) XL Std	2.7/39	-
Rear: 265/35 ZR 19 98 (Y) XL Std	-	2.9/42

#### With M Driver's Package:

Tire size	Pressure spe bar/PSI	ecifications in
Specifications in bar/PSI with cold tires	大 キ 大 キ / í	
Front: 245/35 ZR 19 93 (Y) XL Std	2.8/41	-
Rear: 265/35 ZR 19 98 (Y) XL Std	-	2.9/42

## **Tire identification marks**

#### Tire size

245/45 R 18 96 Y 245: nominal width in mm 45: aspect ratio in % R: radial tire code 18: rim diameter in inches 96: load rating, not for ZR tires Y: speed rating, before the R on ZR tires

#### Maximum tire load

Maximum tire load is the maximum permissible weight for which the tire is approved.

Locate the maximum tire load on the tire sidewall and the Gross Axle Weight Rating – GAWR – on the certification label on the driver's door pillar.

Divide the tire load by 1.1. It must be greater than one-half of the vehicle's Gross Axle Weight Rating – GAWR. Note, front vs. rear GAWR and tire loads, respectively.

#### **Speed letter**

Q = up to 100 mph/160 km/h R = up to 106 mph/170 km/h S = up to 112 mph/180 km/h T = up to 118 mph/190 km/h H = up to 131 mph/210 km/h V = up to 150 mph/240 km/h W = up to 167 mph/270 km/h Y = up to 186 mph/300 km/h

#### **Tire Identification Number**

DOT code: DOT xxxx xxx 2118 xxxx: manufacturer code for the tire brand xxx: tire size and tire design 2118: tire age Tires with DOT codes meet the guidelines of the U.S. Department of Transportation.

#### Tire age

#### Recommendation

Regardless of the tire tread, replace tires at least every 6 years.

#### Manufacture date

You can find the manufacture date of the tire on the tire's sidewall.

Designation	Manufacture date
DOT 2118	21st week 2018

#### **Uniform Tire Quality Grading**

Quality grades can be found where applicable on the tire sidewall between tread shoulder and maximum section width.

E.g.: Treadwear 200; Traction AA; Temperature A

#### **DOT Quality Grades**

Treadwear

Traction AA A B C

Temperature A B C

All passenger vehicle tires must conform to Federal Safety Requirements in addition to these grades.

#### Treadwear

The treadwear grade is a comparative rating based on the wear rate of the tire when tested under controlled conditions on a specified government test course. E.g., a tire graded 150 would wear one and one-half, 1 g, times as well on the government course as a tire graded 100. The relative performance of tires depends upon the actual conditions of their use, however, and may depart significantly from the norm due to variations in driving habits, service practices and differences in road characteristics and climate.

#### Traction

The traction grades, from highest to lowest, are AA, A, B, and C.

Those grades represent the tire's ability to stop on wet pavement as measured under controlled conditions on specified government test surfaces of asphalt and concrete. A tire marked C may have poor traction performance.

The traction grade assigned to this tire is based on straight-ahead braking traction tests, and does not include acceleration, cornering, hydroplaning, or peak traction characteristics.

#### **Temperature**

The temperature grades are A, the highest, B, and C, representing the tire's resistance to the generation of heat and its ability to dissipate heat when tested under controlled conditions on a specified indoor laboratory test wheel. Sustained high temperature can cause the material of the tire to degenerate and reduce tire life, and excessive temperature can lead to sudden tire failure. The grade C corresponds to a level of performance which all passenger vehicle tires must meet under the Federal Motor Vehicle Safety Standard No. 109. Grades Band A represent higher levels of performance on the laboratory test wheel than the minimum required by law.

#### 🛆 WARNING

The temperature grade for this tire is established for a tire that is properly inflated and not overloaded. Excessive speed, underinflation, or excessive loading, either separately or in combination, can cause heat buildup and possible tire failure.

#### M+S

Winter and all-season tires with better cold weather performance than summer tires.

## **Tire tread**

#### **Summer tires**

Do not drive with a tire tread of less than 0.12 in/3 mm, otherwise there is an increased risk of hydroplaning.

#### Winter tires

Do not drive with a tire tread of less than 0.16 in/4 mm, as such tires are less suitable for winter operation.

#### **Minimum tread depth**



Wear indicators are distributed around the tire's circumference and have the legally required minimum height of 0.063 inches/1.6 mm.

The positions of the wear indicators are marked on the tire sidewall with TWI, Tread Wear Indicator.

## Tire damage

#### **General information**

Inspect your tires regularly for damage, foreign objects lodged in the tread, and tread wear.

Driving over rough or damaged road surfaces, as well as debris, curbs and other obstacles can cause serious damage to wheels, tires and suspension parts. This is more likely to occur with low-profile tires, which provide less cushioning between the wheel and the road. Be careful to avoid road hazards and reduce your speed, especially if your vehicle is equipped with low-profile tires.

Indications of tire damage or other vehicle malfunctions:

- Unusual vibrations.
- Unusual tire or running noises.
- Unusual handling such as a strong tendency to pull to the left or right.

Damage can be caused by the following situations, for instance:

- Driving over curbs.
- ▶ Road damage.
- ▷ Tire inflation pressure too low.
- Vehicle overloading.
- Incorrect tire storage.

#### **Safety information**

#### 🛆 WARNING

Damaged tires can lose tire inflation pressure, which can lead to loss of vehicle control. There is a risk of an accident. If tire damage is suspected while driving, immediately reduce speed and stop. Have wheels and tires checked. For this purpose, drive carefully to the nearest dealer's service center or another qualified service center or repair shop. Have vehicle towed or transported as needed. Do not repair damaged tires, but have them replaced.

#### 🛆 WARNING

Tires can become damaged by driving over obstacles, e.g., curbs or road damage, at high speed. Larger wheels have a smaller tire crosssection. The smaller the tire cross-section, the higher the risk of tire damage. There is a danger of accidents and property damage. If possible, drive around obstacles, or drive over them slowly and carefully.

## **Changing wheels and tires**

#### Mounting

Have mounting and wheel balancing carried out by a dealer's service center or another qualified service center or repair shop.

#### Wheel and tire combination

#### **General information**

You can ask the dealer's service center or another qualified service center or repair shop about the correct wheel/tire combination and wheel rim versions for the vehicle.

#### **Safety information**

#### 🛆 WARNING

Wheels and tires which are not suitable for your vehicle can damage parts of the vehicle, for instance due to contact with the body due to tolerances despite the same official size rating. There is a risk of an accident. The manufacturer of your vehicle strongly suggests that you use wheels and tires that have been recommended by the vehicle manufacturer for your vehicle type.

#### 🛆 WARNING

Incorrect wheel/tire combinations will have a negative impact on the vehicle's handling and on the function of a variety of systems, such as the Anti-lock Brake System or Dynamic Stability Control. There is a risk of an accident. To maintain good handling and vehicle response, use only tires with a single tread configuration from a single manufacturer. The manufacturer of the vehicle recommends that you use wheels and tires that have been recommended by the vehicle manufacturer for your vehicle type. Following tire damage, have the original wheel/tire combination remounted on the vehicle as soon as possible.

#### **Recommended tire brands**



For each tire size, the manufacturer of the vehicle recommends certain tire brands. The tire brands can be identified by a star on the tire sidewall.

#### **New tires**

Tire traction is not optimal due to manufacturing circumstances when tires are brand-new; they achieve their full traction potential after a break-in time.

Drive conservatively for the first 200 miles/300 km.

#### **Retreaded tires**

#### 🛆 WARNING

Retreaded tires can have different tire casing structures. With advanced age the service life can be limited. There is a risk of an accident. The manufacturer of your vehicle does not recommend the use of retreaded tires.

The manufacturer of your vehicle does not recommend the use of retreaded tires.

#### Winter tires

Winter tires are recommended for operating on winter roads.

Although so-called all-season M+S tires provide better winter traction than summer tires, they usually do not provide the same level of performance as winter tires.

#### Maximum speed of winter tires

If the maximum speed of the vehicle is higher than the permissible speed for the winter tires, then attach a label showing the permissible maximum speed in the field of view. The label is available from a dealer's service center or another qualified service center or repair shop.

With winter tires mounted, observe and do not exceed the permissible maximum speed.

#### **Rotating wheels between axles**

The manufacturer of your vehicle advises against switching wheels between the front and rear axles. This can impair the handling characteristics.

Rotating the tires between the axes is not permissible on vehicles with different tire sizes or rim sizes on the front and rear axles.

#### **Storing tires**

#### Air pressure

Do not exceed the maximum tire inflation pressure indicated on the side wall of the tire.

#### Storage

Store wheels and tires in a cool, dry and dark place.

Always protect tires against all contact with oil, grease, and solvents.

Do not leave tires in plastic bags.

Remove dirt from wheels or tires.

## **Repairing a flat tire**

#### **Safety measures**

- Park the vehicle as far away as possible from passing traffic and on solid ground.
- ▷ Switch on the hazard warning system.
- Secure the vehicle against rolling away by setting the parking brake.
- Turn the steering wheel until the front wheels are in the straight-ahead position and engage the steering wheel lock.
- Have all vehicle occupants get out of the vehicle and ensure that they remain outside the immediate area in a safe place, such as behind a guardrail.
- If necessary, set up a warning triangle at an appropriate distance.

## **Mobility System**

#### Concept

With the Mobility System, minor tire damage can be sealed temporarily to enable continued travel. To accomplish this, sealant is pumped into the tires, which seals the damage from the inside.

#### **General information**

- Follow the instructions on using the Mobility System found on the compressor and sealant container.
- Use of the Mobility System may be ineffective if the tire puncture measures approx. 1/8 inches/4 mm or more.
- Contact a dealer's service center or another qualified service center or repair shop if the tire cannot be made drivable.
- If possible, do not remove foreign bodies that have penetrated the tire. Only remove foreign objects if they are visibly protruding from the tire.

- Pull the speed limit sticker off the sealant container and apply it to the steering wheel.
- The use of a sealant can damage the TPM wheel electronics. In this case, have the TPM wheel electronics replaced at the next opportunity.
- ▷ The compressor can be used to check the tire inflation pressure.

#### Storage

The Mobility System is located under the cargo floor panel.


#### **Sealant container**



- ▷ Sealant container, arrow 1.
- ▶ Filling hose, arrow 2.

Observe use-by date on the sealant container.

#### Compressor

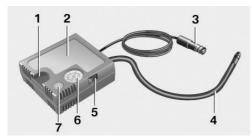

- 1 Sealant container holder
- 2 Compressor
- 3 Connector/cable for socket
- 4 Connection hose

- 5 On/off switch
- 6 Tire pressure gage
- 7 Reduce tire inflation pressure button

#### **Safety measures**

- Park the vehicle as far away as possible from passing traffic and on solid ground.
- Switch on the hazard warning system.
- Secure the vehicle against rolling away by setting the parking brake.
- Turn the steering wheel until the front wheels are in the straight-ahead position and engage the steering wheel lock.
- Have all vehicle occupants get out of the vehicle and ensure that they remain outside the immediate area in a safe place, such as behind a guardrail.
- If necessary, set up a warning triangle at an appropriate distance.

#### Filling the tire with sealant

#### Safety information

#### \rm A DANGER

If the exhaust pipe is blocked or ventilation is insufficient, harmful exhaust gases can enter into the vehicle. The exhaust gases contain pollutants which are colorless and odorless. In enclosed areas, exhaust gases can also accumulate outside of the vehicle. There is danger to life. Keep the exhaust pipe free and ensure sufficient ventilation.

#### \land NOTICE


The compressor can overheat during extended operation. There is a risk of damage to property. Do not run the compressor for more than 10 minutes.

#### Filling


1. Shake the sealant container.




2. Pull the connection hose fully out of the compressor housing. Do not kink the hose.

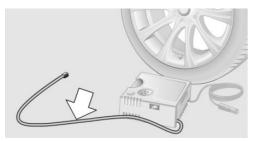


3. Screw the connection hose onto the connector of the sealant container.

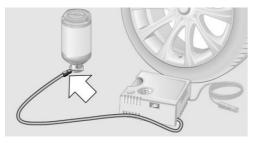


4. Insert the sealant container on the compressor housing in an upright position.

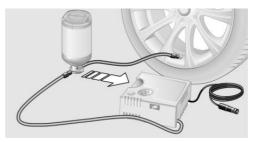


5. Remove the valve cap from the tire valve and screw the filling hose of the sealant container onto the tire valve of the nonworking wheel.

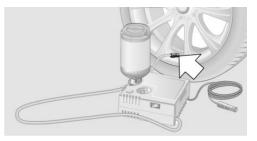

6. With the compressor switched off, insert the plug into the power socket inside the vehicle.

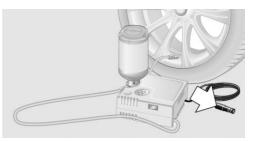

7. With the ignition switched on or the engine running, switch on the compressor.

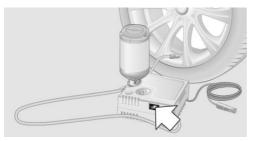

Let the compressor run for max. 10 minutes to fill the tire with sealant and achieve a tire inflation pressure of approx. 2.5 bar.

While the tire is being filled with sealant, the tire inflation pressure may sporadically reach approx. 5 bar. Do not switch off the compressor at this point.

If a tire inflation pressure of 2 bar is not reached:

- 1. Switch off the compressor.
- 2. Pull the connector out of the power socket inside the vehicle.
- 3. Unscrew the filling hose from the tire valve.
- 4. Drive 33 ft/10 m forward and back to distribute the sealant in the tire.
- 5. Inflate the tire again using the compressor.

If a tire inflation pressure of 2 bar cannot be reached, contact your dealer's service center or another qualified service center or repair shop.

#### **Stowing the Mobility System**

- 1. Unscrew the filling hose of the sealant container from the tire valve.
- 2. Pull the compressor connector out of the socket inside the vehicle.
- 3. Unscrew the connection hose of the compressor from the sealant container.
- 4. Connect the filling hose of the sealant container previously connected to the tire valve with the available connector on the sealant container.

This prevents leftover sealant escaping from the sealant container.

- 5. Wrap and store the sealant container in suitable material to avoid dirtying the cargo area.
- 6. Stow the Mobility System back in the cargo area.

#### **Distributing the sealant**

Immediately drive approx. 5 miles/10 km to ensure that the sealant is evenly distributed in the tire.

Do not exceed the permissible maximum speed of 50 mph/80 km/h.

If possible, do not drive at speeds less than 12 mph/20 km/h.

# Correcting the tire inflation pressure

- 1. Stop at a suitable location.
- 2. Screw the connection hose of the compressor directly onto the tire valve stem.
- 3. Insert the connector into the power socket inside the vehicle.
- 4. Correct the tire inflation pressure to 2.5 bar.
  - Increase tire inflation pressure: with the ignition switched on or the engine running, switch on the compressor.
  - Reduce tire inflation pressure: press the button on the compressor.

#### **Continuing the trip**

Do not exceed the maximum permissible speed of 50 mph/80 km/h.

Reinitialize the run-flat tires.

Reset the Tire Pressure Monitor TPM.

Replace the nonworking tire and the sealant container of the Mobility System at the next opportunity.

### **Snow chains**

#### **Safety information**

#### \Lambda WARNING

With the mounting of snow chains on unsuitable tires, the snow chains can come into contact with vehicle parts. There is a risk of accidents or risk of damage to property. Only mount snow chains on tires that are designated by their manufacturer as suitable for the use of snow chains.

#### 🛆 WARNING

Insufficiently tight snow chains may damage tires and vehicle components. There is a risk of accidents or risk of damage to property. Make sure that the snow chains are always sufficiently tight. Re-tighten as needed according to the snow chain manufacturer's instructions.

#### **Fine-link snow chains**

The manufacturer of your vehicle recommends use of fine-link snow chains. Certain types of fine-link snow chains have been tested by the manufacturer of the vehicle and recommended as road-safe and suitable.

Information regarding suitable snow chains is available from a dealer's service center or another qualified service center or repair shop.

#### Use

Use only in pairs on the rear wheels, equipped with the tires of the following size:

▶ 235/40 R 18.

Follow the snow chain manufacturer's instructions.

Do not initialize the run-flat tires after mounting snow chains, as doing so may result in incorrect readings. Do not reset the Tire Pressure Monitor TPM after mounting snow chains, as doing so may result in incorrect readings.

When driving with snow chains, if needed, briefly activate M Dynamic Mode.

## Maximum speed with snow chains

Do not exceed a speed of 30 mph/50 km/h when using snow chains.

## **Changing wheels/tires**

#### **General information**

When a flat tire kit is used, an immediate wheel change when there is a loss of tire inflation pressure in the event of a flat tire is not always necessary.

If needed, the tools for changing wheels are available as accessories from a dealer's service center or another qualified service center or repair shop.

#### Safety information

#### 🛆 DANGER

The vehicle jack is only provided for short-term lifting of the vehicle for wheel changes. Even if all safety measures are observed, there is a risk of the raised vehicle falling, if the vehicle jack tips over. There is a risk of injuries or danger to life. If the vehicle is raised, do not lie under the vehicle and do not start the engine.

#### 🛆 DANGER

Supports such as wooden blocks under the vehicle jack reduce the capacity of the vehicle jack to bear weight. They have the potential to exert too much strain on the vehicle jack, causing it to tip over and the vehicle to fall. There is a risk of injuries or danger to life. Do not place supports under the vehicle jack.

#### \land WARNING

The jack, issued by the vehicle manufacturer, is provided in order to perform a wheel change in the event of a breakdown. The jack is not designed for frequent use; for example, changing from summer to winter tires. Using the jack frequently may cause it to become jammed or damaged. There is a risk of injury and risk of damage to property. Only use the jack to attach an emergency or spare wheel in the event of a breakdown.

#### 🛆 WARNING

On soft, uneven or slippery ground, for example snow, ice, tiles, etc., the vehicle jack can slip away. There is a risk of injury. If possible, change the wheel on a flat, solid, and slip-resistant surface.

#### 🛆 WARNING

The vehicle jack is optimized for lifting the vehicle and for the jacking points on the vehicle only. There is a risk of injury. Do not lift any other vehicle or cargo using the vehicle jack.

#### \land WARNING

If the vehicle jack is not inserted into the jacking point provided for this purpose, the vehicle may be damaged or the vehicle jack may slip when it is being cranked up. There is a risk of injury or risk of damage to property. When cranking up the vehicle jack, ensure that it is inserted in the jacking point next to the wheel housing.

#### 🛆 WARNING

A vehicle that is raised on a vehicle jack may fall off of the jack if lateral forces are exerted on it. There is a risk of injury and risk of damage to property. While the vehicle is raised, do not exert lateral forces on the vehicle or pull abruptly on the vehicle. Have a stuck wheel removed by a dealer's service center or another qualified service center or repair shop.

# Securing the vehicle against rolling

#### **General information**

The vehicle manufacturer recommends to additionally secure the vehicle against rolling away when changing a wheel.

#### On a level surface



Place chocks or other suitable objects, for example a rock, in front of and behind the wheel that is diagonally opposite to the wheel that you wish to change.

#### On a slight downhill gradient



If you need to change a wheel on a slight downhill grade, place chocks and other suitable objects, for instance a rock, under the wheels of both the front and rear axles against the rolling direction.


#### Lug bolt lock

#### Concept

The wheel lug bolts have a special coding. The lug bolts can only be released with the adapter which matches the coding.

#### **Overview**

The adapter of the lug bolt lock is in the onboard vehicle tool kit or in a storage compartment close to the onboard vehicle tool kit.



- ▶ Lug bolt, arrow 1.
- ▶ Adapter, arrow 2.

#### Unscrewing

- 1. Attach the adapter to the lug bolt.
- 2. Unscrew the lug bolt.

3. Remove the adapter after unscrewing the lug bolt.


#### Screwing on

- Attach the adapter to the lug bolt. If necessary, turn the adapter until it fits on the lug bolt.
- 2. Screw on the lug bolt. The tightening torque is 140 Nm.
- 3. Remove the adapter and stow it after screwing on the lug bolt.

#### **Preparing the vehicle**

- Park the vehicle on solid and non-slip ground at a safe distance from traffic.
- ▷ Switch on the hazard warning system.
- ▷ Set the parking brake.
- Engage a gear or move the selector lever to position P.
- As soon as permitted by the traffic flow, have all vehicle occupants get out of the vehicle and ensure that they remain outside the immediate area in a safe place, such as behind a guardrail.
- Depending on the vehicle equipment, get wheel change tools and, if necessary, the emergency wheel from the vehicle.
- If necessary, set up a warning triangle or portable hazard warning light at an appropriate distance.
- Secure the vehicle additionally against rolling.
- Loosen the lug bolts a half turn.

# Jacking points for the vehicle jack

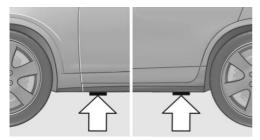


The jacking points for the vehicle jack are located at the indicated positions.

#### Jacking up the vehicle


#### 🛆 WARNING

Hands and fingers can be jammed when using the vehicle jack. There is a risk of injury. Comply with the described hand position and do not change this position while using the vehicle jack.


1. Hold the vehicle jack with one hand, arrow 1, and grasp the vehicle jack crank with your other hand, arrow 2.

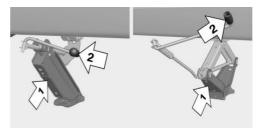

 Insert the vehicle jack into the rectangular recess of the jacking point closest to the wheel to be changed.

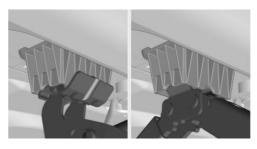


 Extend the vehicle jack by turning the vehicle jack crank or lever clockwise.

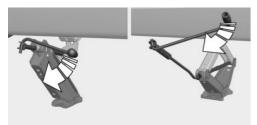

- Take your hand away from the vehicle jack as soon as the vehicle jack is under load and continue turning the vehicle jack crank or lever with one hand.
- 5. Make sure that the vehicle jack foot stands vertically and at a right angle beneath the jacking point.



 Make sure that the vehicle jack foot stands vertically and perpendicularly beneath the jacking point after extending the vehicle jack.

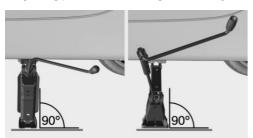

7. Crank up the vehicle jack until the entire surface of the jack is in contact with the ground and the wheel in question is raised a maximum of 1.2 inches/3 cm off the ground.

#### Mounting a wheel

Mount one emergency wheel only, as required.

- 1. Unscrew the lug bolts.
- 2. Remove the wheel.
- 3. Put the new wheel or emergency wheel on and screw in at least two lug bolts in a crosswise pattern until hand-tight.

If non-original light-alloy wheels of the vehicle manufacturer are mounted, the accompanying lug bolts may have to be used as well.

- 4. Hand-tighten the remaining lug bolts and tighten all lug bolts well in a crosswise pattern.
- 5. Turn the vehicle jack crank counterclockwise to retract the vehicle jack and lower the vehicle.
- 6. Remove the vehicle jack and stow it securely.

#### After the wheel change

- 1. Tighten the lug bolts crosswise. The tightening torque is 101 lbs ft/140 Nm.
- 2. Stow the nonworking wheel in the cargo area, if necessary.

The nonworking wheel cannot be stored under the cargo floor panel because of its size.

- 3. Check tire inflation pressure at the next opportunity and correct as needed.
- 4. Reinitialize the run-flat tires.

Reset the Tire Pressure Monitor TPM.


- 5. Check to make sure the lug bolts are tight with a calibrated torque wrench.
- 6. Have the damaged tire replaced at the nearest dealer's service center or another qualified service center or repair shop.

## **Engine compartment**

# Vehicle features and options

This chapter describes all standard, country-specific and optional features offered with the series. It also describes features that are not necessarily available in your vehicle, e. g., due to the selected options or country versions. This also applies to safety-related functions and systems. When using these functions and systems, the applicable laws and regulations must be observed.

## **Overview**

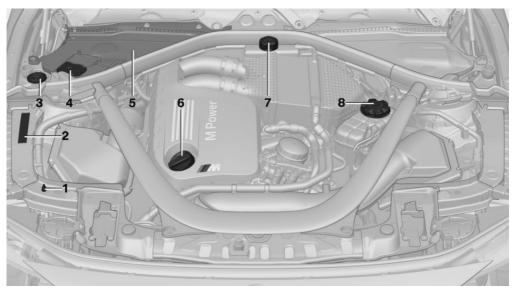

- 1 Jump-starting, negative battery terminal
- 2 Vehicle identification number
- 3 Filler neck for washer fluid
- 4 Jump-starting, positive battery terminal
- 5 Engine compartment fuse box
- 6 Oil filler neck
- 7 Coolant reservoir, charge air
- 8 Coolant reservoir, engine

### Hood

#### **Safety information**

#### 🛆 WARNING

Improperly executed work in the engine compartment can damage vehicle components and impair vehicle functions. There is a risk of personal and property damage. The manufacturer of your vehicle recommends that, in the effort to avoid such risks, work in the engine compartment be performed by a dealer's service center or another qualified service center or repair shop.

#### \land WARNING

The engine compartment accommodates moving components. Certain components in the engine compartment can also move with the vehicle switched off, for instance the radiator fan. There is a risk of injury. Do not reach into the area of moving parts. Keep articles of clothing and hair away from moving parts.

#### 🛆 WARNING

There are protruding parts, for instance locking hook, on the inside of the hood. There is a risk of injury. If the hood is open, pay attention to protruding parts and keep clear of these areas.

#### 🛆 WARNING

An incorrectly locked hood can open while driving and restrict visibility. There is a risk of an accident. Stop immediately and correctly close the hood.

#### 🛆 WARNING

Body parts can be jammed when opening and closing the hood. There is a risk of injury. Make sure that the area of movement of the hood is clear during opening and closing.

#### \land NOTICE

Folded-away wipers can be jammed when the hood is opened. There is a risk of damage to property. Make sure that the wipers with the wiper blades mounted are folded down onto the windshield before opening the hood.

#### **Opening the hood**

 Pull lever, arrow 1. Hood is unlocked.



2. After the lever is released, pull the lever again, arrow 2.

Hood can be opened.

#### Indicator/warning lights

When the hood is unlocked, a Check Control message is displayed.

#### **Closing the hood**



Let the hood drop from a height of approx. 16 inches/40 cm and push down on it to lock it fully. The hood must engage on both sides.

## **Engine oil**

# Vehicle features and options

This chapter describes all standard, country-specific and optional features offered with the series. It also describes features that are not necessarily available in your vehicle, e. g., due to the selected options or country versions. This also applies to safety-related functions and systems. When using these functions and systems, the applicable laws and regulations must be observed.

## **General information**

The engine oil consumption is dependent on your driving style and driving conditions.

Therefore, regularly check the engine oil level after refueling by taking a detailed measurement.

The engine oil consumption can increase in the following situations, for example:

- Sporty driving style.
- ▷ Break-in of the engine.
- Idling of the engine.
- With use of engine oil types that are classified as not suitable.

Different Check Control messages appear on the Control Display depending on the engine oil level.

## **Safety information**

#### 

An engine oil level that is too low causes engine damage. There is a risk of damage to property. Immediately add engine oil.

#### \Lambda ΝΟΤΙCΕ

Too much engine oil can damage the engine or the catalytic converter. There is a risk of damage to property. Do not add too much engine oil. When too much engine oil is added, have the engine oil level corrected by a dealer's service center or another qualified service center or repair shop.

## **Electronic oil measurement**

#### **General information**

The electronic oil measurement has two measuring principles:

- Monitoring.
- Detailed measurement.

When making frequent short-distance trips or using a dynamic driving style, for instance when taking curves aggressively, regularly perform a detailed measurement.

#### Monitoring

#### Concept

The engine oil level is monitored electronically while driving and can be shown on the Control Display.

If the engine oil level is outside its permissible operating range, a Check Control message is displayed.



A red indicator light indicates that the engine oil pressure is too low.

#### **Functional requirements**

A current measured value is available after approx. 30 minutes of normal driving.

#### Displaying the engine oil level

Via iDrive:

- 1. "My Vehicle"
- 2. "Vehicle status"
- 3. Y "Engine oil level"

The engine oil level is displayed.

#### **System limits**

When making frequent short-distance trips or using a dynamic driving style, it may not be possible to calculate a measured value. In this case, the measured value for the last, sufficiently long trip is displayed.

#### **Detailed measurement**

#### Concept

The engine oil level is checked when the vehicle is stationary and displayed via a scale.

If the engine oil level is outside its permissible operating range, a Check Control message is displayed.

#### **General information**

During the measurement, the idle speed is increased somewhat.

#### **Functional requirements**

- Vehicle is parked in a horizontal position.
- Manual transmission: shift lever in neutral position, clutch and accelerator pedals not depressed.
- M Double clutch transmission: selector lever in selector lever position N and accelerator pedal not depressed.
- Engine is running and is at operating temperature.

#### Performing a detailed measurement

Via iDrive:

- 1. "My Vehicle"
- 2. "Vehicle status"
- 3. Y "Engine oil level"
- 4. "Measure engine oil level"
- 5. "Start measurement"

The engine oil level is checked and displayed via a scale.

## **Adding engine oil**

#### **General information**

Only add engine oil when the message is displayed in the instrument cluster. The quantity to be added is indicated in the message displayed in the instrument cluster.

Only add suitable types of engine oil, refer to page 232.

Safely park the vehicle and switch off the ignition before adding engine oil.

Take care not to add too much engine oil.

Spilled engine oil can damage carbon parts. Wipe up spilled engine oil using a lint-free cloth.

#### **Safety information**

#### 🛆 WARNING

Operating materials, for instance oils, greases, coolants, fuels, can contain harmful ingredients. There is a risk of injuries or danger to life. Follow the instructions on the containers. Avoid the contact of articles of clothing, skin or eyes with operating materials. Do not refill operating materials into different bottles. Store operating materials out of reach of children.

#### \land NOTICE

An engine oil level that is too low causes engine damage. There is a risk of damage to property. Immediately add engine oil.

#### 

Too much engine oil can damage the engine or the catalytic converter. There is a risk of damage to property. Do not add too much engine oil. When too much engine oil is added, have the engine oil level corrected by a dealer's service center or another qualified service center or repair shop.

#### **Overview**

The oil filler neck is located in the engine compartment, refer to page 227.

#### Adding engine oil

- 1. Open the hood, refer to page 228.
- 2. Open the lid counterclockwise.



- 3. Add engine oil.
- 4. Close the cap.

## Engine oil types to add

#### **General information**

The engine oil quality is critical for the life of the engine.

Only add the types of engine oil which are listed.

## Safety information

#### 🛆 NOTICE

Oil additives can damage the engine. There is a risk of damage to property. Do not use oil additives.

#### 

Incorrect engine oil can cause malfunctions in the engine or damage it. There is a risk of damage to property. When selecting an engine oil, make sure that the engine oil has the correct oil rating.

#### Suitable engine oil types

Add engine oils that meet the following oil rating standards:

#### **Oil rating**

BMW Longlife-01 FE.

#### Alternative engine oil types

If an engine oil suitable for continuous use is not available, up to 1 US quart/liter of an engine oil with the following oil rating can be added:

Oil rating
API SL.
API SM.
API SN.

### Viscosity grades

Viscosity grades

SAE 0W-30.

More information about suitable engine oil ratings and viscosities of engine oils can be requested from a dealer's service center or another qualified service center or repair shop.

### **Engine oil change**

#### 

Engine oil that is not changed in timely fashion can cause increased engine wear and thus engine damage. There is a risk of damage to property. Do not exceed the service data indicated in the vehicle.

The vehicle manufacturer recommends that you have a dealer's service center or another qualified service center or repair shop change the engine oil.

BMW recommends Original BMW Engine Oil.

## Coolant

# Vehicle features and options

This chapter describes all standard, country-specific and optional features offered with the series. It also describes features that are not necessarily available in your vehicle, e. g., due to the selected options or country versions. This also applies to safety-related functions and systems. When using these functions and systems, the applicable laws and regulations must be observed.

## **General information**

The vehicle has two coolant reservoirs that are located in the engine compartment.

To ensure the operational reliability of the vehicle, always check the coolant level of both coolant reservoirs.

Not all commercially available additives are suitable for the vehicle. Information about suitable additives is available from a dealer's service center or another qualified service center or repair shop.

## **Safety information**

#### 🛆 WARNING

With the engine hot and the cooling system open, coolant can escape and lead to scalding. There is a risk of injury. Only open the cooling system with the engine cooled down.


#### \land WARNING

Additives are harmful and incorrect additives can damage the engine. There is a risk of injury and risk of damage to property. Do not allow additives to come into contact with skin, eyes or articles of clothing. Use suitable additives only.

## **Coolant level**

#### Checking

- 1. Let the engine cool.
- 2. Open the hood.
- Turn the lid of the coolant reservoir slightly counterclockwise to allow any excess pressure to dissipate, then open it.

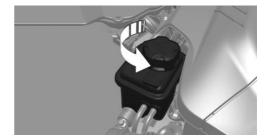


- 4. Open the coolant reservoir lid.
- 5. The coolant level is correct if it lies between the minimum and maximum marks in the filler neck.



#### Adding

- 1. Let the engine cool.
- 2. Turn the lid of the coolant reservoir slightly counterclockwise to allow any excess pressure to dissipate, then open it.

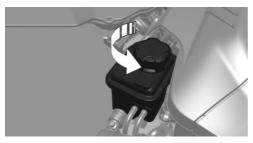

- 3. If the coolant is low, slowly add coolant up to the specified level; do not overfill.
- 4. Close the cap.
- 5. Have the cause of the coolant loss eliminated as soon as possible.

## Disposal



Comply with the relevant environmental protection regulations when disposing of coolant and coolant additives.

## Maintenance

# Vehicle features and options

This chapter describes all standard, country-specific and optional features offered with the series. It also describes features that are not necessarily available in your vehicle, e. g., due to the selected options or country versions. This also applies to safety-related functions and systems. When using these functions and systems, the applicable laws and regulations must be observed.

## **BMW** maintenance system

The maintenance system indicates required maintenance measures, and thereby provides support in maintaining road safety and the operational reliability of the vehicle.

In some cases, scopes and intervals of the maintenance system may vary according to the country version. Replacement work, spare parts, fuels and lubricants, and wear materials are calculated separately. Further information is available from a dealer's service center or another qualified service center or repair shop.

# Condition Based Service CBS

#### Concept

Sensors and special algorithms take into account the driving conditions of the vehicle. CBS uses these to calculate the need for maintenance.

The system makes it possible to adapt the amount of maintenance corresponding to your user profile.

#### **General information**

Information on service requirements, refer to page 124, can be displayed on the Control Display.

## Service data in the remote control

Information on the required maintenance is continuously stored in the remote control. The dealer's service center can read this data out and suggest a maintenance scope for the vehicle.

Therefore, hand the service advisor the remote control with which the vehicle was driven most recently.

#### **Storage periods**

Storage periods during which the vehicle battery was disconnected are not taken into account.

If this occurs, have a dealer's service center or another qualified service center or repair shop update the time-dependent maintenance procedures, such as checking brake fluid and, if necessary, changing the engine oil and the microfilter/ activated-charcoal filter.

## Service and Warranty Information Booklet for US models and Warranty and Service Guide Booklet for Canadian models

Please consult your Service and Warranty Information Booklet for US models and Warranty and Service Guide Booklet for Canadian models for additional information on service requirements.

The manufacturer of your vehicle recommends that maintenance and repair be performed by a dealer's service center or another qualified service center or repair shop. Records of regular maintenance and repair work should be retained.

# Socket for OBD Onboard Diagnosis

#### **General information**


Devices connected to the OBD socket trigger the alarm system when the vehicle is locked. Remove any devices connected at the OBD socket before locking the vehicle.

#### **Safety information**

#### 🛆 NOTICE

The socket for Onboard Diagnosis is an intricate component intended to be used in conjunction with specialized equipment to check the vehicle's primary emissions system. Improper use of the socket for Onboard Diagnosis, or contact with the socket for Onboard Diagnosis for other than its intended purpose, can cause vehicle malfunctions and creates risks of personal and property damage. Given the foregoing, the manufacture of your vehicle strongly recommends that access to the socket for Onboard Diagnosis be limited to a dealer's service center or another gualified service center or repair shop or other persons that have the specialized training and equipment for purposes of properly utilizing the socket for Onboard Diagnosis.

#### Position

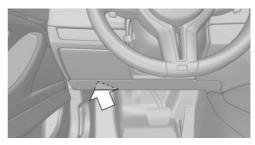

There is an OBD socket on the driver's side for checking the primary components in the vehicle's emissions.

#### Emissions



The warning light lights up:

Emissions are deteriorating. Have the vehicle checked as soon as possible.

The warning light flashes under certain circumstances:

This indicates that there is excessive misfiring in the engine.


Reduce the vehicle speed and have the system checked immediately; otherwise, serious engine misfiring within a brief period can seriously damage emission control components, in particular the catalytic converter.

## **Replacing components**

# Vehicle features and options

This chapter describes all standard, country-specific and optional features offered with the series. It also describes features that are not necessarily available in your vehicle, e. g., due to the selected options or country versions. This also applies to safety-related functions and systems. When using these functions and systems, the applicable laws and regulations must be observed.

## **Onboard vehicle tool kit**

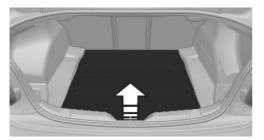

The onboard vehicle tool kit is located under the cargo floor panel.

## **Wiper blades**

#### **Safety information**

#### 

The window may sustain damage if the wiper falls onto it without the wiper blade installed. There is a risk of damage to property. Hold the wiper firmly when changing the wiper blade. Do not fold or switch on the wiper without a wiper blade installed.

#### \land NOTICE

Folded-away wipers can be jammed when the hood is opened. There is a risk of damage to property. Make sure that the wipers with the wiper blades mounted are folded down onto the windshield before opening the hood.

#### **Replacing the front wiper blades**

- To change the wiper blades, fold up the wiper arms, refer to page 108.
- 2. Fold up and hold the wiper arm firmly.
- 3. Squeeze the retainer spring, arrow 1, and fold up the wiper blade, arrow 2.



- 4. Remove the wiper blade forward from the catch.
- 5. Insert the new wiper blade in reverse order of removal until it locks in place.
- 6. Fold down the wipers.

## Light and bulb replacement

#### **General information**

#### Lights and bulbs

Lights and bulbs make an essential contribution to vehicle safety.

The vehicle manufacturer recommends that you have the relevant work carried out a dealer's service center or another qualified service center or repair shop.

A spare light box is available from a dealer's service center or another qualified service center or repair shop.

Follow the safety information, refer to page 239.

#### Light-emitting diodes (LEDs)

Some items of equipment use light-emitting diodes installed behind a cover as a light source. These light-emitting diodes are related to conventional lasers and are officially designated as Class 1 light-emitting diodes.

Follow the safety information, refer to page 239.

#### **Safety information**

#### Lights and bulbs

#### 🛆 WARNING

Bulbs can get hot during operation. Contact with the bulbs can cause burns. There is a risk of injury. Only change bulbs after they have cooled off.

#### \land WARNING

Work on switched-on lighting systems can cause short circuits. There is a risk of injury or risk of damage to property. When working on the lighting system, switch off the lights in question. If necessary, heed the bulb manufacturer's instructions.

#### 

Dirty bulbs have a reduced service life. There is a risk of damage to property. Do not hold new bulbs with your bare hands. Use a clean cloth or something similar, or hold the bulb by its base.

#### Light-emitting diodes (LEDs)

#### 🛆 WARNING

Intensive brightness can irritate or damage the retina of the eye. There is a risk of injury. Do not look directly into the headlights or other light sources. Do not remove the LED covers.

#### **Headlight glass**

Condensation can form on the inside of the headlight glass in cool or humid weather. When driving with the lights switched on, the condensation evaporates after a short time. The headlight glass does not need to be changed.

If despite driving with the headlights switched on, increasing humidity forms, for instance water droplets in the light, have the headlights checked.

#### Front lights, bulb replacement

#### LED headlights

#### Light-emitting diodes (LEDs)

All front lights and side turn signals are designed with LED technology.

In the case of a malfunction, contact a dealer's service center or another qualified service center or repair shop.


#### Turn signal in exterior mirror

The turn signals in the exterior mirrors feature LED technology. In the case of a malfunction,

contact a dealer's service center or another qualified service center or repair shop.

#### Tail lights, bulb replacement

#### **Overview**

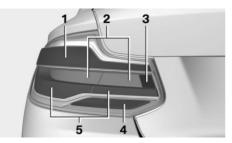

- 1 Turn signal
- 2 Outer brake lights
- 3 Inside brake light
- 4 Reversing light
- 5 Rear light

#### **Bulb replacement**

#### **General information**

Follow the safety information, refer to page 239. Reversing light: 21-watt bulb, W21W.


The turn signals, brake lights, and rear lights feature LED technology. In the case of a malfunction, contact a dealer's service center or another qualified service center or repair shop.

#### Removing the tail light

- 1. Opening tailgate.
- 2. Open the two covers on the tail light.



3. With the handle of the screwdriver from the onboard vehicle tool kit, loosen and remove the nuts on the two fasteners. Make sure that the nuts do not drop into the bumper area. In addition to the two outer fasteners, there is another inner fastener.

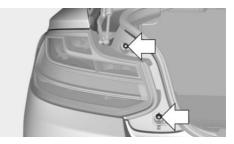


4. Hold the grip rail in one hand, arrow 1, and brace against the outside with your other hand, arrow 2. Carefully pry out the tail light, arrow 3, until the rubber mount releases from the inner fastener.



5. Remove the plug from the bulb holder.

#### Replacing the bulbs


1. Turn the cover in the direction indicated on the housing and remove it.



- 2. Press the nonworking bulb gently into the socket, turn counterclockwise and remove.
- 3. Install the new bulb and cover in reverse order of removal.

#### Installing the tail light

- 1. Connect the plug to the bulb holder.
- 2. Insert the tail light straight in and press it in, arrow 1, until the rubber mount engages in the inner fastener. Make sure when inserting the tail light that the rubber lip, arrow 2, on the top side of the tail light does not fold over. Screw on the two nuts, arrow 3, and close covers.

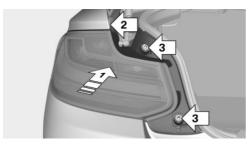

## Central brake light and license plate lights

Follow the safety information, refer to page 239.

These lights are made using LED technology. In the case of a malfunction, contact a dealer's service center or another qualified service center or repair shop.

## **Vehicle battery**

#### Maintenance

The battery is maintenance-free.

The added amount of acid is sufficient for the service life of the battery.

More information about the battery can be requested from a dealer's service center or another qualified service center or repair shop.

#### **Replacing the vehicle battery**

#### **General information**

The manufacturer of your vehicle recommends that you have a dealer's service center or another qualified service center or repair shop register the vehicle battery to the vehicle after the battery has been replaced. Once the battery has been registered again, all comfort features will be available without restriction and any Check Control messages displayed which relate to comfort features will disappear.

#### Safety information

#### A NOTICE

Vehicle batteries that are not compatible can damage vehicle systems and impair vehicle functions. There is a risk of personal and property damage. Only vehicle batteries that are compatible with your vehicle type should be installed in your vehicle. Information on compatible vehicle batteries is available at your dealer's service center.

#### **Charging the battery**

#### **General information**

Make sure that the battery is always sufficiently charged to guarantee that the battery remains usable for its full service life.



A discharged battery is indicated by a red indicator light.

The battery may need to be charged in the following cases:

- When making frequent short-distance drives.
- If the vehicle is not used for more than a month

#### **Safety information**

### 

Battery chargers for the vehicle battery can work with high voltages and currents, which means that the 12 volt on-board network can be overloaded or damaged. There is a risk of damage to property. Only connect battery chargers for the vehicle battery to the starting aid terminals in the engine compartment.

#### Starting aid terminals

In the vehicle, only charge the battery via the starting aid terminals, refer to page 247, in the engine compartment with the engine off.

#### **Power failure**

After a power loss, some equipment needs to be newly initialized or individual settings updated, for example:

- Seat and mirror memory: store the positions again.
- Time: update.
- Date: update.
- Glass sunroof and sun protection: initialize the system.

#### **Disposing of old batteries**



Have old batteries disposed of by a dealer's service center or another qualified service center or repair shop or take them to a collection point.

Maintain the battery in an upright position for transport and storage. Secure the battery so that it does not tip over during transport.

#### **Fuses**

#### General information

The fuses are located in two different places in the vehicle.

Information on the fuse types and locations, as well as the positions of any other fuse boxes, is found on a separate sheet in the fuse box in the cargo area.

#### **Safety information**

#### \Lambda WARNING

Incorrect and repaired fuses can overload electrical lines and components. There is a risk of fire. Never attempt to repair a blown fuse. Do not replace a nonworking fuse with a substitute of another color or amperage rating.


#### In the engine compartment

#### **General information**


On right-hand drive vehicles, the fuses are located on the opposite side of the engine compartment.

#### **Removing the cover**

1. Use the onboard vehicle tool kit to loosen the three cover screws, arrow 1.

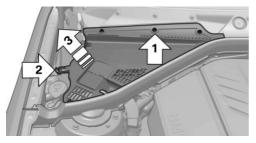

- 2. Squeeze and raise the holder, arrow 2.
- 3. Remove the cover from one side, arrow 3.
- 4. Press the four fasteners and remove the cover.

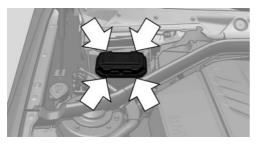

#### Attaching the covers

- 1. When attaching the cover, make sure that all four fasteners are engaged.
- 2. Attach the cover under the rubber lip and then thread it between the bars.




3. Press down on the holder and tighten the three screws.

#### In the cargo area



Fold up the cargo floor panel.

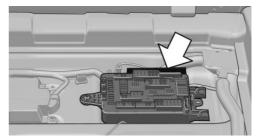

Information on the fuse types and locations, as well as the positions of any other fuse boxes, is found on a separate sheet in the fuse box.

#### **Replacing fuses**

The vehicle manufacturer recommends that you have a dealer's service center or another qualified service center or repair shop replace the fuses.

## **Breakdown assistance**

# Vehicle features and options

This chapter describes all standard, country-specific and optional features offered with the series. It also describes features that are not necessarily available in your vehicle, e. g., due to the selected options or country versions. This also applies to safety-related functions and systems. When using these functions and systems, the applicable laws and regulations must be observed.

## Hazard warning flashers



The button is located in the center console.

The red light in the button flashes when the hazard warning flashers are activated.

## Warning triangle



The warning triangle is located on the inside of the tailgate.

To remove, loosen the bracket.

## First-aid kit

#### **General information**

Some of the articles have a limited service life. Check the expiration dates of the contents regularly and replace any expired items promptly.

#### Storage



The first-aid kit is located in the cargo area in the storage compartment.

## **BMW Roadside Assistance**

#### Concept

Contact the BMW Group Roadside Assistance if assistance is needed in the event of a breakdown.

#### **General information**

In the event of a breakdown, data on the vehicle's condition is sent directly to the manufacturer of your vehicle.

Contact can also be made via a Check Control message, refer to page 121.

#### **Requirements**

- Active ConnectedDrive contract, equipment version with Intelligent emergency call or BMW ConnectedDrive services.
- Cellular network reception.
- ▷ The ignition is switched on.

#### **Starting Roadside Assistance**

If the vehicle is equipped with Teleservices, support is offered through Teleservice Diagnosis. Via iDrive:

- 1. "ConnectedDrive"
- 2. "BMW Assist"
- 3. "BMW Roadside Assistance"

The contact to the Roadside Assistance of the manufacture is established.

A telephone number is displayed, if needed. Select to dial the telephone number on a connected mobile phone.

#### **Teleservice Diagnosis**

Teleservice Diagnosis enables the wireless transmission of detailed vehicle data that is important for vehicle diagnosis. This data is transmitted automatically.

#### **Starting Teleservice Help**

Depending on the country, the Teleservice Help enables a more in-depth diagnosis of the vehicle via wireless transmission.

You can launch Teleservice Help by requesting it through the Service Specialist.

- 1. Park the vehicle in a safe place.
- 2. Set the parking brake.
- 3. Control Display is switched on.
- 4. "Teleservice Help"

The driving ability of the vehicle can be restored for specific functions.

If this is not possible, further measures will be initiated, for instance Roadside Assistance will be informed.

## **Emergency Request**

#### Intelligent emergency call

#### Concept

In case of an emergency, an Emergency Request can be triggered automatically by the system or manually.

Intelligent emergency call establishes a connection with the BMW Response Center.

#### **General information**

Only press the SOS button in an emergency.

For technical reasons, the Emergency Request cannot be guaranteed under unfavorable conditions.

#### **Overview**



SOS button in the roofliner.

#### **Functional requirements**

- > The Assist system is functional.
- ▷ The ignition is switched on.
- If the vehicle is equipped with intelligent emergency call: the SIM card integrated in the vehicle has been activated.

#### **Automatic triggering**

Under certain conditions, for instance if the airbags trigger, an Emergency Request is automatically initiated immediately after an accident of corresponding severity. Automatic Collision Notification is not affected by pressing the SOS button.

#### **Manual triggering**

- 1. Touch the cover.
- 2. Press and hold the SOS button until the LED on the button illuminates green.
- The LED is illuminated green when an Emergency Request has been initiated.

If a cancel prompt appears on the Control Display, the Emergency Request can be aborted.

If the situation allows, wait in your vehicle until the voice connection has been established.

The LED flashes green when a connection to the BMW Response Center has been established. The BMW Response Center then makes contact with you and takes further steps to help you.

Even if you are unable to respond, the BMW Response Center can take further steps to help you under certain circumstances.

For this, data is transmitted to the BMW Response Center which serves to determine the necessary rescue measures. E.g., the current position of the vehicle, if it can be established.

Even if you can no longer hear the BMW Response Center through the loudspeakers, the BMW Response Center may still be able to hear you.

The BMW Response Center ends the Emergency Request.

### **Jump-starting**

#### **General information**

If the battery is discharged, the engine can be started using the battery of another vehicle and two jumper cables. Only use jumper cables with fully insulated clamp handles.

#### **Safety information**

#### 🛆 DANGER

Contact with live components can lead to an electric shock. There is a risk of injuries or danger to life. Do not touch any components that are under voltage.

#### \land WARNING

If the jumper cables are connected in the incorrect order, sparking may occur. There is a risk of injury. Pay attention to the correct order during connection.

#### 🛆 ΝΟΤΙCΕ

In the case of body contact between the two vehicles, a short circuit can occur during jumpstarting. There is a risk of damage to property. Make sure that no body contact occurs.

#### Preparation

- 1. Check whether the battery of the other vehicle has a voltage of 12 volts. The voltage information can be found on the battery.
- 2. Switch off the engine of the assisting vehicle.
- Switch off any electronic systems/power consumers in both vehicles.

#### **Starting aid terminals**



The starting aid terminal in the engine compartment acts as the battery's positive terminal.

Open the cover of the starting aid terminal.



The body ground or a special nut acts as the battery negative terminal.

#### **Connecting the cables**

To prevent personal injury or damage to both vehicles, adhere strictly to the following procedure.

- 1. Pull off the lid of the BMW starting aid terminal.
- 2. Attach one terminal clamp of the positive jumper cable to the positive terminal of the battery, or to the corresponding starting aid terminal of the vehicle providing assistance.
- Attach the terminal clamp on the other end of the cable to the positive terminal of the battery, or to the corresponding starting aid terminal of the vehicle to be started.
- Attach one terminal clamp of the negative jumper cable to the negative terminal of the battery, or to the corresponding engine or body ground of assisting vehicle.
- Attach the second terminal clamp to the negative terminal of the battery, or to the corresponding engine or body ground of the vehicle to be started.

#### Starting the engine

Never use spray fluids to start the engine.

- 1. Start the engine of the assisting vehicle and let it run for several minutes at an increased idle speed.
- 2. Start the engine of the vehicle that is to be started in the usual way.

If the first starting attempt is not successful, wait a few minutes before making another attempt in order to allow the discharged battery to recharge.

- 3. Let both engines run for several minutes.
- 4. Disconnect the jumper cables in the reverse order.

Check the battery and recharge, if needed.

### **Tow-starting and towing**

#### **Safety information**

#### 🛆 WARNING

Due to system limits, individual functions can malfunction during tow-starting/towing with the Intelligent Safety systems activated. There is a risk of an accident. Switch all Intelligent Safety systems off prior to tow-starting/towing.

#### **Manual transmission**

#### Towing or pushing the vehicle

A broken-down vehicle can be towed or pushed.


Roll or push, refer to page 111, the vehicle.

Follow the following instructions:

- Make sure that the ignition is switched on; otherwise, the low beams, tail lights, turn signals, and wipers may be unavailable.
- Do not tow the vehicle with the rear axle tilted, as the front wheels could turn.
- When the engine is stopped, there is no power assist. Consequently, more force needs to be applied when braking and steering.
- Larger steering wheel movements are required.
- The towing vehicle must not be lighter than the vehicle being towed; otherwise, it will not be possible to control the vehicle's response.
- Do not exceed a towing speed of 30 mph/50 km/h.
- Do not exceed a towing distance of 30 miles/50 km.

#### **Tow truck**

#### With rear-wheel drive

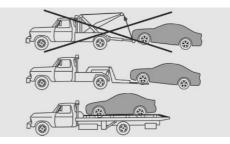

Your vehicle should be transported with a tow truck with a so-called lift bar or on a flat bed.

#### A NOTICE

The vehicle can become damaged when lifting and securing it.

There is a risk of damage to property.

- ▷ Lift the vehicle using suitable means.
- Do not lift or secure the vehicle by its tow fitting, body parts, or suspension parts.

# M double-clutch transmission: transporting the vehicle

#### **General information**

The vehicle is not permitted to be towed.

#### **Safety information**


#### A NOTICE

The vehicle can be damaged when towing the vehicle with a single lifted axle. There is a risk of damage to property. The vehicle should only be transported on a loading platform.

#### **Pushing the vehicle**

To remove a broken-down vehicle from the danger area, it can be pushed for a short distance. Roll or push, refer to page 113, the vehicle.

#### **Tow truck**

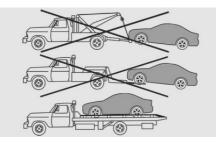

The vehicle should only be transported on a loading platform.

#### Δ ΝΟΤΙCE

The vehicle can become damaged when lifting and securing it.

There is a risk of damage to property.

- ▷ Lift the vehicle using suitable means.
- Do not lift or secure the vehicle by its tow fitting, body parts, or suspension parts.

#### **Towing other vehicles**

#### **General information**

Switch on the hazard warning system, depending on local regulations.

If the electrical system has failed, clearly identify the vehicle being towed by placing a sign or a warning triangle in the rear window.

#### **Safety information**

#### 🛆 WARNING

If the approved gross vehicle weight of the towing vehicle is lighter than the vehicle to be towed, the tow fitting can tear off or it will not be possible to control the vehicle's response. There is a risk of an accident. Make sure that the gross vehicle weight of the towing vehicle is heavier than the vehicle to be towed.

#### 

If the tow bar or tow rope is attached incorrectly, damage to other vehicle parts can occur. There is a risk of damage to property. Correctly attach the tow bar or tow rope to the tow fitting.

#### Tow bar

The tow fittings used should be on the same side on both vehicles.

Should it prove impossible to avoid mounting the tow bar at an offset angle, please follow the following:

- Maneuvering capability is limited going around corners.
- The tow bar will generate lateral forces if it is secured with an offset.

#### Tow rope

When starting to tow the vehicle, make sure that the tow rope is taut.

Use nylon ropes or straps, which will enable the vehicle to be towed without jerking.

#### **Tow fitting**

#### **General information**



The screw-in tow fitting should always be carried in the vehicle.

The tow fitting can be screwed in at the front or rear of the vehicle.

The tow fitting and the onboard vehicle tool kit, refer to page 238, are together in the cargo area.

Use of the tow fitting:

- Use only the tow fitting provided with the vehicle and screw it all the way in.
- Use the tow fitting for towing on paved roads only.
- Avoid lateral loading of the tow fitting, for instance do not lift the vehicle by the tow fitting.

#### **Safety information**

#### A NOTICE

If the tow fitting is not used as intended, there may be damage to the vehicle or to the tow fitting. There is a risk of damage to property. Follow the notes on using the tow fitting.

#### Screw thread for tow fitting



Press on the mark on the edge of the cover to push it out.

### **Tow-starting**

#### M double-clutch transmission

Do not tow-start the vehicle.

Tow-starting the engine is not possible due to the M double-clutch transmission.

Have the reasons for the starting difficulties corrected by a dealer's service center or another qualified service center or repair shop.

#### Manual transmission

If possible, do not tow-start the vehicle but start the engine by jump-starting, refer to page 246. If the vehicle is equipped with a catalytic converter, only tow-start while the engine is cold.

- 1. Switch on the hazard warning system and comply with local regulations.
- 2. Switch on the ignition, refer to page 100.
- 3. Engage third gear.
- 4. Have the vehicle tow-started with the clutch pedal pressed and slowly release the pedal. After the engine starts, immediately press on the clutch pedal again.
- 5. Stop at a suitable location, remove the tow bar or rope, and switch off the hazard warning system.
- 6. Have the vehicle checked by a dealer's service center or another qualified service center or repair shop.

#### MOBILITY 🚍

## Care

# Vehicle features and options

This chapter describes all standard, country-specific and optional features offered with the series. It also describes features that are not necessarily available in your vehicle, e. g., due to the selected options or country versions. This also applies to safety-related functions and systems. When using these functions and systems, the applicable laws and regulations must be observed.

## Washing the vehicle

#### **General information**

Regularly remove foreign objects such as leaves in the area below the windshield when the hood is raised.

Wash your vehicle frequently, particularly in winter. Intense soiling and road salt can damage the vehicle.

## Steam blaster and high-pressure washer

#### Safety information

#### 

When cleaning with high-pressure washers, components can be damaged due to the pressure or temperatures being too high. There is a risk of damage to property. Maintain sufficient distance and do not spray too long continuously. Follow the operating instructions for the high-pressure washer.

#### **Distances and temperature**

- ▷ Maximum temperature: 140 °F/60 °C.
- Minimum distance from sensors, cameras, seals: 12 inches/30 cm.
- Minimum distance from glass sunroof: 31.5 in/80 cm.

#### Automatic vehicle washes

#### **Safety information**

#### 

Water can penetrate in the windshield area due to high-pressure washers. There is a risk of damage to property. Avoid high-pressure washers.

#### \Lambda NOTICE

Improper use of automatic vehicle washes can cause damage to the vehicle. There is a risk of damage to property. Follow the following instructions:

- Give preference to cloth vehicle washes or those that use soft brushes in order to avoid paint damage.
- Avoid vehicle washes with guide rails higher than 4 in/10 cm to avoid damage to the chassis.
- Observe the tire width of the guide rail to avoid damage to tires and rims.
- Fold in exterior mirrors to avoid damage to the exterior mirrors.
- Deactivate the wiper and, if necessary, rain sensor to avoid damage to the wiper system.

## Driving into a vehicle wash with a manual transmission

In a vehicle wash, the vehicle must be able to roll freely.

Roll or push the vehicle, refer to page 111.

# Driving into a vehicle wash with an M double-clutch transmission with Drivelogic

#### Safety information

#### A NOTICE

Selector lever position P is automatically engaged when the ignition is switched off. There is a risk of damage to property. Do not switch ignition off in vehicle washes.

#### **General information**

In a vehicle wash, the vehicle must be able to roll freely.

Roll or push the vehicle, refer to page 113.

#### Driving out of a vehicle wash

Make sure that the remote control is in the vehicle.

Start the engine. Starting the engine, refer to page 101.

#### Headlights

Do not rub wet headlights dry and do not use abrasive or acidic cleaning agents.

Soak areas that have been dirtied, for instance from insects, with shampoo and wash off with water.

Thaw ice with de-icing spray; do not use an ice scraper.

#### After washing the vehicle

After washing the vehicle, apply the brakes briefly to dry them; otherwise, braking action can

be reduced. The heat generated during braking dries brake discs and brake pads and protects them against corrosion.

Completely remove all residues on the windows, to minimize loss of visibility due to smearing and to reduce wiper noises and wiper blade wear.

### Vehicle care

#### Vehicle care products

#### **General information**

BMW recommends using vehicle care and cleaning products from BMW. Suitable care products are available from a dealer's service center or another qualified service center or repair shop.

#### **Safety information**

#### 🛆 WARNING

Cleansers can contain substances that are dangerous and harmful to your health. There is a risk of injury. When cleaning the interior, open the doors or windows. Only use products intended for cleaning vehicles. Follow the instructions on the container.

#### Vehicle paint

#### **General information**

Regular care contributes to driving safety and value retention. Environmental influences in areas with elevated air pollution or natural contaminants, such as tree resin or pollen can affect the vehicle's paintwork. Tailor the frequency and extent of your vehicle care to these influences.

Aggressive substances such as spilled fuel, oil, grease or bird droppings, must be removed immediately to prevent the finish from being altered or discolored.

### **Safety information**

### 🛆 WARNING

Improperly performed work on the vehicle paint can lead to a failure or malfunction of the radar sensors and thereby result in a safety risk. There is a risk of accidents or risk of damage to property. Have paintwork or paintwork repairs on bumpers of vehicles with radar sensors performed by a dealer's service center or another qualified service center or repair shop only.

### Matte finish

Only use cleaning and care products suitable for vehicles with matte finish.

### Leather care

Remove dust from the leather regularly, using a cloth or vacuum cleaner.

Otherwise, particles of dust and road grime chafe in pores and folds, and lead to increased wear and premature degradation of the leather surface.

To guard against discoloration, such as from clothing, clean leather and provide leather care roughly every two months.

Clean light-colored leather more frequently because soiling on such surfaces is substantially more visible.

Use leather care products; otherwise, dirt and grease will gradually break down the protective layer of the leather surface.

### **Upholstery material care**

### **General information**

Vacuum the upholstery regularly with a vacuum cleaner.

If upholstery is very dirty, for instance with beverage stains, use a soft sponge or microfiber cloth with a suitable interior cleaner. Clean the upholstery down to the seams using large sweeping motions. Avoid rubbing the material vigorously.

### **Safety information**

### \land NOTICE

Open Velcro® fasteners on articles of clothing can damage the seat covers. There is a risk of damage to property. Ensure that any Velcro® fasteners are closed.

### **Caring for special components**

### Light-alloy wheels

When cleaning the vehicle, use only neutral wheel cleaners having a pH value from 5 to 9. Do not use abrasive cleaning agents or steam jets above 140 °F/60 °C. Follow the manufacturer's instructions.

Aggressive, acidic or alkaline cleaning agents can destroy the protective layer of adjacent components, such as the brake disc.

After cleaning, apply the brakes briefly to dry them. The heat generated during braking dries brake discs and brake pads and protects them against corrosion.

### **Chrome surfaces**

Carefully clean components such as the radiator grille or door handles with an ample supply of water, possibly with shampoo added, particularly when they have been exposed to road salt.

### **Rubber components**

Environmental influences can cause surface soiling of rubber parts and a loss of gloss. Use only water and suitable cleaning agents for cleaning.

Treat especially worn rubber parts with rubber care agents at regular intervals. When cleaning rubber seals, do not use any silicon-containing vehicle care products in order to avoid damage or noises.

#### **Fine wood parts**

Clean fine wood facing and fine wood components only with a moist rag. Then dry with a soft cloth.

#### **Plastic components**

### \Lambda NOTICE

Cleansers that contain alcohol or solvents, such as lacquer thinners, heavy-duty grease removers, fuel, or such, can damage plastic parts. There is a risk of damage to property. Clean with a microfiber cloth. Dampen cloth lightly with water.

Plastic components are e.g.:

- Imitation leather surfaces.
- Roofliner.
- ▶ Light lenses.
- Instrument cluster cover.
- Matt black spray-coated components.
- Painted parts in the car's interior.

Clean with a microfiber cloth.

Dampen cloth lightly with water.

Do not soak the roofliner.

#### Safety belts

### 🛆 WARNING

Chemical cleansers can destroy the safety belt webbing. Missing protective effect of the safety belts. There is a risk of injuries or danger to life. Use only a mild soapy solution for cleaning the safety belts.

Dirty belt straps impede the reeling action and thus have a negative impact on safety.

Use only a mild soapy solution, with the safety belts clipped into their buckles.

Safety belts should only be allowed to retract if they are dry.

### **Carpets and floor mats**

### \Lambda WARNING

Objects in the driver's floor area can limit the pedal distance or block a depressed pedal. There is a risk of an accident. Stow objects in the vehicle such that they are secured and cannot enter into the driver's floor area. Use floor mats that are suitable for the vehicle and can be safely attached to the floor. Do not use loose floor mats and do not layer several floor mats. Make sure that there is sufficient clearance for the pedals. Ensure that the floor mats are securely fastened again after they were removed, for instance for cleaning.

Floor mats can be removed from the car's interior for cleaning.

If the floor carpets are very dirty, clean with a microfiber cloth and water or a textile cleaner. To prevent matting of the carpet, rub back and forth in the direction of travel only.

#### **Sensor/camera lenses**

To clean sensors and camera lenses, use a cloth moistened with a small amount of glass detergent.

#### **Displays/screens**

### \land NOTICE

Chemical cleansers, moisture or fluids of any kind can damage the surface of displays and screens. There is a risk of damage to property. Clean with a clean, antistatic microfiber cloth.

### \land NOTICE

The surface of displays can be damaged with improper cleaning. There is a risk of damage to property. Avoid pressure that is too high and do not use any scratching materials. Clean with a clean, antistatic microfiber cloth.

### Long-term vehicle storage

When the vehicle is shut down for longer than three months, special measures must be taken. Further information is available from a dealer's service center or another qualified service center or repair shop.



## **REFERENCE**

Technical data	258
Appendix	260
Everything from A to Z	262

## **Technical data**

# Vehicle features and options

This chapter describes all standard, country-specific and optional features offered with the series. It also describes features that are not necessarily available in your vehicle, e. g., due to the selected options or country versions. This also applies to safety-related functions and systems. When using these functions and systems, the applicable laws and regulations must be observed.

### **General information**

The technical data and specifications in this Owner's Manual are used as guidance values. The vehicle-specific data can deviate from this, for instance due to the selected special equipment, country version or country-specific measurement method. Detailed values can be found in the approval documents, on labels on the vehicle or can be obtained from a dealer's service center or another qualified service center or repair shop.

### **Dimensions**

The dimensions can vary depending on the model version, equipment or country-specific measurement method.

The specified heights do not take into account attached parts, for instance a roof antenna, roof

racks or spoiler. The heights can deviate, for instance due to the selected special equipment, tires, load and chassis version.

BMW M2		
Width with mirrors	inches/mm	78.3/1,990
Width without mirrors	inches/mm	73/1,854
Height	inches/mm	55.5/1,410
Length	inches/mm	176.2/4,476
Wheelbase	inches/mm	106/2,693
Smallest turning radius diam.	ft/m	38.4/11.7

### Weights

M2 Competition		
Approved gross vehicle weight		
Manual transmission	lbs/kg	4,430/2,009
M double-clutch transmission	lbs/kg	4,430/2,009
Load	lbs/kg	720/327
Approved front axle load	lbs/kg	2,140/971
Approved rear axle load	lbs/kg	2,380/1,080
Approved roof load capacity	lbs/kg	165/75

### Capacities

	US gal/liters	Notes
Fuel tank, approx.	13.7/52.0	Fuel quality, refer to page 210.

## **Appendix**

Any updates to the Owner's Manual of the vehicle are listed here.

### Updates made after the editorial deadline

These chapters of the printed Owner's Manual contain updates made after the editorial dead-line.

▷ Information: Data storage, refer to page 11.

## **Everything from A to Z**

### Index

### A

ABS, Antilock Brake System 155 Acceleration Assistant, see Launch Control 115 Accessories and parts 10 Activated-charcoal filter 176 Activation times, parked-car ventilation 177 Active M differential 159 Adaptive brake lights, see Brake force display 153 Adaptive Light Control 133 Additives, engine oil types 232 After washing vehicle 252 Airbags 136 Airbags, indicator and warning light 137 Air circulation, see Recirculated-air mode 172, 175 Air conditioning 171, 174 Air, dehumidifying, see Air conditioning 171, 174 Air distribution, manual 172, 176 Air flow, air conditioner 172 Air flow, automatic climate control 175 Air pressure, tires 212 Air vents, see Ventilation 176 Alarm system 78 Alarm, unintentional 79 Alertness assistant 153 All-season tires, see Winter tires 217 Ambient light 135 Antifreeze, washer fluid 109 Antilock Brake System, ABS 155 Anti-slip control, see DSC 157 Anti-theft protection, lug bolts 224 Approach control warning with City light braking function 146 Approved axle load 259 Apps, see Owner's Handbook for Navigation, Entertainment. Communication 8 Arrival time 129

Ashtray 183 Assistance when driving off 160 AUTO intensity 175 Automatic climate control 170 Automatic climate control with enhanced features 173 Automatic Curb Monitor 93 Automatic deactivation, front-seat passenger airbags 138 Automatic headlight control 132 Automatic locking 78 Automatic recirculated-air control 175 Automatic vehicle wash 251 AUTO program, automatic climate control 174 AUTO program, climate control 171 AUTO program, intensity 175 Auto Start/Stop function 102 Auto washing 251 Average consumption 128 Average speed 128 Axle loads, weights 259

### В

Backrest curvature, see Lumbar support 85 Backrest, width 86 Band-aids, see First-aid kit 244 Battery replacement, vehicle battery 241 Battery replacement, vehicle remote control 68 Battery, vehicle 241 Being towed, see Tow-starting and towing 248 Belts, safety belts 87 Beverage holder, cup holder 190 Bluetooth connection 55 Blu-ray, see Owner's Handbook for Navigation, Entertainment, Communication 8 BMW Assist, see Owner's Manual for Navigation, Entertainment and Communication 8 BMW Homepage 8 BMW Internet page 8

Everything from A to Z

BMW maintenance system 236 BMW M technology 196 Bottle holder, see Cup holder 190 Brake assistant 155 Brake discs, break-in 197 Brake force display 153 Brake lights, brake force display 153 Brake pads, break-in 197 Braking, information 199 Breakdown assistance 244, 245 Break-in 197 Brightness of Control Display 52 Bulb replacement 238 Bulb replacement, front 239 Bulb replacement, rear 240 Bulbs and lights 238 Button, Start/Stop 100 Bypassing, see Jump-starting 246

### С

Calendar, see Owner's Handbook for Navigation, Entertainment, Communication 8 California Proposition 65 Warning 10 Calling up mirror adjustment 77 Calling up seat adjustment 77 Camera-based assistance systems, see Intelligent Safety 144 Camera lenses, care 254 Camera, rearview camera 167 Can holder, see Cup holder 190 Care, displays 254 Care, vehicle 252 Care, washing the vehicle 251 Cargo 201 Cargo area 186 Cargo area, enlarging 186 Cargo area, loading 202 Cargo area, storage compartments 191 Cargo, stowing and securing 202 Carpet, care 254 Catalytic converter, see Hot exhaust gas system 198 CBS Condition Based Service 236 Center armrest 190 Center console 36

Central Information Display (CID), see Control Display 40 Central locking system 70 Central screen, see Control Display 40 Changes, technical, see For Your Own Safety 9 Changing parts 238 Changing wheels 222 Changing wheels/tires 217 Chassis number, see Vehicle identification number 14 Check Control 117 Checking the oil level electronically 230 Children, seating position 95 Children, transporting safely 95 Child restraint system 95 Child restraint system LATCH 97 Child restraint systems, mounting 96 Child seat, mounting 96 Child seats 95 Chrome parts, care 253 Cigarette lighter 183 Cleaning, displays 254 Climate control 170, 173 Clothes hooks 191 Cockpit 34 Combination switch, see Turn signals 105 Combination switch, see Wiper system 106 Comfort Access 71 Compartments in the doors 189 Compass 181 Compatible devices, see Suitable devices 55 Compound brake 196 Compressor 218 Computer, see Onboard Computer 127 Concierge Service, see Owner's Handbook for Navigation, Entertainment, Communication 8 Condensation on windows 176 Condensation under the vehicle 200 Condition Based Service CBS 236 Confirmation signal 77 Connect device 54 ConnectedDrive, see Owner's Manual for Navigation, Entertainment and Communication 8 Connecting mobile phone 54 Connecting smartphone 54 Connecting telephone 54

#### Connections 54

Consumption, see Average consumption 128 Consumption, see Current consumption 123 Contacts, see Owner's Handbook for Navigation, Entertainment, Communication 8 Container for washer fluid 109 Control Display 40 Control Display, settings 50 Controller 40, 41 Control systems, driving stability 155 Convenient opening with the remote control 67 Coolant 234 Coolant temperature 121 Cooling, maximum 174 Cooling system 234 Corrosion on brake discs 200 Cosmetic mirror 183 Couple device, see Pair device 54 Courtesy lights during unlocking 67 Courtesy lights with the vehicle locked 67 Cruise control 161 Cruise control without distance control, see Cruise control 161 Cruising range 122 Cup holder 190 Current consumption 123

### D

Damage, tires 216 Data protection, settings 53 Data, technical 258 Date 51 Date display 122 Daytime running lights 133 DCC, see Cruise control 161 Defrosting, see Defrosting the windows 172 Defrosting, see Windows, defrosting 176 Defrosting the windows 172 Dehumidifying, air 171, 174 Deleting personal data 53 Deletion of personal data 53 Destination distance 129 Device list 54 Differential lock 159 Digital clock 122

Digital compass 181 Dimensions 258 Dimmable exterior mirrors 93 Dimmable interior mirror 94 Direction indicator, see Turn signals 105 Display lighting, see Instrument lighting 134 Displays, care 254 Disposal, coolant 235 Disposal, vehicle battery 242 Distance control, see PDC 163 Distance to destination 129 Divided screen view, split screen 39 Double-clutch transmission 111 Drivelogic 114 Drivelogic, gear display 122 Drive mode 112 Drive-off assistant 160 Drive-off assistant, see DSC 157 Driver assistance, see Intelligent Safety 144 Driver profiles 74 Driver profiles, exporting profiles 76 Driver profiles, importing profiles 76 Driving Assistant, see Intelligent Safety 144 Driving Dynamics Control 116 Driving dynamics systems 124 Driving dynamics, system states 124 Driving instructions, break-in 197 Driving notes, general 198 Driving on racetracks 196 Driving program, see Drivelogic 114 Driving stability control systems 155 Driving tips 198 DSC Dynamic Stability Control 157 DVD, Video, see Owner's Handbook for Navigation, Entertainment, Communication 8 Dynamic Stability Control DSC 157

### Е

EfficientDynamics 123 Electronic oil measurement 230 Electronic Stability Program ESP, see DSC 157 E-mail, see Owner's Handbook for Navigation, Entertainment, Communication 8 Emergency release, fuel filler flap 209 Emergency Request 245 Emergency service, see Breakdown assistance 245 Emergency unlocking, tailgate 74 Energy control 123 Energy recovery 123 Engine, automatic Start/Stop function 102 Engine, automatic switch-off 102 Engine compartment 227 Engine compartment, working in 228 Engine coolant 234 Engine oil 230 Engine oil, adding 231 Engine oil change 233 Engine oil filler neck 231 Engine oil temperature 128 Engine oil types to add 232 Engine start, jump-starting 246 Engine start, see Starting the engine 101 Engine stop 102 Engine temperature 128 Entering a destination, see Owner's Handbook for Navigation, Entertainment, Communication 8 Entering an address, navigation, see Owner's Manual for Navigation, Entertainment and Communication 8 Entering a vehicle wash 251 Equipment, interior 179 Error displays, see Check Control 117 ESP Electronic Stability Program, see DSC 157 Exchanging wheels/tires 217 Exhaust gas system 198 Exhaust, see Exhaust gas system 198 Exiting a vehicle wash 251 Exterior mirror, automatic dimming feature 93 Exterior mirrors 92 Exterior mirrors, malfunction 92 External start 246 External temperature display 121 External temperature warning 121

#### F

Failure message, see Check Control 117 False alarm, see Unintentional alarm 79 Fan, see Air flow 172, 175 Fastening safety belts, see Safety belts 87 Filler neck for engine oil 231 Finding charging stations, see Charging stations and points of interest, see Owner's Handbook for Navigation, Entertainment, Communication 8 Fine wood, care 254 First-aid kit 244 Flat tire, changing wheels 222 Flat tire message, FTM 144 Flat tire message, TPM 141 Flat Tire Monitor FTM 143 Flat tire, repairing 218 Flat tire, Tire Pressure Monitor TPM 139 Flat tire warning light, FTM 144 Flat tire warning light, TPM 141 Flooding 198 Floor carpet, care 254 Floor mats, care 254 Fogged up windows 172 Fold-away position, wiper 108 Fold back rear seat backrests 186 Foot brake 199 For Your Own Safety 9 Front airbags 136 Front lights 239 Front-seat passenger airbags, automatic deactivation 138 Front-seat passenger airbags, indicator light 139 FTM Flat Tire Monitor 143 Fuel 210 Fuel cap 208 Fuel filler flap 208 Fuel gauge 121 Fuel quality 210 Fuel recommendation 210 Fuel, tank capacity 259 Fuse 242

### G

Garage door opener, see Integrated Universal Remote Control 179 Gasoline 210 Gear change 113 Gear display, Drivelogic 122 Gear shift indicator 125 General driving notes 198 General settings 50 Glare shield 183 Glass sunroof, electric 81 Glass sunroof, initialize the system 82 Glove compartment 188 GPS geolocation, vehicle position 51 GPS, navigation, see Owner's Handbook for Navigation, Entertainment, Communication 8 Gross vehicle weight, approved 259 Ground clearance 200

### Н

Handbrake, see Parking brake 105 Hand-held transmitter, alternating code 180 Hands-free device, see Owner's Handbook for Navigation, Entertainment, Communication 8 Hazard warning flashers 244 Head airbags 136 Headlight control, automatic 132 Headlight courtesy delay feature 132 Headlight flasher 106 Headlight glass 239 Headlights 239 Headlights, care 252 Head restraints, front 89 Head restraints, rear 90 Heated steering wheel 94 Heavy cargo, stowing cargo 202 High-beam Assistant 133 High beams 106 High beams/low beams, see High-beam Assistant 133 Higher speed range 200 High-performance engine 196 Hills 199 Hill start assistant, see Drive-off assistant 160 Holder for beverages 190 Homepage 8 Hood 228 Horn 34 Hotel function, tailgate 74 Hot exhaust gas system 198

Hotline, see Owner's Handbook for Navigation, Entertainment, Communication 8 Hydroplaning 198

### 

Ice warning, see External temperature warning 121 Icy roads, see External temperature warning 121 Identification marks, tires 214 Identification number, see Vehicle identification number 14 iDrive 38 lanition off 100 Ignition on 100 Indicator and warning lights, see Check Control 117 Indicator light, see Check Control 117 Individual air distribution 172, 176 Individual settings, see Driver profiles 74 Individual settings, see M Drive 155 Inductive charging of a smartphone, see Wireless charging tray, see Owner's Manual for Navigation, Entertainment, Communication 8 Inflation pressure, tires 212 Inflation pressure warning, tires 143 Info Display, see Onboard Computer 127 Information 8 Initialize, Tire Pressure Monitor TPM 140 Initializing, Flat Tire Monitor FTM 144 Instrument cluster 117 Instrument lighting 134 Integrated key 70 Integrated Owner's Manual in the vehicle 62 Intelligent emergency call 245 Intelligent Safety 144 Intended use 9 Intensity, AUTO program 175 Interior equipment 179 Interior lights 134 Interior lights during unlocking 67 Interior lights with the vehicle locked 67 Interior mirror 92 Interior mirror, automatic dimming feature 94 Interior mirror, compass 181 Interior mirror, manually dimmable 93

Interior motion sensor 79 Internet connection 58 Internet hotspot 58 Internet page 8 Interval display, service requirements 124 Interval mode 107 In the vicinity of the center console 36 In the vicinity of the roofliner 37 In the vicinity of the steering wheel 34 IOM, see Integrated Owner's Manual in the vehicle 62

### J

Jacking points for the vehicle jack 225 Jam protection system, glass sunroof 81 Jam protection system, windows 80 Jump-starting 246

### Κ

Keyless Go, see Comfort Access 71 Key, mechanical 70 Key, see Remote control 66 Knee airbag 137

### L

Label on recommended tires 217 Lane departure warning 151 Lane threshold, warning 151 Language, on the Control Display 50 LATCH child restraint fixing system 97 Launch Control 115 Leather, care 253 LEDs, light-emitting diodes 239 Light 131 Light-alloy wheels, care 253 Light control 133 Light-emitting diodes, LEDs 239 Lighting 131 Light replacement 238 Light replacement, front 239 Light replacement, rear 240 Lights and bulbs 238 Light switch 131

List of all messages 52 Load 202 Loading 201 Location, vehicle position 51 Locking, automatic 78 Locking, settings 77 Low beams 131 Low beams, automatic, see High-beam Assistant 133 Lower back support 85 Low Speed Assistant 112 Lug bolt lock 224 Luggage rack, see Roof-mounted luggage rack 203 Lumbar support 85

### Μ

Maintenance 236 Maintenance requirements 236 Maintenance, service requirements 124 Maintenance system, BMW 236 Make-up mirror 183 Malfunction displays, see Check Control 117 Manual air distribution 172, 176 Manual air flow 172, 175 Manual operation, fuel filler flap 209 Manual operation, PDC Park Distance Control 165 Manual operation, rearview camera 167 Manual transmission 110 Map update, see Owner's Handbook for Navigation, Entertainment, Communication 8 Matte finish 253 Maximum cooling 174 Maximum speed, display 125 Maximum speed, winter tires 218 M Compound brake 196 M differential, active 159 MDM, M Dynamic Mode 158 M double-clutch transmission 111 M Drive 155 M Driver's Package, driving instructions 200 M Dynamic Mode MDM 158 Measurement, units of 51 Medical kit 244

Memory function 91 M Engine Dynamics Control 116 Menu in instrument cluster 126 Menus 42 Menus, operating, iDrive 38 Messages 52 Messages, see Check Control 117 Microfilter 173, 176 Minimum tread, tires 216 Mirror 92 Mirror, see Memory function 91 Mobile communication devices in the vehicle 198 Mobility System 218 Modifications, technical, see For Your Own Safety 9 Moisture in headlight 239 Monitor, see Control Display 40 Mounting of child restraint systems 96 MP3 player, see Audio, see Owner's Handbook for Navigation, Entertainment, Communication 8 M technology 196 Multifunction steering wheel, buttons 34 Multimedia, see Owner's Manual for Navigation, Entertainment and Communication 8 Music hard disk, see Owner's Handbook for Navigation, Entertainment, Communication 8

### Ν

Navigation, see Owner's Manual for Navigation, Entertainment and Communication 8 Neck restraints, front, see Head restraints 89 Neck restraints, rear, see Head restraints 90 Neutral cleaner, see Wheel cleaner 253 New wheels and tires 217 Notes, see Owner's Handbook for Navigation, Entertainment, Communication 8

### 0

OBD Onboard Diagnosis 237 OBD, see OBD Onboard Diagnosis 237 Obstacle marking, rearview camera 168 Octane rating, see Recommended fuel grade 211 Odometer 121 Office, see Owner's Manual for Navigation, Entertainment and Communication 8 Oil 230 Oil, adding 231 Oil change 233 Oil change interval, service requirements 124 Oil filler neck 231 Oil types to add, engine 232 Old batteries, disposal 242 Onboard Computer 127 Onboard literature, printed 62 Onboard vehicle tool kit 238 On-call service, see Breakdown assistance 245 Online Entertainment, see Owner's Handbook for Navigation, Entertainment, Communication 8 Opening and closing 66 Operating concept, iDrive 38 Operating via iDrive 42 Operating with the Controller 42 Operation via touchscreen 43 Optional equipment 9 Outside air, see Automatic recirculated-air control 175 Overheating of engine, see Coolant temperature 121 Owner's Manual media 62 Owner's Manual, printed 62

#### Ρ

Paint, vehicle 252 Pair device 54 Panic alarm, see Panic mode 78 Panic mode 78 Park Distance Control PDC 163 Parked-car ventilation 177 Parked vehicle, condensation 200 Parking aid, see PDC 163 Parking brake 105 Parking lights 131 Parts and accessories 10 Passenger's side mirror, tilting downward 93 Pathway lines, rearview camera 168 PDC Park Distance Control 163 Personal profile, see Driver profiles 74 Person warning with City light braking function 149 Plastic, care 254 Power failure 242 Power sunroof, glass 81 Power windows 80 Pressure, tires 212 Pressure warning, tires 143 Preventing Auto Start Stop 104 Printed onboard literature 62 Profiles, see Driver profiles 74 Programmable memory buttons, iDrive 45 Protective function, glass sunroof 81 Protective function, windows 80 Push-and-turn reel, see Controller 40, 41

### R

Racetrack operation 196 Radiator fluid 234 Radio-operated remote control, see Remote control 66 Radio-ready state 100 Radio, see Owner's Manual for Navigation, Entertainment and Communication 8 Rain sensor 107 Rear lights 240 Rear socket 185 Rearview camera 166 Rear window defroster 172, 176 Recirculated-air filter 176 Recirculated-air mode 172, 175 Recommended fuel grade 211 Recommended tire brands 217 Refueling 208 Remaining range 122 Remote control, additional 69 Remote control for audio, see Owner's Handbook for Navigation, Entertainment, Communication 8 Remote control, integrated key 70 Remote control, loss 69 Remote control, malfunction 69

Remote control, opening/closing 66 Remote control, universal 179 Remote services, app, see Owner's Handbook for Navigation, Entertainment, Communication 8 Replacing parts 238 Replacing wheels/tires 217 Reporting safety malfunctions 15 RES button, see Cruise control 161 Reserve warning, see Range 122 Reset, Tire Pressure Monitor TPM 140 Retreaded tires 217 Roadside Assistance, see Breakdown assistance 245 Roadside parking lights 131 Rolling code hand-held transmitter 180 RON recommended fuel grade 211 Roofliner 37 Roof load capacity 259 Roof-mounted luggage rack 203 Route, navigation, see Owner's Handbook for Navigation, Entertainment, Communication 8 RTTI, see Owner's Handbook for Navigation, Entertainment, Communication 8 Rubber components, care 253

### S

Safe braking 199 Safety belt reminder for driver's seat and front passenger seat 88 Safety belts 87 Safety belts, care 254 Safety systems, airbags 136 Saving fuel 204 Screen, see Control Display 40 Screwdriver, see Onboard vehicle tool kit 238 Sealant, see Mobility System 218 Seat heating, front 86 Seating position for children 95 Seat, see Memory function 91 Securing cargo 202 Selection list in instrument cluster 126 Selector lever 111 Selector lever position 111 Sensors, care 254

Sequential mode 112 Service and warranty 11 Service requirements, Condition Based Service CBS 236 Service requirements, display 124 Services, ConnectedDrive, see Owner's Manual for Navigation, Entertainment and Communication 8 Servotronic 159 SET button, see Cruise control 161 Settings, locking/unlocking 77 Settings, M Drive 155 Settings on the Control Display 50 Shift paddles on the steering wheel 114 Side airbags 136 Signaling, horn 34 Signals when unlocking 77 Sitting safely 83 Size 258 Slide/tilt glass roof 81 SMS, see Short messages, see Owner's Handbook for Navigation, Entertainment, Communication 8 SMS text message, supplementary 121 Snow chains 222 Socket 184 Socket, OBD Onboard Diagnosis 237 Software update 60 SOS button 245 Sound output, see Owner's Handbook for Navigation, Entertainment, Communication 8 Speed, average 128 Speed Limit Info 125 Speed limits, display 125 Speed warning 130 Split screen 39 Sport displays, torque display, performance display 129 Stability control systems 155 Standard equipment 9 Start/stop, automatic function 102 Start/Stop button 100 Starting the engine 101 Stations, AM/FM, see Owner's Handbook for Navigation, Entertainment, Communication 8 Status control display, tires 140

Status information, iDrive 39 Status of Owner's Manual 9 Status, vehicle 130 Steering assistance 159 Steering wheel, adjusting 94 Stopping the engine 102 Storage compartment in the rear 190 Storage compartments 188 Storage, tires 218 Storing the vehicle 255 Stowing and securing cargo 202 Suitable devices 55 Suitable mobile phones 55 Summer tires, tread 216 Sun visor 183 Supplementary Owner's Manuals 62 Supplementary SMS text message 121 Switch, see Cockpit 34 Symbols 8 System states of driving dynamics 124

### Т

Tachometer 121 Tailgate closing 74 Tailgate, emergency unlocking 74 Tailgate, hotel function 74 Tailgate opening 73 Tailgate via remote control 68 Tail lights 240 Technical changes, see For Your Own Safety 9 Technical data 258 Technology, BMW M 196 Telephone, see Owner's Manual for Navigation, Entertainment and Communication 8 Teleservices, see Owner's Handbook for Navigation, Entertainment, Communication 8 Television, TV, see Owner's Handbook for Navigation, Entertainment, Communication 8 Temperature, automatic climate control 171, 174 Temperature display for external temperature 121 Temperature, engine oil 128 Terminal, starting aid 247 Theft alarm system, see Alarm system 78

Everything from A to Z

Thigh support 85 Through-loading system 186 Tilt alarm sensor 79 Time 50 Time of arrival 129 Tire damage 216 Tire identification marks 214 Tire inflation pressure 212 Tire inflation pressure monitor, see FTM 143 Tire pressure 212 Tire Pressure Monitor TPM 139 Tire repair kit, see Mobility System 218 Tires, changing 217 Tire sealant, see Mobility System 218 Tires, everything on wheels and tires 212 Tire tread 216 Tone, see Owner's Manual for Navigation, Entertainment and Communication 8 Tool 238 Total vehicle weight 259 Touchpad 45 Touchscreen 43 Towina 248 Tow-starting 248 TPM Tire Pressure Monitor 139 Traffic bulletins, see Owner's Handbook for Navigation, Entertainment, Communication 8 Transmission, manual transmission 110 Transporting children safely 95 Tread, tires 216 Trip computer 129 Triple turn signal activation 106 Trip odometer 121 Trip recorder, see Trip odometer 121 Trunk, emergency unlocking 74 Turning radius lines, rearview camera 168 Turn signal, indicator light 120 Turn signals, operation 105 Turn signals, rear, bulb replacement 240 TV, see Owner's Handbook for Navigation, Entertainment, Communication 8

### U

Unintentional alarm 79 Units of measurement 51 Universal remote control 179 Unlocking, settings 77 Updates made after the editorial deadline 9 Upholstery care 253 USB connection 57 USB interface, position in vehicle 185 USB port, see USB interface 185 USE, intended 9 Using a smartphone via voice activation 47

### V

Vanity mirror 183 Vehicle battery 241 Vehicle battery, replacing 241 Vehicle, break-in 197 Vehicle care 252 Vehicle care products 252 Vehicle features and options 9 Vehicle identification number 14 Vehicle jack 225 Vehicle key, see Remote control 66 Vehicle paint 252 Vehicle position, vehicle location 51 Vehicle status 130 Vehicle storage 255 Vehicle wash 251 Vehicle, washing 251 Ventilation 176 Ventilation, see Parked-car ventilation 177 VIN, see Vehicle identification number 14 Voice activation system 47 Voice command response, see Owner's Handbook for Navigation, Entertainment, Communication 8

### W

Warning and indicator lights, see Check Control 117 Warning displays, see Check Control 117 Warning messages, see Check Control 117 Warning triangle 244 Warranty 10 Washer fluid 109 Washer nozzles, windshield 108

Washer system 106 Washing the vehicle 251 Water on roads 198 Weights 259 Welcome lights 132 Welcome lights during unlocking 67 Wheel cleaner 253 Wheels, changing 217 Wheels, everything on wheels and tires 212 Wheels, Flat Tire Monitor FTM 143 Wheels, Tire Pressure Monitor TPM 139 WiFi connection 58 Window defroster, rear 172 Windows, powered 80 Windshield washer fluid 109 Windshield washer nozzles 108 Windshield washer system 106 Windshield washer system, see Washer/wiper system 106 Windshield wiper, see Wiper system 106 Winter storage, care 255 Winter tires, suitable tires 217 Winter tires, tread 216 Wiper 106 Wiper blades, replacing 238 Wiper fluid 109 Wiper, fold-away position 108 Wiper system 106 Wireless charging of a smartphone, see Wireless charging tray, see Owner's Manual for Navigation, Entertainment, Communication 8 Wireless charging tray, see Owner's Manual for Navigation, Entertainment, Communication 8 Wood, care 254 Word match concept, navigation 38 Wrench, see Onboard vehicle tool kit 238



01402722869 ue

Online Edition for Part no. 01402722869 - VI/18

### California Proposition 65 Warning

### **California Proposition 65 Warning**

## 🔔 WARNING

Operating, servicing and maintaining a passenger vehicle or off-highway motor vehicle can expose you to chemicals including engine exhaust, carbon monoxide, phthalates, and lead, which are known to the State of California to cause cancer and birth defects or other reproductive harm. To minimize exposure, avoid breathing exhaust, do not idle the engine except as necessary, service your vehicle in a wellventilated area and wear gloves or wash your hands frequently when servicing your vehicle. For more information go to www.P65Warnings.ca.gov/passenger-vehicle.



The Ultimate Driving Machine®

### BMW DRIVER'S GUIDE

# **BMW DRIVER'S GUIDE APP.**

Your customized information about the vehicle in an app. Optimized for smartphones & tablets. Can be used offline.





01402722869 ue Online Edition for Part no. 01402722869 - VI/18